
Function Summary

| DC12V | | |
|--|--|--|
| switch control, no voltage output/15A | | |
| English, ESP, Chinese | | |
| (1) Balance (2) Remaining time | | |
| 3 types choose 1 | | |
| - Mode 1/Mode 2: 2 types pay | | |
| (1) Individual set up cost and time per Channel. | | |
| (2) Package pay: Unlimited use during setting time | | |
| - Mode 3: 1 price, runs preset time per channel and auto switch. | | |
| (1) Pause (2) Warning sound (3) Memory (4) output pulse | | |
| (5) back to standby automatically (6) connect buttons | | |
| 8 digits inbuilt counter per input | | |
| Output DC12V to indicate when run into warning time | | |
| Page 4/Page 5 | | |
| | | |

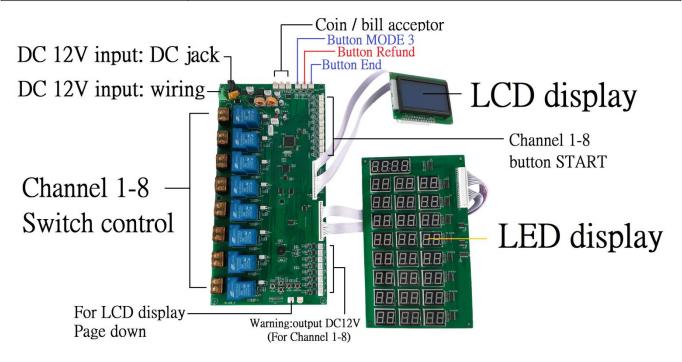

| Standby-English | Standby-Spanish | Setting video |
|---|--|---------------|
| Balance 0 1.00 H:00 M:00 S 2.00 H:00 M:00 S 3.00 H:00 M:00 S | El saldo 0 1.00 H:00 M:00 S 2.00 H:00 M:00 S 3.00 H:00 M:00 S | |

Working Mode

Mode 1:

(1) Machines CAN work at the same time if pay for each: Pay→Deposit to balance→Push button START of machine→ Charge, runs the time, and machine start working

Note:

If push button start of **working machine**, charge from balance and add time
If push button start of **standby machine**, charge and the machine start working

(2) Package Function:

Pay→Deposit to balance→Push button "PACKAGE" (light)→Push any button start of machine→charge and runs time→Push button start of standby machine→Switch to the machine (the machine start working, previous machine stop working)

Mode 2:

(1) Only 1 machine can work when time is running.
Pay→Deposit to balance→Push button START of machine→
Charge, runs the time, and the machine work start working

Note:

If push button start of **working machine**, charge from balance and add time If push button start of **standby machine**, **invalid action**User is unable to choose other machine unless all machine is standby

(2) Package Function: Same as "Package function of Mode 1".

Mode 3: Pay→Deposit to balance→Push Mode 3 button start→
Channel 1 to 8 runs time in a order, and Auto Switch to next channel
Note:


Time is not accumulated when it is running It Lights when balance is enough to start. It does not light during working

- Optional Button: Following buttons work the same function on every mode.
 - 1. **Pause**: Push this button→All machine stop working. Button light flashes→Push again→All machine continue working.
 - 2. End (no light): Push this button→Remove all running time, but keep balance
 - 3. **Refund**: Push this button→ pulse output balance
 - 4. Button START light: Flashes during warning time.

Lighting if device is working or available for use

| Video example: scan following QR code or click link | | | | |
|---|-------------|----------------|-------------|-----------------------|
| Mode 1 | Mode 2 | Button Package | Button END | LCD display page down |
| | | | | |
| <u>Link</u> | <u>Link</u> | <u>Link</u> | <u>Link</u> | <u>Link</u> |

Connector Description

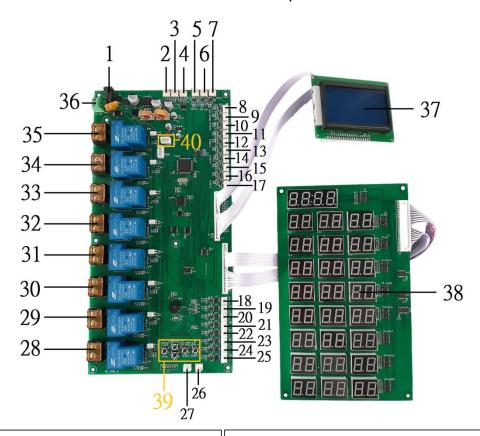

1: DC12V power input: DC Jack 5.5*2.5mm

2/3/4: Input 1/Input 2/Input 3

(Coin acceptor, bill acceptor.., etc)

5: Button mode 3 (For mode 3 only)

6: button refund (No.26 output pulse)

7: Button package (For mode 1 and 2)

8: Button end

9: Button pause

10-17: Button start of Machine 8-1

18-25: DC12V warning sign for machine 1-8

26: output pulse: DC12V, signal, GND

27: button "Next page" for LCD Display (36)

28-35: Switch control of machine 1 to 8

36: DC12V power input: wiring

37: LCD display (standby, setting show)

38: LED display (standby show)

39: Setting buttons

40: To PC USB

Connector Define

| 2/3/4/26 | 5/6/7 | 8-17 | 18-25 | 28-35 | 36 |
|---|--|--|--------------------|---|--------------------|
| 1 2 3 | 1 2 3 | 1 2 3 | • 1 • 2 | (1) Power Device (2) | • 1 • 2 |
| 1: DC+12V (Red) 2: Signal (White) 3: GND(Black) | 1: DC+5V (Red) 2: GND(Black) 3: Signal (White) | 1: DC+5V (Red) 2: GND(Black) 3: Signal (White) | 1: DC12V 2: GND | (1) Control N / - (2) L / + to power | 1: GND 2: DC12V |


Display and Setting specification

| Main menu | Sub-menu | Main menu | Sub-menu |
|-------------|--------------------------------|--------------|----------------------|
| Language | English / ESP / Chinese | Warning | 0 Second - 6 Minutes |
| Mode | Mode 1-1 / Mode1-1 / Mode2 | Back standby | 1-30 Minutes |
| Price | 1-200 (Channel 1-8) | Mode 3 | 1-200 (Price) |
| Time | 1S - 30H:59M:59S (Channel 1-8) | Momory | With memory |
| SET setting | 1S - 30H:59M:59S (Channel 1-8) | Memory | Without memory |

- Memory: (1) with Memory: continue working if power off and on
 - (2) without Memory: standby if power off and on
- Back to standby automatically:

if user has no action in setting time after inserting coins or pausing, it back to standby automatically.

Manual Set: Please use Connector No. 38 and follow above table to set up:

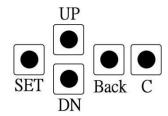

- 1. Enter to Main menu: Press "SET" when standby
- 2. Enter to Sub-menu: Press "UP" or "DN" to select on Main menu→Press "SET" to enter
- 3. Press "UP" or "DN" to adjust value and setting→Press "BACK" to save and back to Main menu Icon "^^" on the bottom indicates the one you are selecting When you set up time → Press "SET" to switch
- 4. Finish adjustment: Press "BACK" to save and back to previous screen show
- 5. **Check income:** Press "C"→input 1 income shows→Press "C"→input 2 income shows→Press "C"→input 3 income shows
- **6. Reset counter:** Hold on "C" for 3 seconds→Reset current input No. Record

Note: input income is reset separately

PC setting

● Connect USB to PC: Connect "No. 40" to PC→Open the software→ Choose "Port (1)"



- Change setting: connected→tick option and type in value→Click "Write (3)"
- Read control board setting: connected→Click "Write (2)"
- Screen shows "Write Successfully" if setting is changed.
- Screen shows "Read Successfully" if Read value successfully.

