 


JABBRE
BOSS

User Guide

 
 
Unit Body

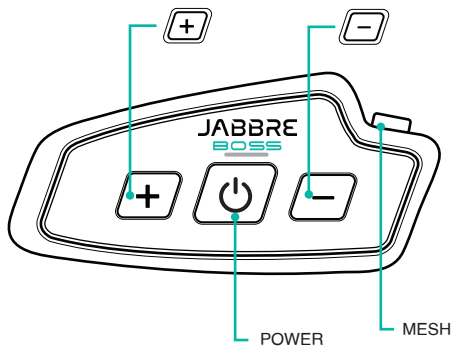

Installing




Method No.1

Use Double-Sided Tape to attach to the helmet, then hang the **JABBRE** BOSS on the clip.

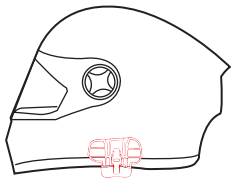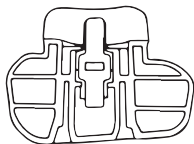


Method No.2

   Put the clip to your helmet, then hang the **JABBRE** BOSS on the clip.

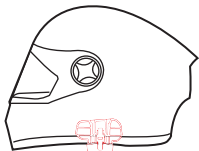

Power On / Off

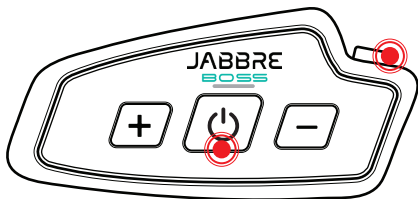 


PRESS FOR 1 SECOND



Pairing with Phone

A PAIRING WITH PHONE

 When the **JABBRE** is power off
BOSS

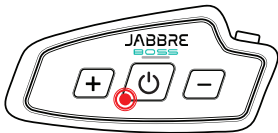


LONG PRESS FOR 5 SECONDS



= POWER

 B RECONNECT THE PHONE

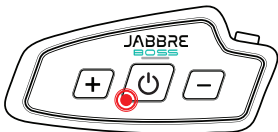

QUICK PRESS TWICE



= POWER

Turning Up / Down Volume

 
C TURN UP THE VOLUME



LONG PRESS




D TURN DOWN THE VOLUME



LONG PRESS



 E CLEAR THE PAIRING MEMORY




PRESS FOR 5 SECONDS



Answering / Ending Calls

 A ANSWER THE CALL




SHORT PRESS ONCE



= POWER

 B REJECT THE CALL




QUICK PRESS TWICE



= POWER

 C END THE CALL




SHORT PRESS ONCE



= POWER

Answering / Ending Calls

 D ANSWER THIRD CALL WHILE TALKING




QUICK PRESS TWICE



= POWER

 E REJECT THIRD CALL WHILE TALKING




QUICK PRESS TWICE



= " + "

 F VOICE DIAL




QUICK PRESS TWICE



= POWER

Music Control

 A MUSIC PLAY / PAUSE




QUICK PRESS TWICE



= POWER

 B NEXT SONG




QUICK PRESS TWICE



= " - "

 C LAST SONG



QUICK PRESS TWICE

 


= " + "

Music Control / Sharing

A TWO JABBRE BOSS MUSIC SHARING


DOUBLE PRESS THE MESH BUTTON OF TWO JABBRE BOSS,
THEY WILL CONNECT AND LISTEN TO THE SAME SONG.

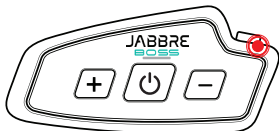

QUICK PRESS TWICE

 = MESH

 B DISCONNECT MUSIC SHARING

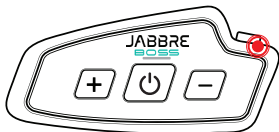


QUICK PRESS TWICE

 = MESH

FM Radio

 
A FM ON / OFF

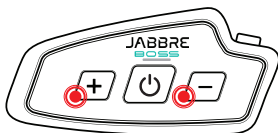

LONG PRESS 1 SECOND



 B UP / DOWN SEARCHING

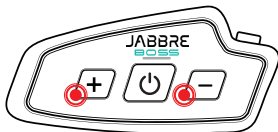


QUICK PRESS TWICE



Bluetooth Intercom

 
A BLUETOOTH INTERCOM PAIRING (2 Riders Connection)




LONG PRESS 2 SECONDS



 
B START INTERCOM MODE




LONG PRESS 1 SECOND

 

C END INTERCOM MODE

 

LONG PRESS 1 SECOND

 

Mesh Intercom

MESH TALK CHANNEL SETTING:

10 CHANNEL BE SWITCHED

 
A MESH TALK ON / OFF



SHORT PRESS ONCE

 = MESH


B ENTER CHANNEL SETTING MODE



LONG PRESS 2 SECONDS

 = MESH

 C ADJUST MESH CHANNEL



SHORT PRESS ONCE

 = MESH

Mesh Intercom

MESH TALK CHANNEL SETTING:

10 CHANNEL BE SWITCHED

D SAVE THE SETTING



LONG PRESS 2 SECONDS

 = MESH

 
E MESH STATE RESET



LONG PRESS 8 SECONDS

 = MESH
(use default channel 4)

F MESH VOLUME ADJUST



SHORT PRESS ONCE

 = "+" /  = "-"