



Installation Instructions For

2015+ Audi A4/A5 B9 2.0T (With MAF Sensor)

KIT CONTENTS

NO.	DESCRIPTION	QTY	
1	Silicone Tube	1	Please Check the Contacts of this box immediately. Report any defective or missing parts to us or our dealer that you purchased this product form. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory. Installing does require some mechanical skills. A qualified mechanic is always recommended. ※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot. MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.
2	Heat Shield	1	
3	Heat Shield Cover	1	
4	Air Filter 115/70mm	1	
5	M4 Bolt 8mm	5	
6	M4 Spring Washer	5	
7	M4 Washer	5	
8	M4 Bolt 10mm	2	
9	M6 Bolt	2	
10	M6 Washer	2	
11	M6 Spring Washer	2	
12	Heat Shield Mount	2	

*All installation of parts must be performed by a trained professional.





Figure 1: Stock factory airbox. 原廠引擎室



Figure 4: Remove the factory tube. 拆掉原廠管



Figure 2: Unclip the sensor. 鬆開感應器



Figure 5: Remove the factory airbox. 拆下原廠集氣箱



Figure 3: Loosen hose clamp from the factory tube.
從原廠管上鬆開軟管夾



Figure 6: Remove the MAF sensor from the factory airbox.
從原廠集氣箱中取出 MAF 感知器



Figure 7: Install MAF sensor on the heat shield.
將 MAF 感知器安裝在隔熱罩上



Figure 9: Secure with bolt.用螺栓固定



Figure 8: Install the heat shield mount(*2) in the rubber.
將隔熱罩安裝座 (*2) 安裝在橡膠中



Figure 11: Install the MST silicone tube.安裝MST矽膠管



Figure 9: Install the heat shield.安裝隔熱罩



Figure 12: Install the air filter.安裝空氣過濾器



Figure 13: Install the heat shield cover.安裝隔熱罩



Figure 14: Connect the MAF sensor.連接MAF感測器



Figure 15: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose. 恭喜！您剛剛完成了此進氣系統的安裝。定期檢查進氣口的對準情況，正常磨損會導致螺帽和螺栓鬆脫。