



Installation Instructions For 2017-2022 BMW F90 M5(S63 4.4L)

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	4" Adapter Tube	2
2	Heat Shield	2
3	Silicone Tube	2
4	Air Filter 100mm /145	2
5	Foam Pipe	2
6	Resistant Tie	4

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.原廠引擎室



Figure 4: Remove the wire clips.拆下線夾



Figure 2: Remove the engine compartment protective cover.拆下引擎室防護罩



Figure 5: Remove the stock strut bar.
拆下庫存支柱桿

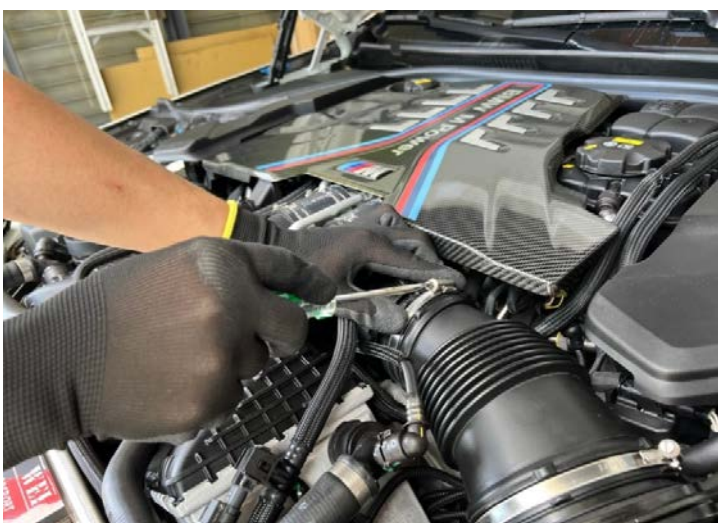


Figure 3: Loosen the stock tube hose clamp.
鬆開原廠管軟管夾



Figure 6: Remove the stock air box.拆下原廠集氣箱

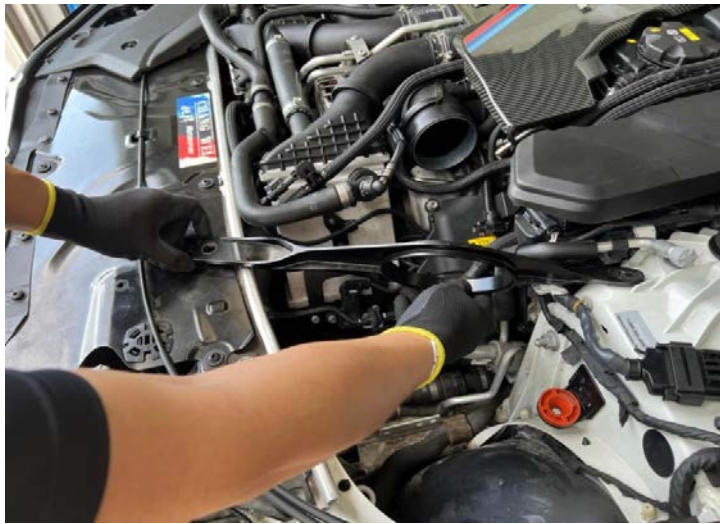


Figure 7: Re-install the stock strut bar.
重新安裝原廠支柱桿



Figure 10: Install the MST silicone tube.安裝MST矽膠管



Figure 8: Use foam pipe to protect hot water tube.
使用泡沫管保護熱水管



Figure 11: Tight the clamps.擰緊夾子



Figure 9: Install the heatshield x 2.安裝隔熱罩 x 2



Figure 12: Install the MST adapter x 2.
(can use some oil)
安裝 MST 轉接器 x 2。(可用點油)



Figure 13: Tight the clamps.擰緊夾子



Figure 16: Remove the stock air scoop.
拆下原廠空氣勺



Figure 14: Install the MST filter.安裝MST高流量濾芯



Figure 15: Remove the grille.拆下格柵



Figure 17: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.
恭喜！您剛剛完成了此進氣系統的安裝。定期檢查進氣口的對準情況，正常磨損會導致螺帽和螺栓鬆動