



Installation Instructions For 2019+ FORD FOCUS MK4 1.5T

KIT CONTENTS

NO.	DESCRIPTION	QTY	
1	Intake Pipe	1	Please Check the Contacts of this box immediately. Report any defective or missing parts to us or our dealer that you purchased this product form. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory. Installing does require some mechanical skills. A qualified mechanic is always recommended. ※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot. MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.
2	Heat Shield	1	
3	Heat Shield Cover	1	
4	M4 Bolt	12	
5	M4 Spring Washer	12	
6	M4 Washer	12	
7	M6 Bolt	1	
8	M6 Washer	1	
9	M8 Bolt	2	
10	M8 Nut	2	
11	M8 Washer	4	
12	Silicone Hose	1	
13	Clamps	2	
14	Air Filter 89/115mm	1	
15	Aluminum Mount	1	

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.
這是原廠集氣箱



Figure 4: Loosen stock air box cover spring.
鬆開原裝空氣箱蓋彈簧



Figure 2: Remove the stock hose.
拆下原廠軟管



Figure 5: Install the bracket on the heat shield.
將支架安裝在隔熱罩上



Figure 3: Disconnect the air temperature sensor.
斷開空氣溫度傳感器



Figure 6: Install the bracket on the heat shield.
將支架安裝在隔熱罩上



Figure 7: Install the bracket and mount on the heat shield.

安裝支架並安裝在隔熱罩上



Figure 10: Install the silicone hose.

安裝矽膠管



Figure 8: Install the heat shield.

安裝隔熱罩



Figure 11: Install the air pipe.

安裝鋁管



Figure 9: Install the air tempure sensor.

安裝空氣溫度傳感器



Figure 12: Install air filter.

安裝高流量濾芯



Figure 13: Install the heat shield cover and secure with bolt. 安裝隔熱罩蓋並用螺栓固定



Figure 14: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

恭喜！您剛剛完成了該進氣系統的安裝。定期檢查進氣口的對齊情況，正常磨損會導致螺母和螺栓鬆動

