 


Installation Manual

P100

Height Adjustable Mobile TV Stand 65" - 90"

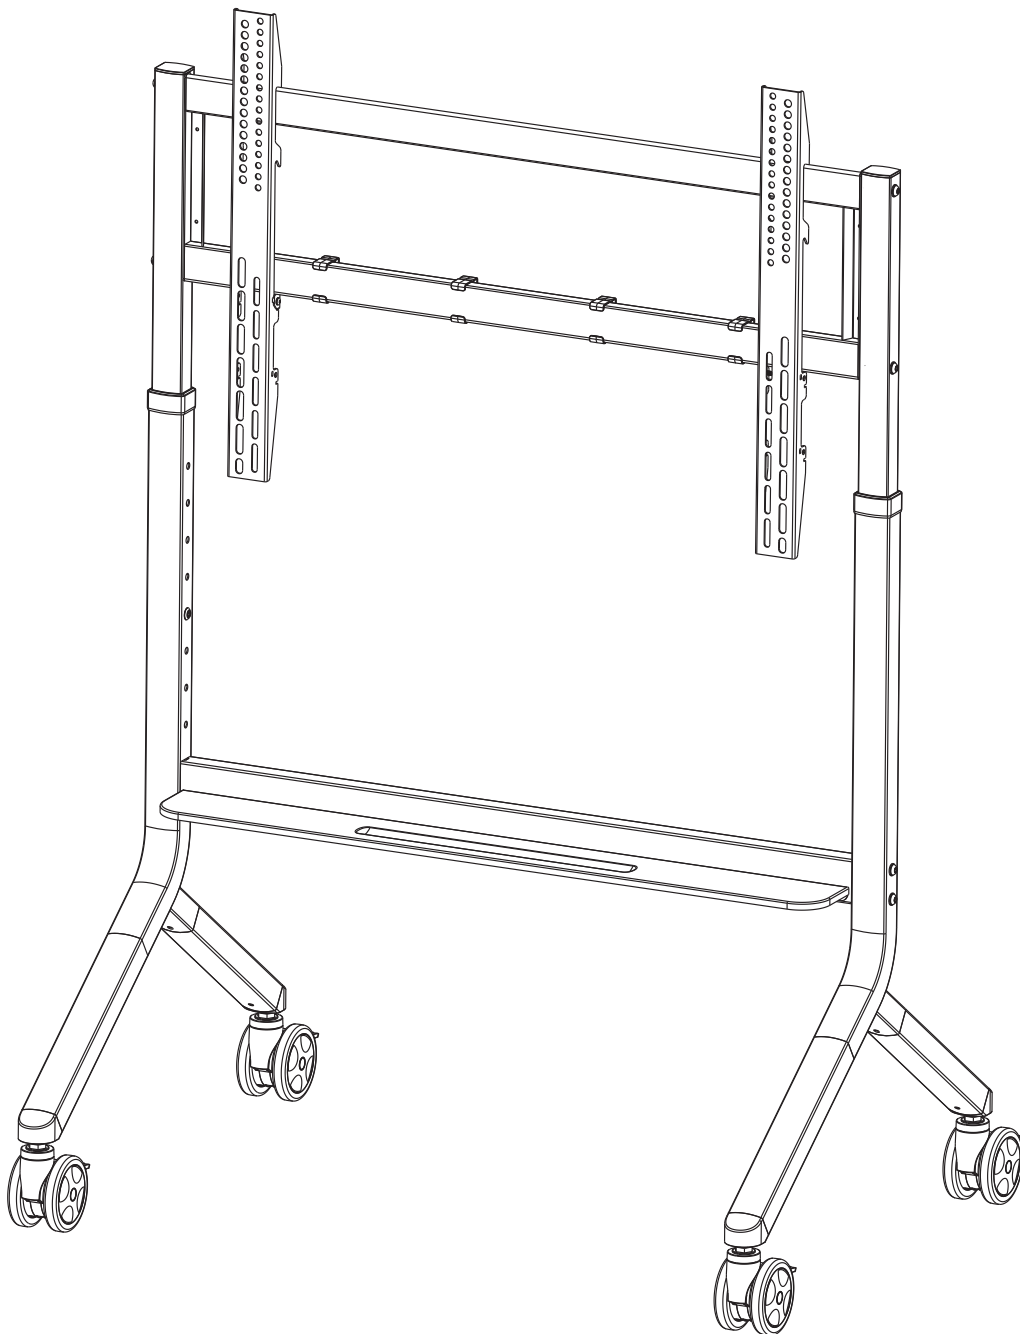

Contents








	Page
Product Technical Specification	4
Legs and Uprights Assembly	5
Height Adjustment	6
Tray and Crossbar Assembly	7
Pillars and Crossbar Assembly	8
TV Plate Installation	9
VESA Mounting Patterns	10
VESA Rails and TV Assembly	11
Mounting TV onto Cart	12
Cable Management	13

Important Safety Information

Important Safety Instructions & Assembly Guide

- Please read and understand all instructions and safety information provided before starting the installation process. Improper installation or assembly may result in personal injury or property damage.
- This product is compatible with most 65"-90" TVs. The maximum display weight is 150 lbs (68.2 kg), and the maximum AV shelf weight is 10 lbs (4.5 kg). Using products that exceed these weight limits may cause instability and lead to potential injury.
- Do not install or assemble if any part of the product or hardware is damaged or missing. For replacement parts, contact your local distributor. If you have any questions or concerns regarding the instructions, please consult a qualified local installer.
- This product is intended for indoor use only. Securely tighten all assembly screws, but avoid over-tightening. We disclaim all liability for damages or injuries resulting from modifications, improper installation, incorrect assembly, or inappropriate use.
- Center the VESA adapter bracket vertically on the back of the screen and align the TV to the central position for optimal stability.
- Install and use the product only on a flat, hard, and level surface to prevent tipping. Lock the casters to secure the unit in place and unlock them when 360-degree mobility is required.
- This product contains moving parts and small components. Keep children away from the product to avoid tipping hazards or risk of choking. Using a tip-over restraint or anchoring the stand to the wall may reduce - but not eliminate - the risk of tipping. Continuous adult supervision is necessary.
- Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.
- Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child.

       Part List

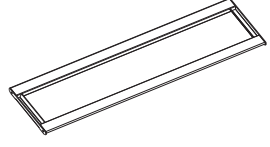A  1X	B  1X	C  4X	D  1X
E  1X	F  1X	G  1X	H  1X
J  4X	K  4X	L  2X	

Hardware Kit


Screws for Cart Assembly (Black Color)

M  M8x60mm 8x	N  M6x10.5mm 8x	O  Ø8.2x1.2mm 8x	P  5mm 1x	Q  M5x10mm 6x	R  M6x20mm 2x
---	---	--	---	---	---





Screws for Screen Assembly (Silver Color)

S  M10x15mm 4x	T  M8x25mm 4x	U  M6x25mm 4x	V  M5x25mm 4x	W  Ø6.2mm x1.5mm 4x	X  Ø8.2mm x10mm 4x
--	---	---	---	---	--

 Manual


 Tightening	 Loosening	 Philips Screwdriver	 Tape Measure	 Adjustment	 By Hand	 Hex Wrench	 + Tightening - Loosening
---	--	---	---	---	---	---	--

    Product Technical Specification

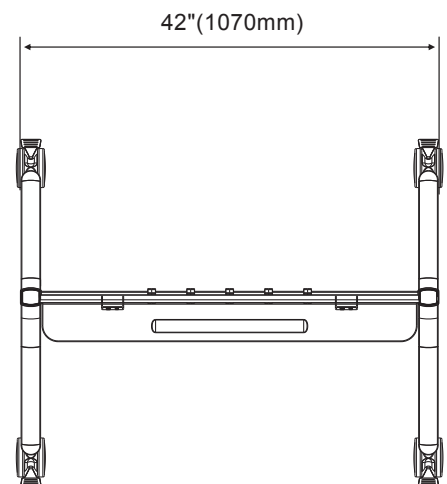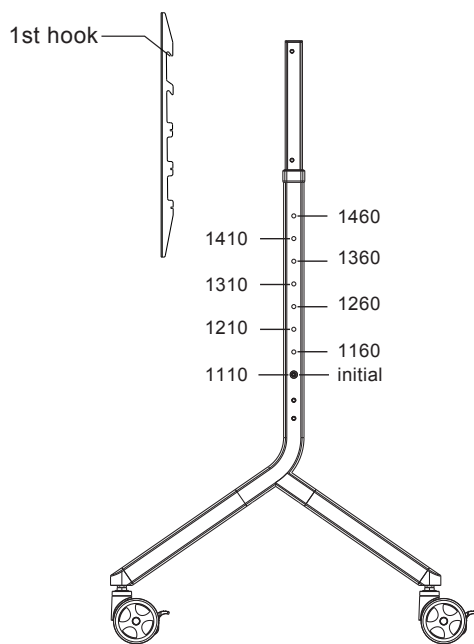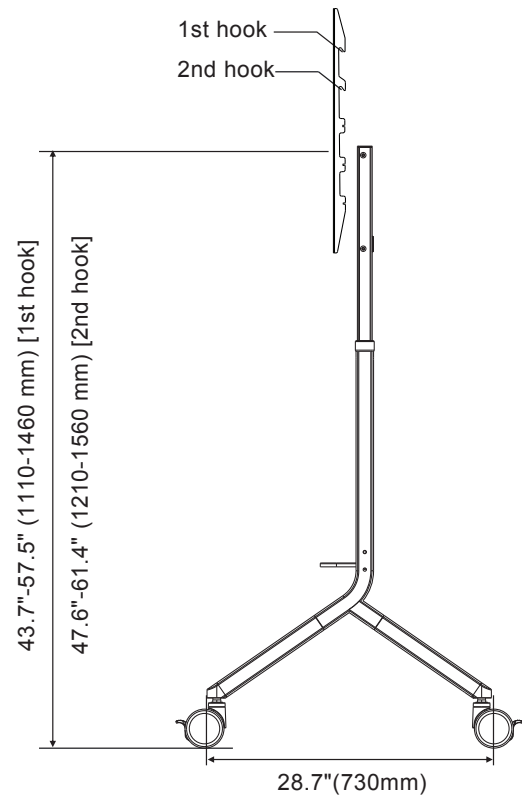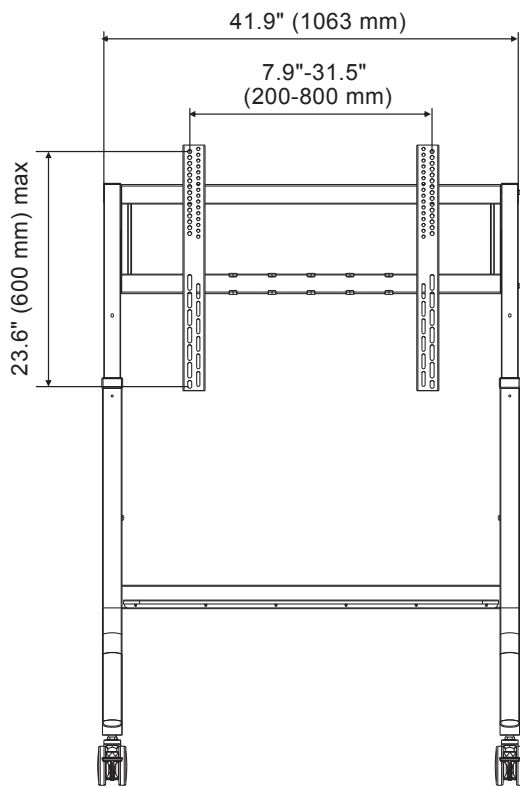


Legs and Uprights Assembly

 1

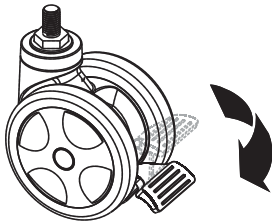


Brake the castor before assembly

 2

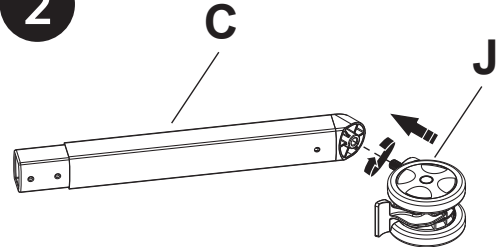


Fix the casters by tightening screws

 3

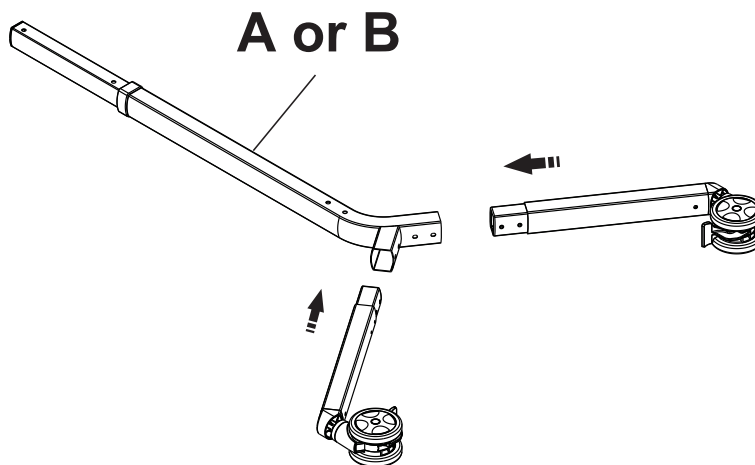



4

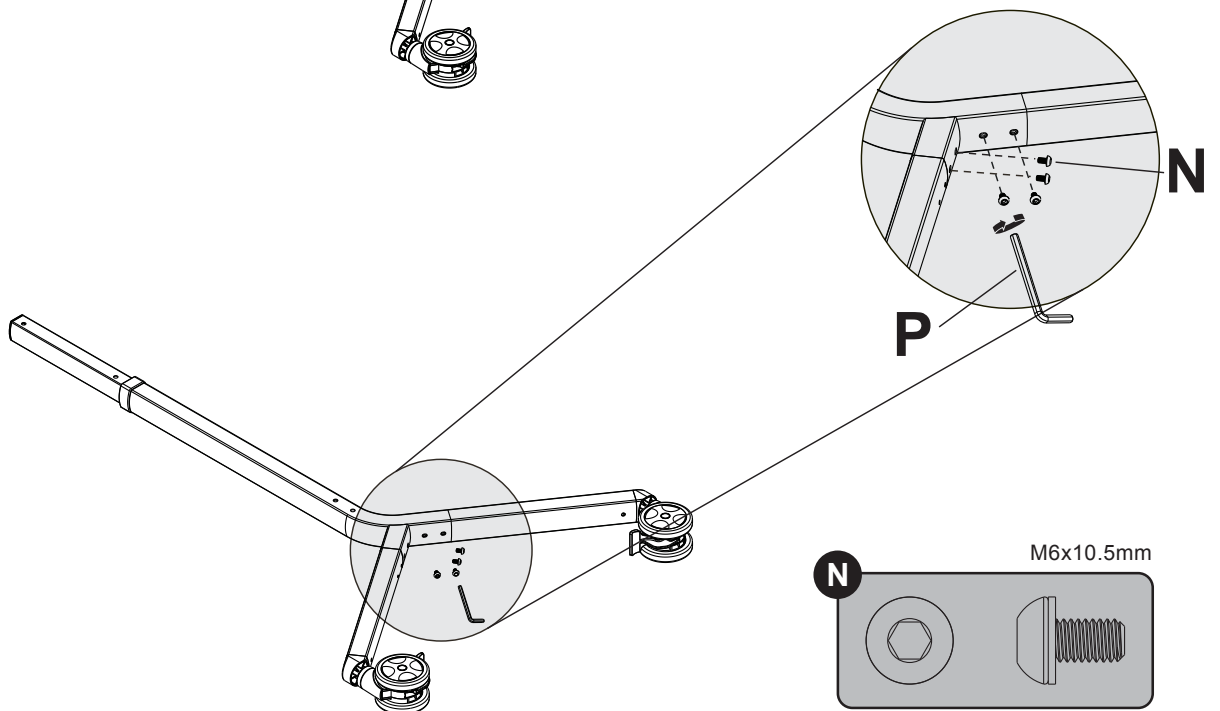 

M6x10.5mm

1:1 Diagram

  Height Adjustment

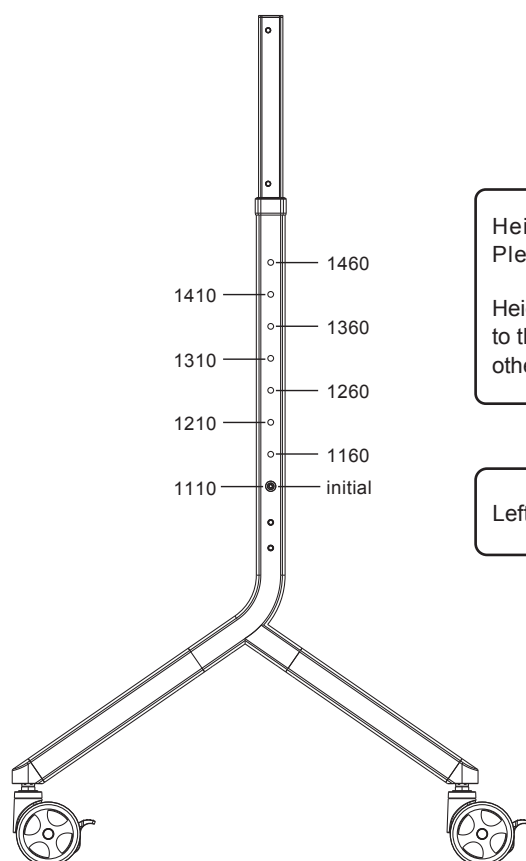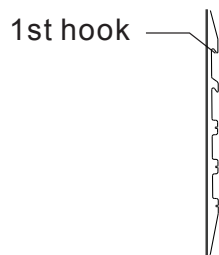

Height is set at initial position.
Please adjust to desired height for your use.


Heights in diagram indicate the distance from floor to the center of TV, when VESA on TV is in center, otherwise, height for reference only.

Left and right pillars must be set at the same height.


5

Ensure the screws are secured firmly after height is set.



 
6

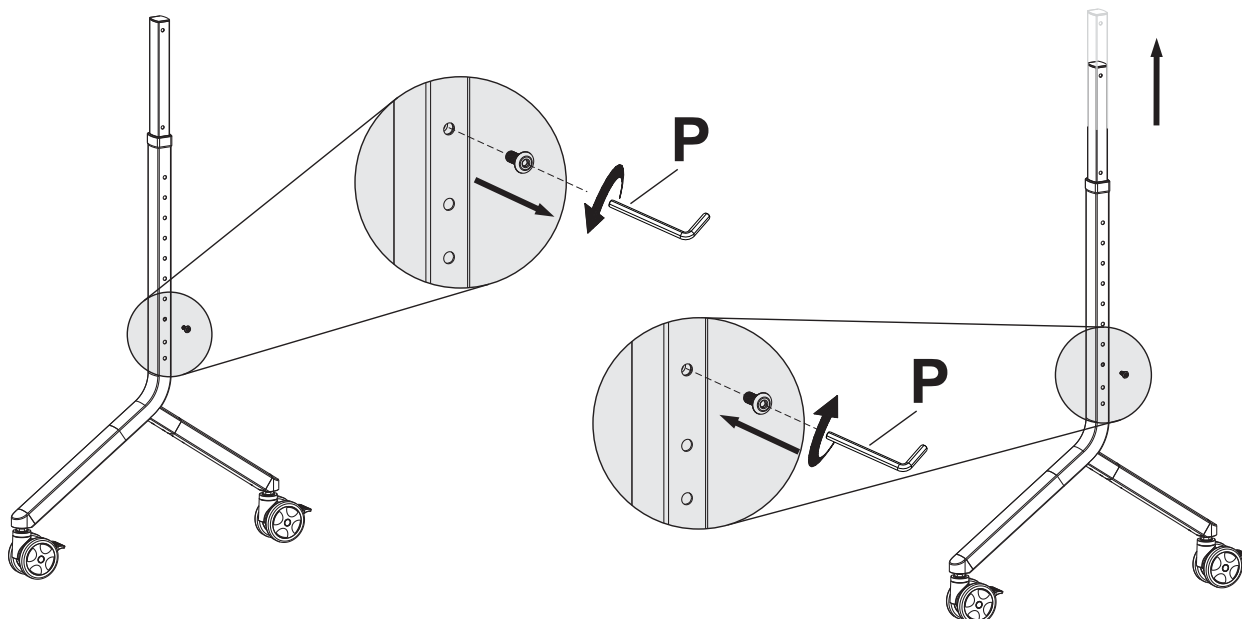

Tray and Crossbar Assembly

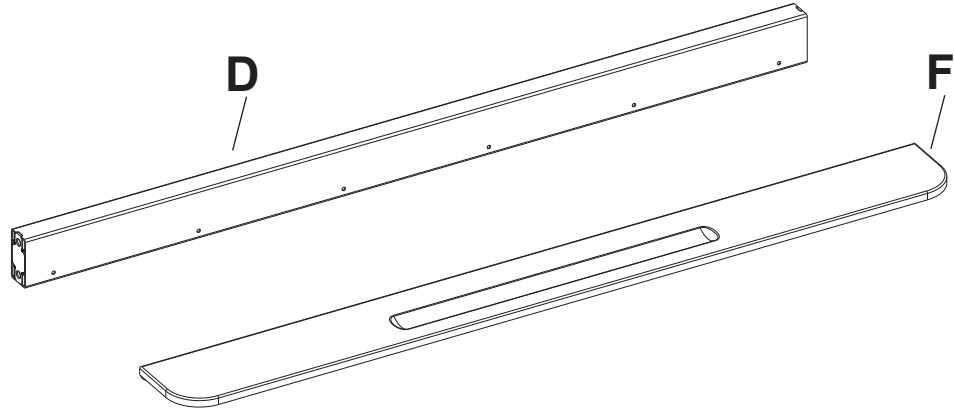 


7

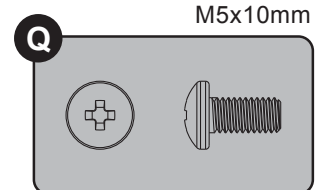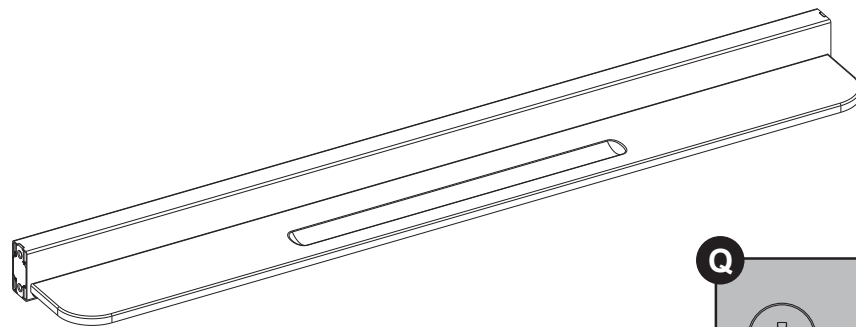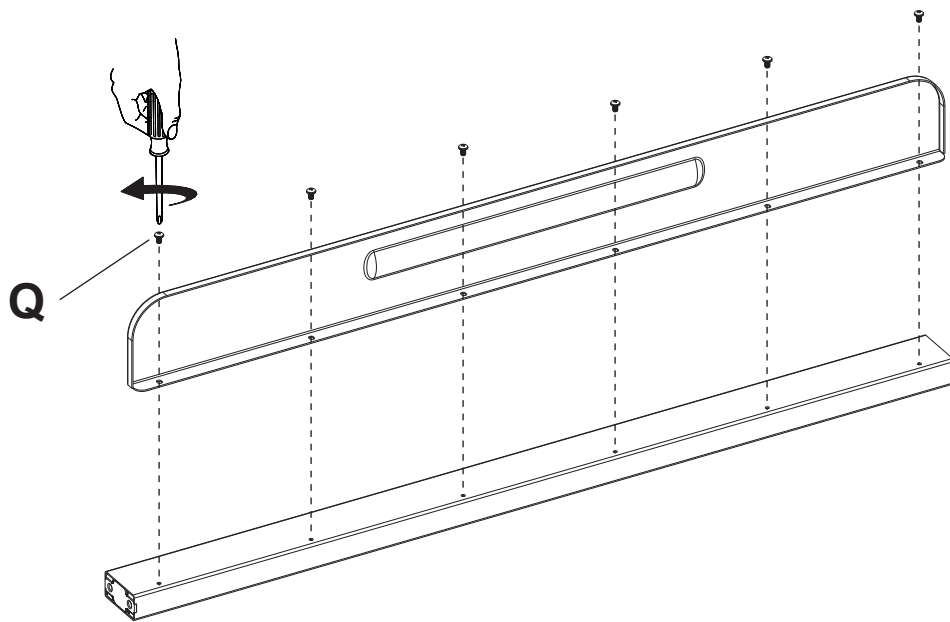   


1:1 Diagram

Pillars and Crossbar Assembly

 
8

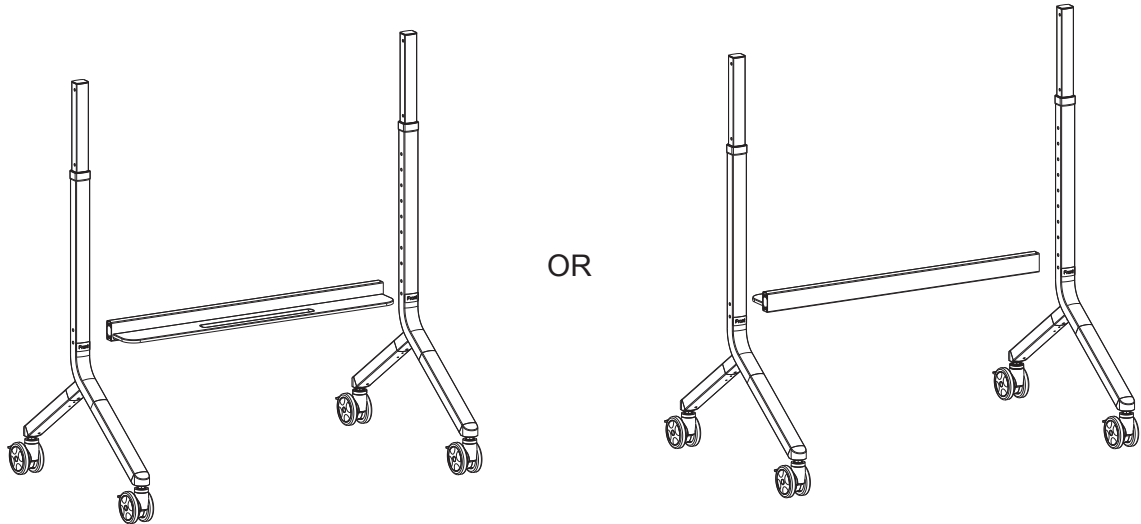

9

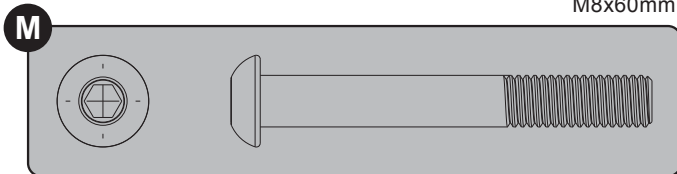 


1:1 Diagram

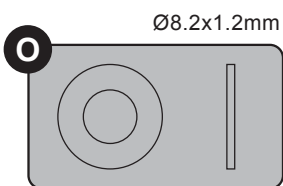 

1:1 Diagram

 
Ensure screws are secured firmly.
At least two persons are required
for assembly.

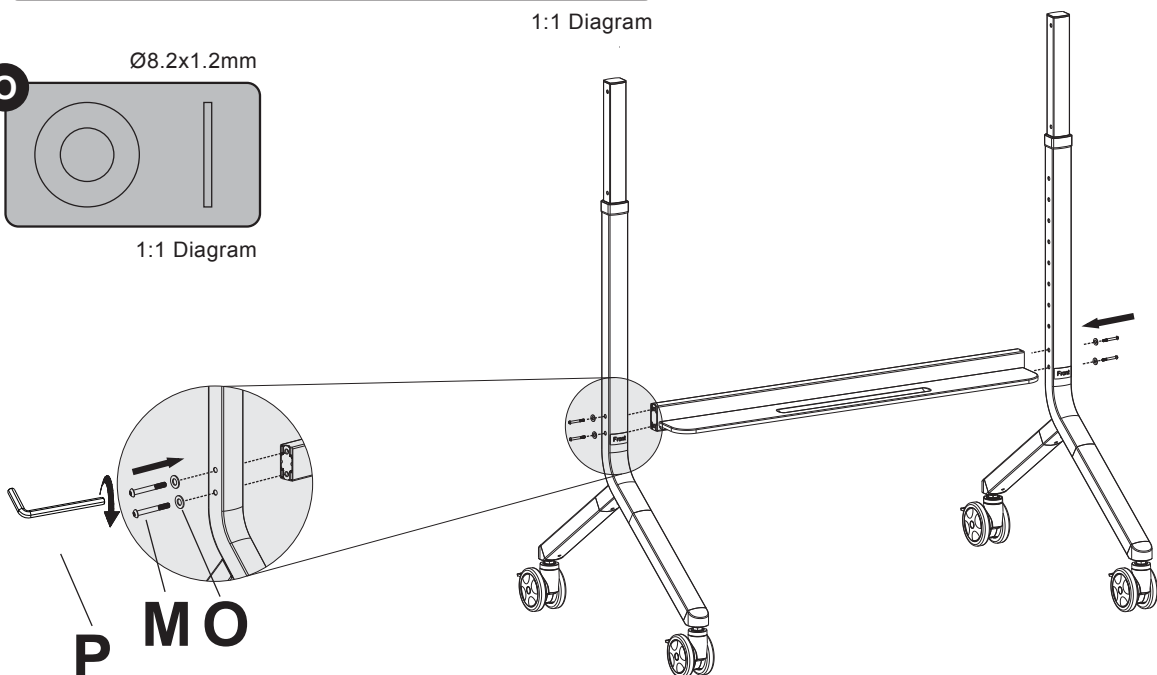


TV Plate Installation

10






 
Assemble the panel as per instruction on label.

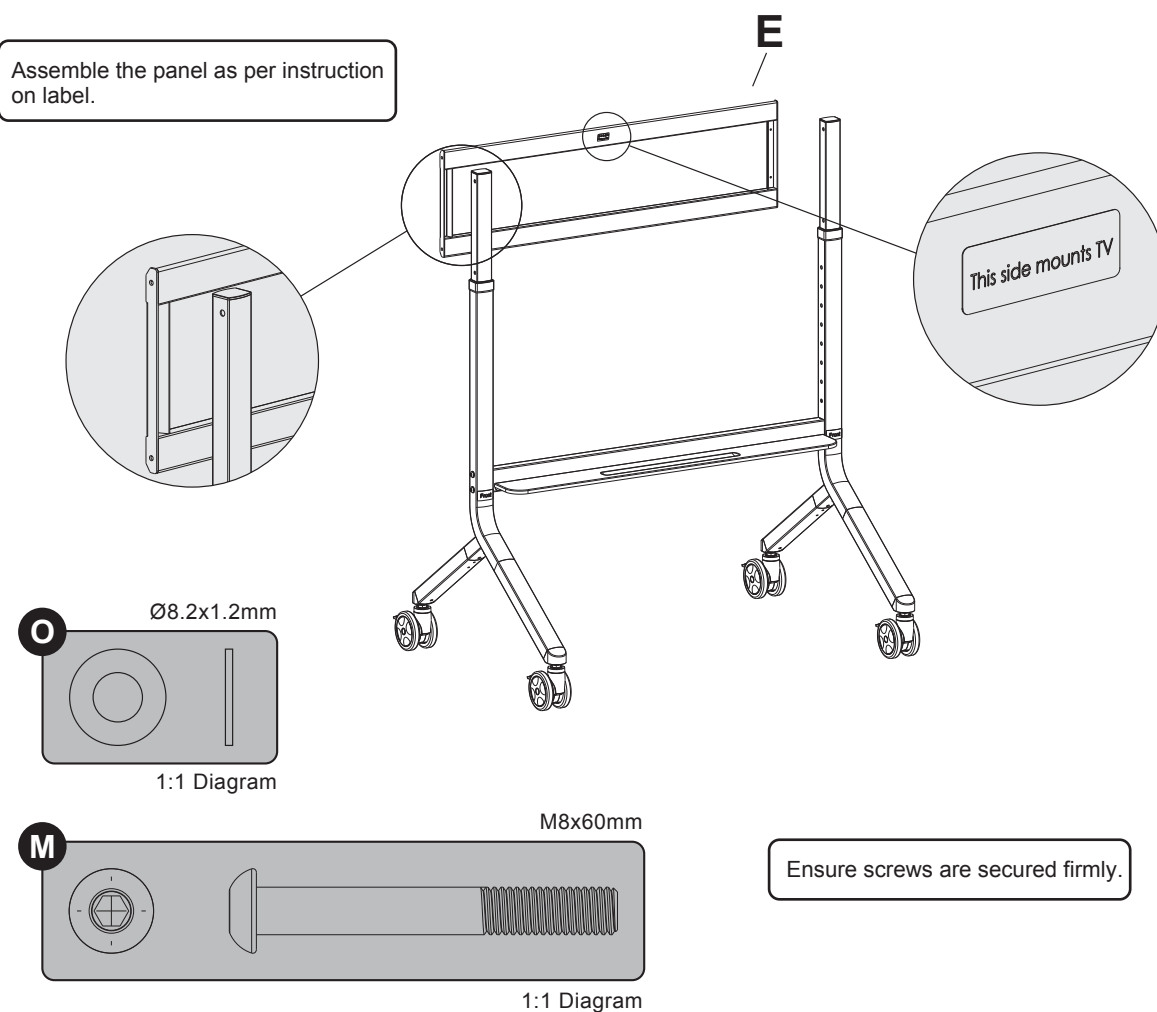

11

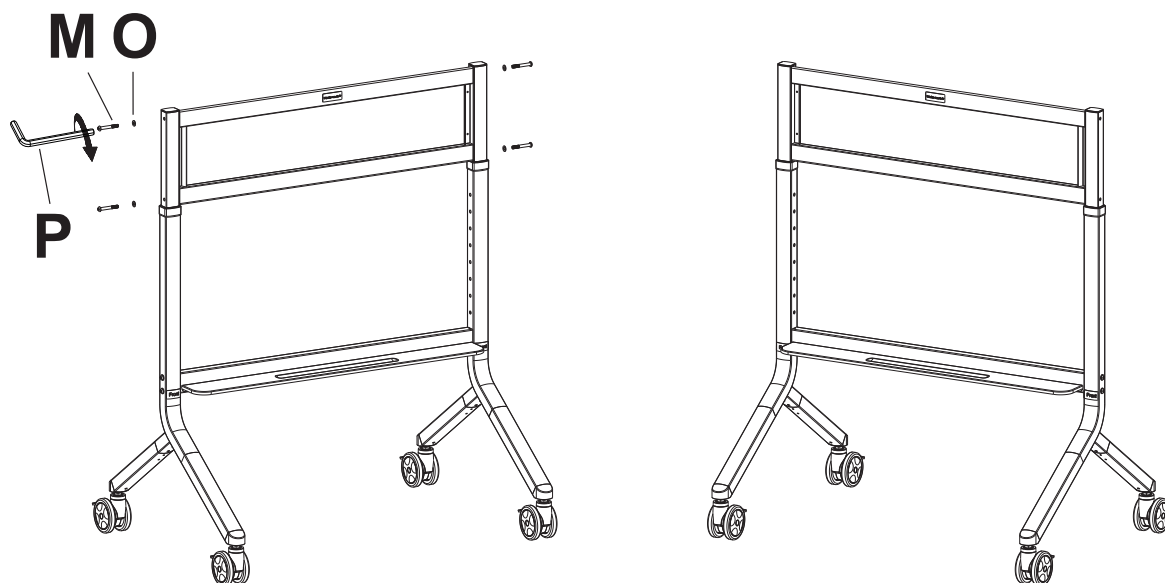 

      VESA Mounting Patterns (200 x 200 ~ 800 x 600mm)

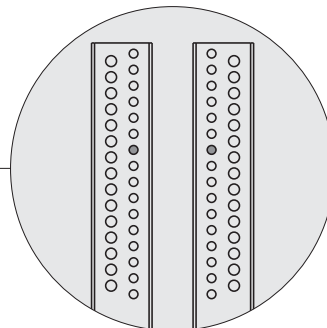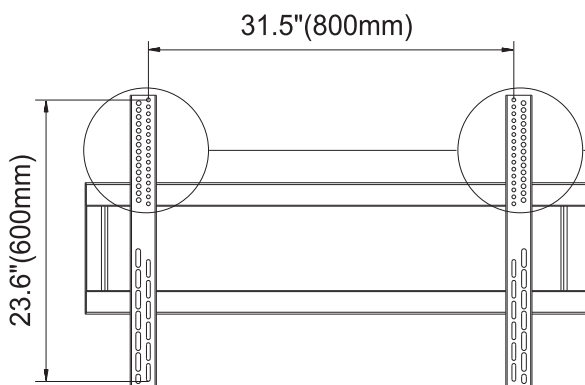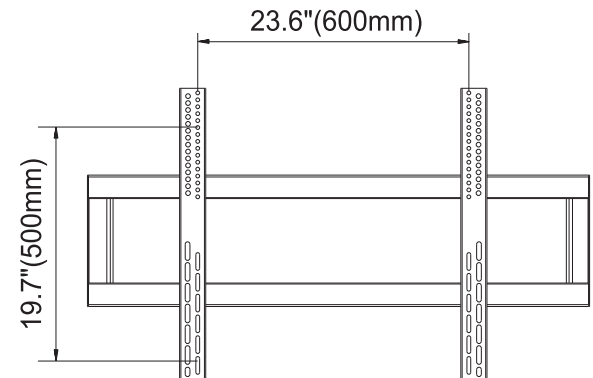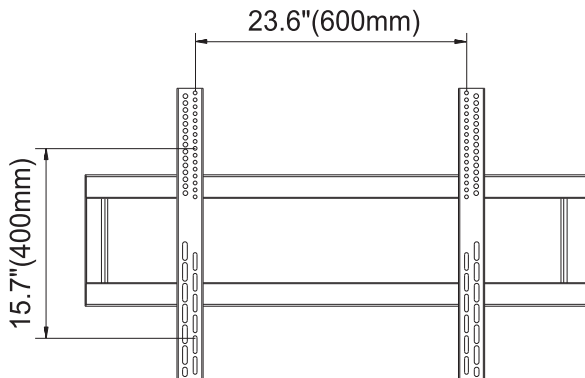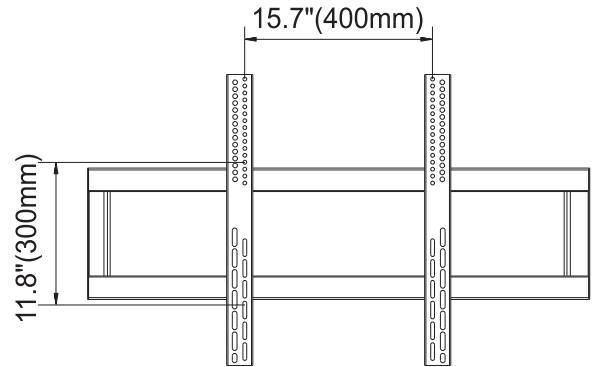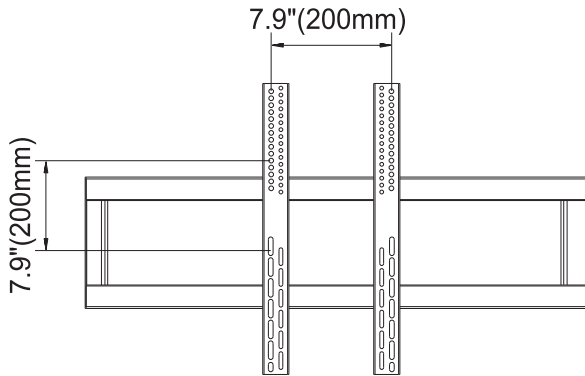


EDUGroup.my BeeBoard S8 Installation Guide

* Start counting from the top edge, select the 7th small hole as the installation point.

VESA Rails and TV Assembly

 12

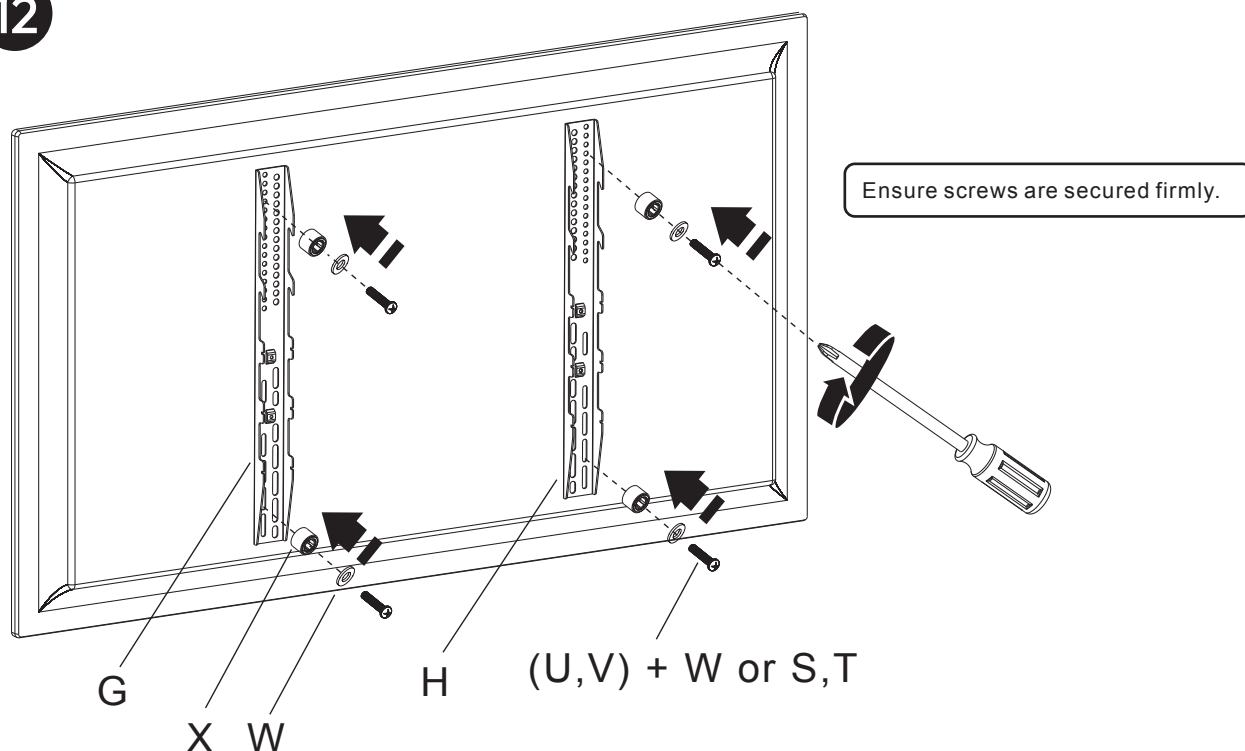







Based on the screw specifications,
choose one of the following three installation methods

Ⓣ M10×15mm

Ⓣ+ⓧ M8×25mm

Ⓥ+Ⓦ+ⓧ M5×25mm

      
Ⓤ+Ⓦ+ⓧ M6×25mm

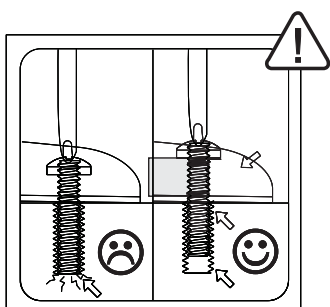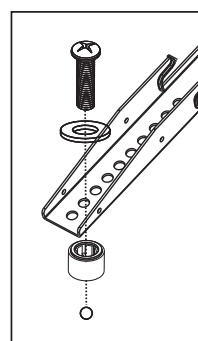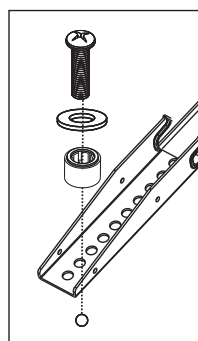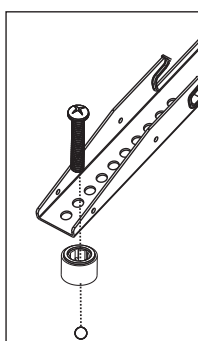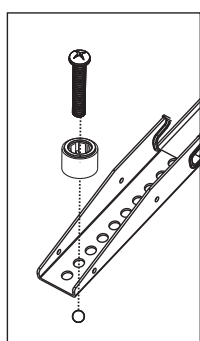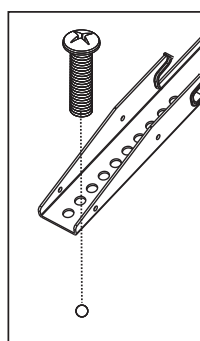

Please use spacers to fix screws onto TV,
lest damage to TV due to overlong screws

Mounting TV onto Cart

 13

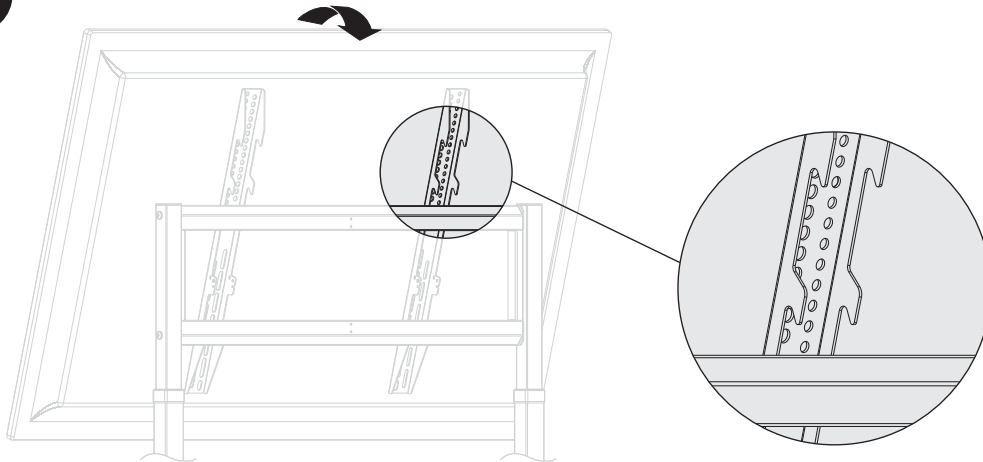


To prevent TV from colliding with the bracket, please adjust the bracket to the proper height before hanging on TV.

If VESA holes on TV are on the upper position, it is suggested to use the second hooker on VESA rails to hang on the TV.

14

 
Move TV to the center position

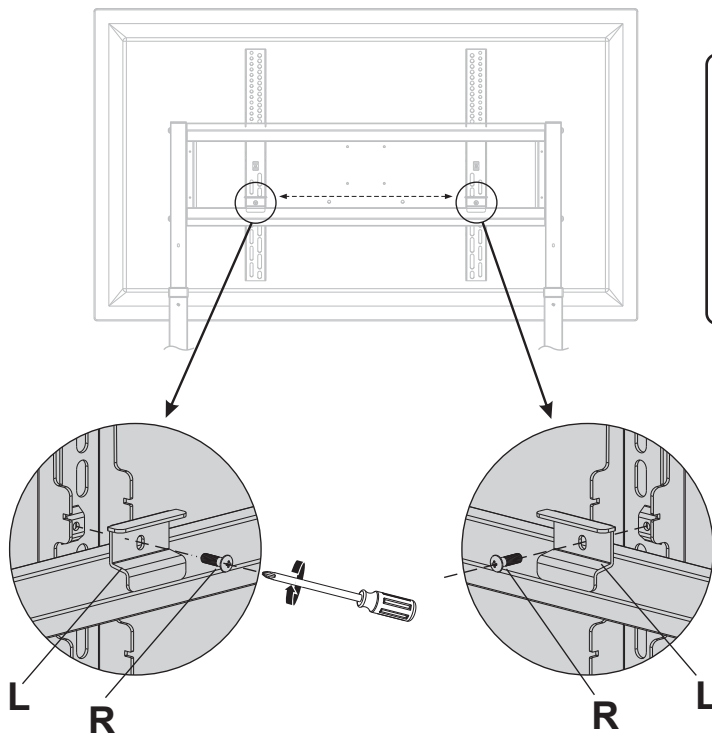

Move TV to the center position.



At least two persons are required to mount TV. Holding TV firmly by the bottom to avoid possible damage due to slide-off.

 To avoid property damage and personal injury, please ensure clips are secured firmly.

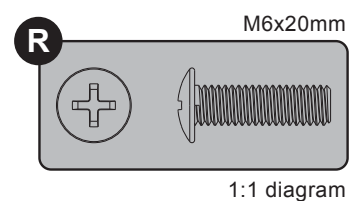

Cable Management

  15

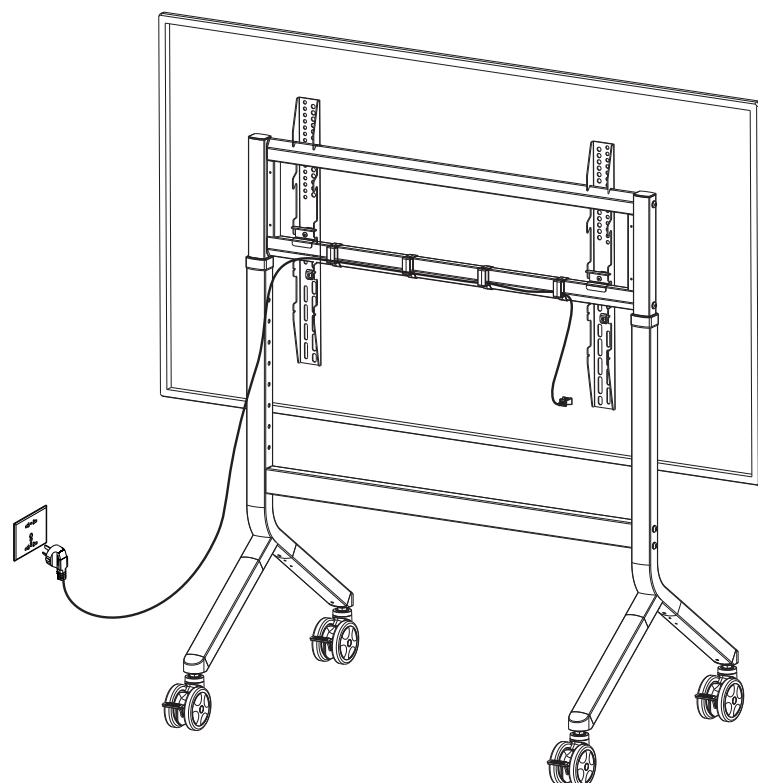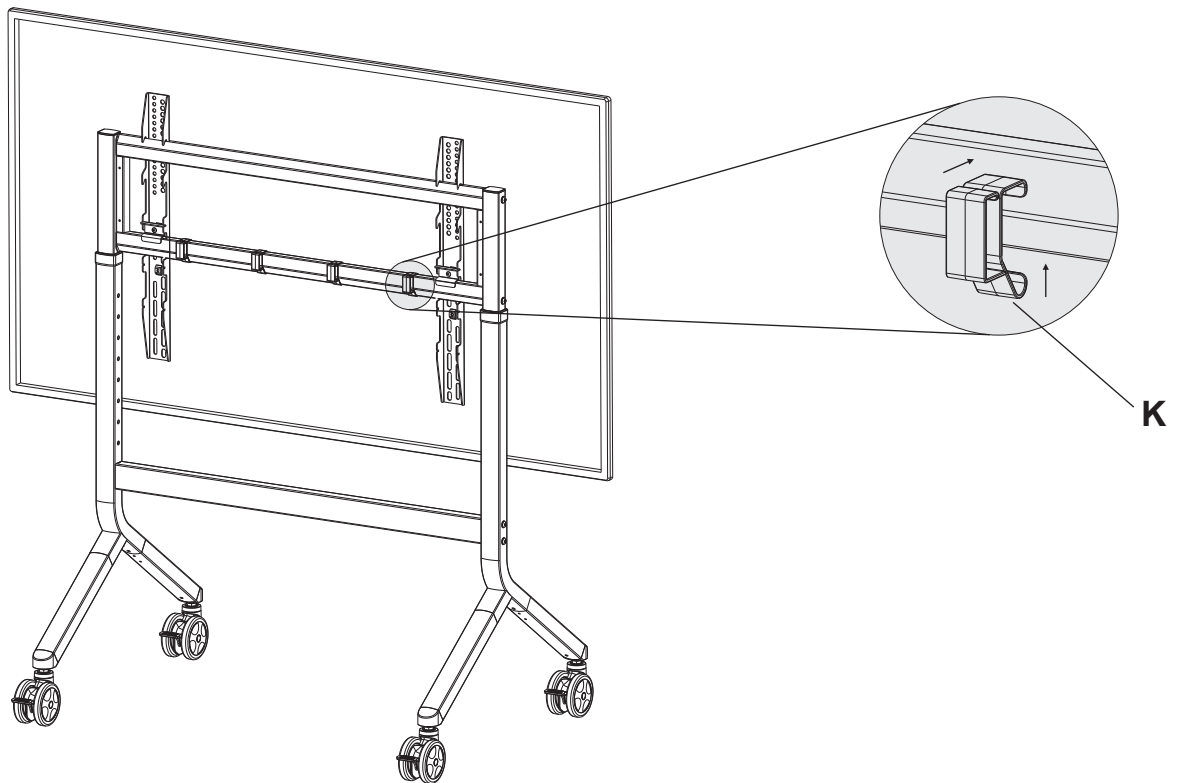

EDUGroup.my



N.W. / P.N. / 正味重量: 18.5 kg(40.7 lbs)

G.W. / P.B. / 総重量: 21.7 kg(47.7 lbs)

MEAS / DIM / 測定: 110.5x35.5x15.5cm

MADE IN CHINA / FABRIQUÉ EN CHINE / 中国製