



CAR MULTIMEDIA
KIMBERLEY 941

ESTABLISHED
— IN —
GERMANY
Since 1923



Enjoy it.

Press [] button to turn on the unit.



1. Reset

Load factory settings

2. Eject disc (when disc inserted)

3. [] Button

- > Power "ON" (press)
- > Power "OFF" (long press)
- > Mute the Volume (press)

4. [] Button

- Show main menu (press)
- Show main options (long press)

5. [] Button

Press to go back one step on any screen.

6. Volume + / -


Increase / Decrease the volume

7. Bluetooth MIC

8. Disc Slot

Insert the disc with label side facing up.

9. Map Card Slot

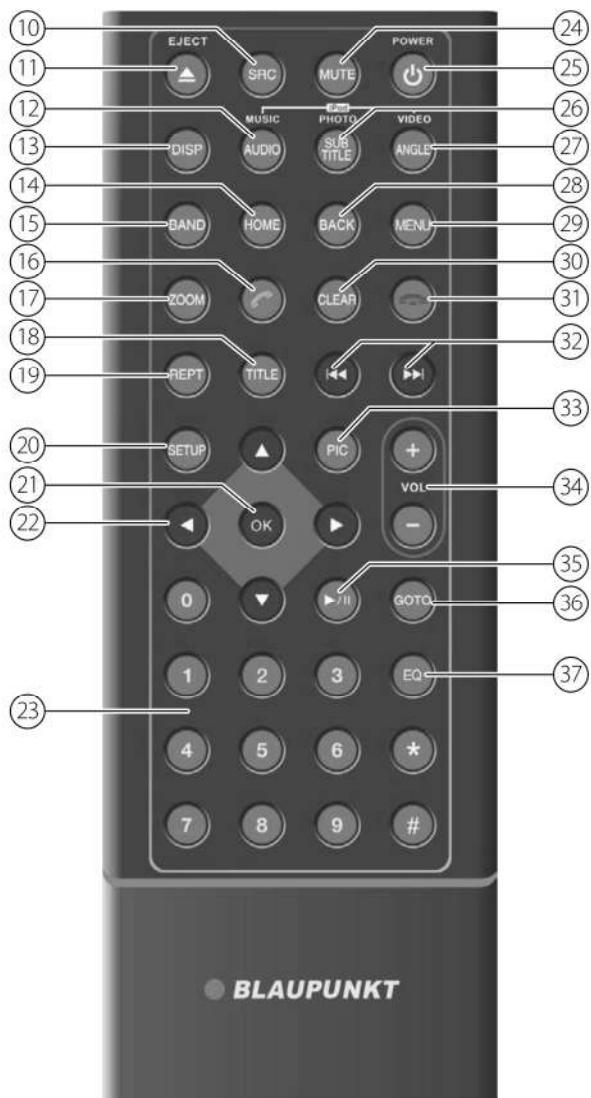

10. Change playing source in sequence
11. Eject the disc
12. Select audio language
Show music catalog
13. Display playback information
14. Show home menu
15. Select radio band
16. Call out - Outgoing call
17. Zoom
18. DVD title
19. Repeat playback
20. Setup menu
21. Enter(OK key)
22. Move the cursor up/down/left/right.
Up/down: Manual tuning
23. Numeric keys
24. Mute the volume
25. Unit power
26. Select DVD subtitle language
27. Select DVD angle
28. Return to previous display
29. Main menu
30. Clear information
31. Hang up
32. Previous/Next
Auto tuning (long press)
Fast backward/forward (long press)
33. Display settings
34. Adjust volume
35. Play / Pause
36. Go-to search
37. Enter the EQ setting

Placing the device in operation.....	5	Music Playback.....	10
Turn on/off the power	5	Play/Pause.....	11
Mute.....	5	Previous/Next Track.....	11
Adjust the Volume.....	5	Select Music by Artist.....	11
Playing Source Selection	5	Select Music by Album.....	11
When Vehicle is Put in Reverse	5	Select Music by Song Name	11
When Parking Brake Applied	5	Playlists.....	11
Boot password.....	5	Video Playback	12
Customized.....	5	Gallery Operations	12
Main Menu.....	6	Bluetooth mode.....	12
Applications Menu.....	6	Starting Bluetooth mode.....	12
Radio mode	6	Making a Call	13
Start radio mode.....	6	Call from Phonebook	13
Select One Radio Band	7	Call History.....	13
Manual Tuning.....	7	Bluetooth Audio Streaming.....	13
Auto Tuning.....	7	Bluetooth Settings.....	14
Auto Store	7	PhoneLink	14
Manual store	7	Connect with Android phone.....	14
Local Seeking.....	7	Connect with iPhone	15
Key Search.....	7	Wi-Fi Settings	15
RDS Basics	7	Visit Website.....	15
Adjust RDS Settings.....	7	E-mail.....	16
TA.....	8	Sound settings.....	16
AF	8	Navigation Operations.....	16
CT (Clock Time).....	8	AUX Operations	16
PTY Function.....	8	Steering Wheel Control	16
DVD/CD/USB media playback	8	Basic Settings.....	17
Insert a Disc	8	Scope of delivery	17
Eject the Disc.....	8	Connection diagram.....	18
DVD Playback Menu.....	8	Notes of connection	19
CD Playback.....	9	Troubleshooting	20
Mixed Disc Playback.....	9	Supported formats	21
Stop Playback Temporarily.....	9		
Select Desired Track/Chapter.....	10		
Repeat	10		
Sequential Track Playback.....	10		
Search.....	10		
DVD Audio Select.....	10		
VCD Audio Select.....	10		
DVD Subtitle Select	10		
Using USB device.....	10		

Placing the device in operation

Caution!

Transport securing screws

Ensure that the transport securing screws at the top side of the device are removed before the startup of the de-vise.

Turn on/off the power

- ☛ Press and release [] button to turn the unit on.
- ☛ Press and hold the [] button to turn the unit off.

Note:

The unit will power on in the same state it was in when powered off.

Mute

Press the [] button to mute the sound.

Note:

- Pressing the [] button again or adjusting volume will unmute.

Adjust the Volume

Press the [] or [] button to increase or decrease the volume level.

The adjustable range of volume is 0 to 40.

Playing Source Selection

- ☛ Press the [] button on the panel to show main source menu.
- ☛ Touch desired icon on the the screen to enter corresponding working mode, such as Disc, Navi, Radio, etc.
- ☛ Drag left/right to scroll.

Note:

- When some devices are not ready, they cannot be selected.
- You should stop switching when the playing source you desired has been selected and wait for some seconds, the unit will auto enter the playing source mode you have selected.

When Vehicle is Put in Reverse

If the rear view video camera is connected, the unit automatically switches to CAMERA source during reverse driving. The unit returns to the previous source after the vehicle has been taken out of reverse.

When Parking Brake Applied

- ☛ If 'PRK SW' cable is connected to hand brake switch, the video display of the TFT monitor will be controlled by driving status, system setup and input video sources.
- ☛ When the car is moving forward, and a video source is being played, the screen will display a warning disclaimer and a blank screen. The warning screen will prevent the driver from watching images.


Boot password

When power on first time, you should enter the Boot password.

- ☛ Default password is 0000.
- ☛ You can change the password in the settings menu. (General Settings -> Modify boot password)
- ☛ When changing the password, you should input the old password first, then input a new 4-digit password twice.
- ☛ **If you forget your password or you are unable to login with your password, please use the password: 8078**

Customized

Press the [] of the main menu.

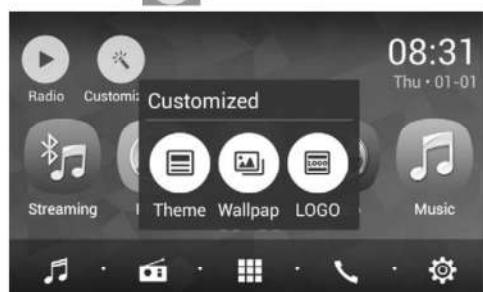

☛ Choose theme:

[Theme 1], [Theme 2].
(Theme 2 is the default theme)

☛ Choose wallpaper:

[Live wallpapers]: to show the wallpapers with animation stored in the unit. Drag up/down to scroll.

[Photo]: to visit the photo of mobile storage.
[Wallpapers]: to show the wallpapers stored in the unit. Drag left/right to scroll.

Select desired picture to view, touch [Set wallpaper] to confirm selection.

☛ Choose LOGO

Main Menu

Touch the [] button to enter main source menu.



1. Show current player source.
2. Enter customization menu.
3. Hold and drag down to show the notifications.
4. Car AV system source bar:
Touch and hold the center of the bar and drag left/right to show more icons.
Touch desired icon to enter corresponding mode.
5. Clock.
6. Enter music menu.
7. Enter radio mode.
8. Show applications list.
9. Enter bluetooth mode.
10. Enter setting mode.

Applications Menu

Touch [] to enter applications menu.



1. IN-CAR
Show the Car AV applications.
2. APPS
Show the Android applications installed.
In the list menu, drag left/right to scroll.
Touch and hold an icon for more than 2 seconds to add shortcut to the desktop. To delete the shortcut, hold it and drag to the [X] on the top, and release after it turns red.

Radio mode

Start radio mode

Select [Radio] on the main menu to enter radio mode.



1. Return to home menu
2. Tune backward
Auto tune backward. (long press)
3. Current frequency
4. Tune forward
Auto tune forward. (long press)
5. Enter preset EQ menu
6. Enter favorite list
7. Search and store preset stations automatically
8. Show discovery stations
9. Show favorite stations
10. Band switch
11. Preset stations of current band
12. Show more control buttons



13. Enter customized list
14. To receive local / distant radio stations
15. Goto station by inputting frequency
16. Mute radio
17. Hide the second line of control buttons
18. Show RDS options

Select One Radio Band

Touch the [Band] button to select one radio band among FM and AM.

Manual Tuning

During manual tuning, the frequency will be changed in steps.

Touch the [<] or [>] button on the operation bar to tune in a lower/higher station.

Auto Tuning

Hold the [<] or [>] button on the operation bar for more than 2 seconds to seek a lower/higher station.

To stop searching, repeat the operation above or press other buttons having radio functions.

Note:

When a station is received, searching stops and the station is played.

Auto Store

Only stations with sufficient signal strength will be detected and stored in the memory.

To start automatic station search, touch the [] button on the operation bar.

To stop auto store, repeat the operation above or press other buttons having radio functions.

Note:

After auto store, the previous stored stations will be overwritten.

Manual store

- When one expected radio station has been detected, touch [] to show customized station store list.
- Touch to select an item on the list to store the current station in the memory.
- Touch top left of the screen to exit.

< Customized		10:16
P1	Favorite	[] []
P2	Favorite	[] []
P3	Favorite	[] []
P4	Favorite	[] []
P5	Favorite	[] []

Recall the Stored Stations

Method 1:

- Touch [] button on the screen to

show the preset stations.

- Select a band
- On the middle of the screen, drag the list left/right to scroll, touch a station on the list to listen to.

Method 2:

- Touch [] button on the screen to show the favorite stations.
- Select a band
- On the middle of the screen, drag the list left/right to scroll, touch a station on the list to listen to.
- Touch top left of the screen to exit.

Local Seeking

When LOCAL seeking is on, only radio stations with strong radio signal will be received.

To open LOCAL function, touch [] button on the operation bar, then touch the [] button to select "Loc" or "DX".

Note

The number of radio stations that can be received will decrease after the Loc seeking mode is on.

Key Search

Touch [] button on the operation bar to show key search menu.

Touch the keypad to input the frequency, touch [OK] to goto the station directly.

< Radio		10:16
FM	MHz	
1	2	3
4	5	6
87.50	7	8
	9	91
	OK	
		

To cancel an input number, touch [].

RDS Basics

Radio Data System (RDS) enables traffic reports to be received and provides many facilities, including enabling the radio station name to be displayed on the radio display.

Adjust RDS Settings

- In Radio menu, touch []. The option menu is displayed.
- Touch on the selected option to change the setting.

- [TA]: To turn on or off "TA" function.
- [AF]: To turn on or off "AF" function.
- [REG]: To turn on or off "REG" function.
- [CT]: To turn on or off "Clock Time" synchronization function.
- [PTY]: To show PTY list.



TA

Press the TA ON/OFF button to switch the priority for traffic announcements on or off.

AF

The receiver can automatically switch to an alternative frequency (AF) of the same station if the reception becomes poor. Press the OFF/ON touch-point to turn the automatic scanning for alternative frequencies of an RDS broad-cast station off and on.

CT (Clock Time)

Some stations broadcast the time and date within the encoded RDS signal. The clock time is automatically adjusted when 'CT' is set to 'ON'.

PTY Function

PTY is the abbreviation for Program Type which is a code defining the type of program being broadcast (e.g. News or Rock).

PTY options will display on the screen. To view more PTY options, touch the scroll bar and arrows on the screen.

When one PTY option is touched (e.g. News), auto search for next available PTY by increasing tuning frequency until the PTY of the next station matches the current. If no matched PTY has been found, the unit will return to the original radio frequency.

Insert a Disc

Insert a disc into the slot, and the unit will change to disc mode automatically.

Notes:

- Please confirm whether there is a disc in the unit before you insert another one.
- The unit will exit current playing source and enter DVD mode when one disc is inserted.
- The following disc formats are supported: CD-R, CD-RW, DVD-R, DVD+R, DVD-RW, DVD + RW .

Eject the Disc


Press [▲] on the panel to eject the disc.

Notes:


- After ejecting the disc, the unit reverts to another source automatically.
- If the disc is not removed from the unit within 10 seconds, the disc will be reloaded to prevent accidental damage.

DVD Playback Menu

During playback, touch the screen (except top left corner) to show control buttons.

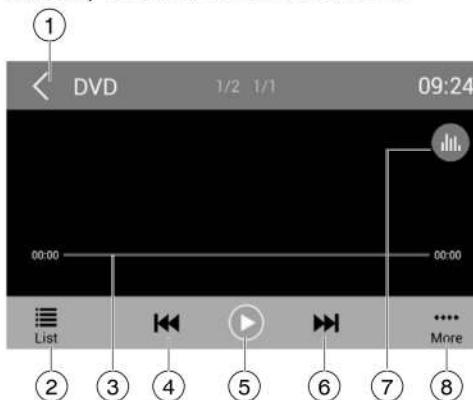

1. Return to home menu
2. Show DVD menu
3. Progress bar
4. Previous chapter
5. Play/Pause
6. Next chapter
7. Enter preset EQ menu
8. Show more control buttons

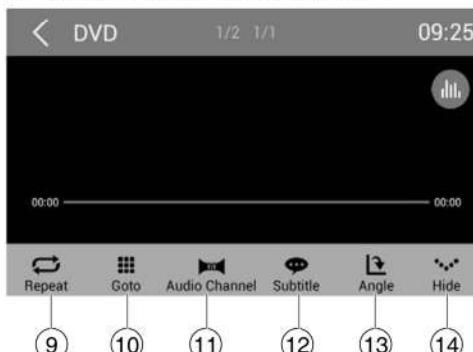

9. Repeat play
10. To enter search menu
11. Select audio channel
12. Select subtitle language
13. Select viewing angle
14. Hide the second line of control buttons

CD Playback

Insert a CD in the disc slot, and the unit will read the disc. For some discs, you will need to choose Music/Video/Photo for playback.




1. Return to home menu
2. Show file list
3. Previous track
4. Play/Pause
5. Next track
6. Show more control buttons



7. Sequential play
8. Repeat play
9. To enter search menu
10. Hide the second line of control buttons

Mixed Disc Playback


When inserting a mixed disc, the unit will read the disc and show the files list. For some discs, you need to choose Music/Video/Photo to play back.

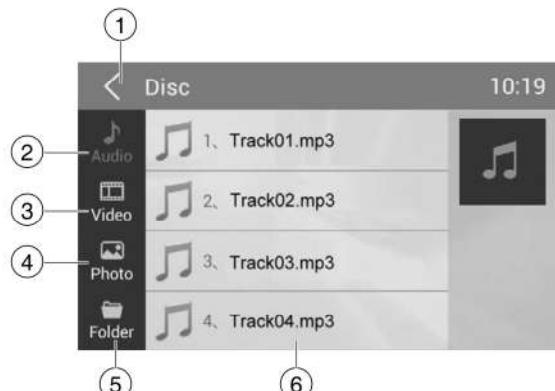

1. Return to home menu
 2. Show music list
 3. Show video list
 4. Show photo list
 5. Show the folders
 6. File/Folder list
- Drag the list up/down to scroll.
Touch a file name to visit it.

ENGLISH

When viewing a picture, touch the screen (except top left corner) to show control buttons.

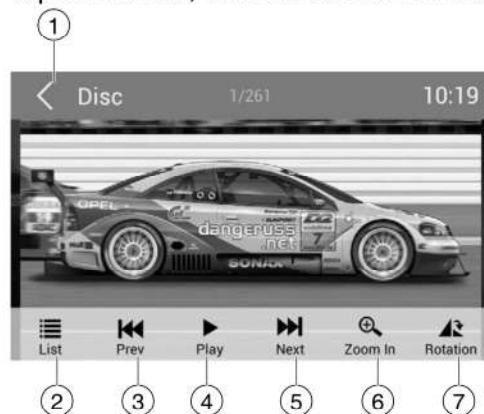

1. Return to home menu
2. Show file list
3. Previous picture
4. Play/Pause
5. Next picture
6. Zoom out/in
7. Rotate clockwise

* Video/Audio playback reference DVD/CD playback.

Stop Playback Temporarily

- ▶ During playback, press [II] to pause playback. The sound will be muted.
- ▶ Press [▶] to continue playback.

Select Desired Track/Chapter

Press [◀◀] or [▶▶] to skip to the previous or next track/chapter.

Repeat

During playback, press [repeat] button on screen to select repeat playback mode.

[repeat] Repeat single: Play the current single repeatedly.

[repeat all] Repeat all: Play all in the disc repeatedly.

[repeat off] Repeat off: Cancel repeat play.

[repeat chapter] Repeat chapter: Play the current chapter repeatedly.

[repeat title] Repeat title: Play all chapters in the title repeatedly.

Sequential Track Playback

You can play all the tracks in random order.

During playback, press [random] button on the screen to select random playback.

Search

Touch [Goto] on the control bar.

Input the chapter number.

Touch [OK] to confirm.

DVD Audio Select

Press [▶◀] button to select audio language to listen if the DVD has multiple audio languages.

VCD Audio Select

Press [▶◀] button to select audio channel to listen (LEFT, RIGHT, MIXED, STEREO).

DVD Subtitle Select

Press [Subtitle] button to select the subtitle language to show if the DVD has multiple language subtitles.

Using USB device

1. Connect your USB device to the USB cable.

When connecting a USB device, the unit will read the files automatically.


2. To remove the USB device, you should first select another source, in order to avoid damaging the USB device.

Music Playback


Select [Music] on the applications menu, the unit will display all the music on the mobile storages.



1. Return to home menu
2. Select file source
3. List the files by favorite
4. List the new files
5. List the files by song name
Touch a song to start play.
6. List the files by artist
Drag up/down to scroll.
7. List the files by album
8. Show the file
9. List window
Drag up/down to scroll.
Touch an item to select.
10. Enter search menu.

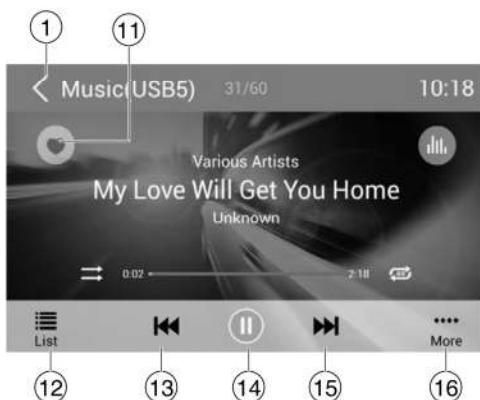

11. Favorite
12. Show list menu
13. Previous track
14. Play/Pause
15. Next track
16. Show more control buttons

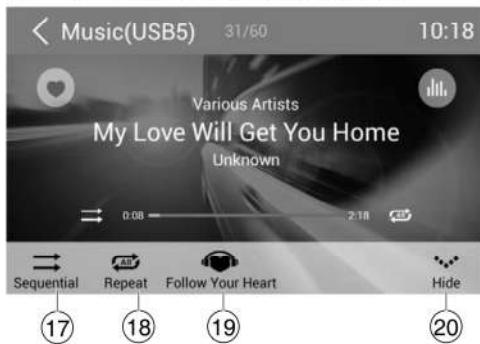

17. Sequential play
18. Repeat play
19. Follow your heart
20. Hide the second line of control buttons.

Play/Pause

When playing, press [II] button to pause, and the sound will be mute.

Press [▶] button to play.

Previous/Next Track

Press [**◀**] or [**▶**] button to go to previous or next track.

Select Music by Artist

1. Touch [Artists] on the left of the screen.
2. Touch an artist shown on the list.
3. Select a song to play.

Select Music by Album

- ▶ Touch [Albums] on the left of the screen.
- ▶ Touch an album shown on the list.
- ▶ Select a song to play.

Select Music by Song Name

- ▶ Touch [Songs] on the left of the screen.
- ▶ Select a song to play.

Playlists

Add a song to favorite playlist

- ▶ Press a song and select [].
- ▶ Add it to an favorite playlist.
If choose [Favorite], you need input a name of the playlist.

Delete a song from favorite playlist

- ▶ Touch [favorite], and select a playlist name on the screen.
- ▶ Press [] on the favorite playlist, then remove it from playlist.


Video Playback

Select [Video] on the applications menu, the unit will display all the video files on the storages.

During playback, touch the screen(except top left corner) to show control buttons.



1. Return to home menu
2. Select file source
3. Folder/File list
Drag up/down to scroll, touch to access.
4. Thumbnail

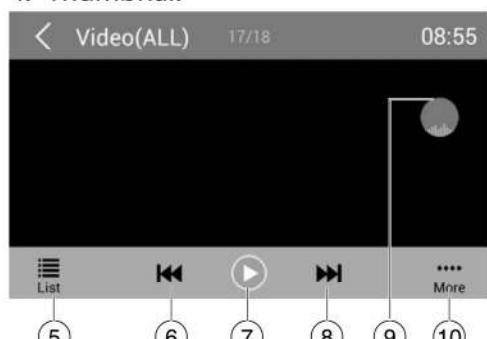

5. Show list menu
6. Previous chapter
7. Play/Pause
8. Next chapter
9. Enter preset EQ menu

10. Show more control buttons



11. Sequential play
 12. Repeat play
 13. Show previous page of control buttons

Notes:


- Disconnect USB storage devices from the unit when not in use.
- Do not use unauthorized products.

Gallery Operations

- ☞ Select [Photo] on the APPS menu.
 ☞ Select one gallery to show the picture list.



☞ Touch to view it.

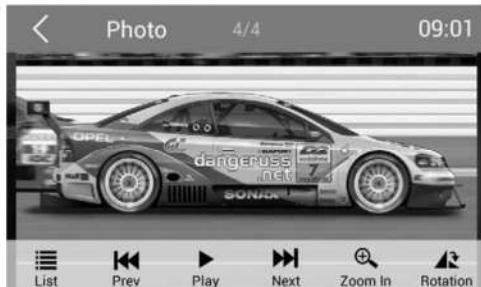

Drag left/right to scroll.
 Touch top left corner to back.

Bluetooth mode


The Bluetooth allows you to utilize your car's built-in audio system for handsfree wireless mobile phone or music communication. Some Bluetooth mobile phones have the audio features, and some portable audio players support Bluetooth feature. This system can play audio data stored in a Bluetooth audio device. The car stereo with Bluetooth will be able to retrieve phonebook contacts, received calls, dialed calls, missed calls, incoming calls, outgoing call and listen to music.

Notes:

- This system will not operate or may operate improperly with some Bluetooth audio players.
- The unit cannot guarantee the compatibility of all mobile phones together with the unit.
- Audio playback will be set to the same volume level as set during telephone call. This can cause problems, if extreme volume level is set during the telephone call.


Starting Bluetooth mode

Touch [Phone] on the main menu to enter Bluetooth Phone mode.

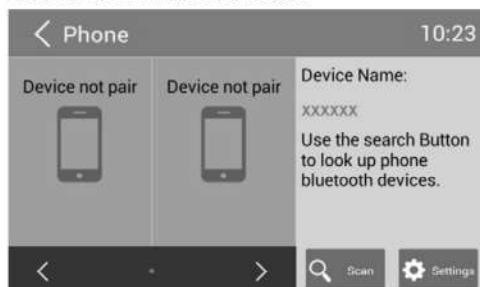

- ☞ If the Bluetooth function of the unit is off, the unit will ask you to turn it on.
 (Default setting is on)
- ☞ Turn on Bluetooth function of your mobile phone.
- ☞ Search for new Bluetooth devices on your phone. Select "Kimberley 941" from the pairing list on the mobile phone, and enter password (Default password: 1234)
 Or touch [Scan] button on the screen to search mobile Bluetooth devices.

After connect successfully, the unit show following menu.

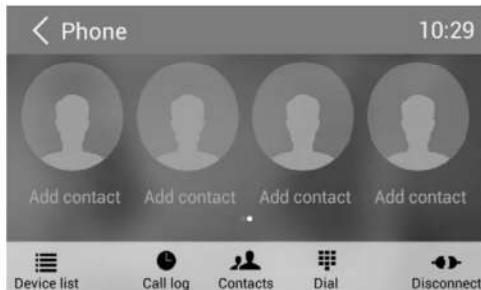

Making a Call

• Dial Number

- Input numbers by digit-keys on the screen.
- Touch [] to clear the digits.
- Touch [] button to dial out.
- Touch [] button to terminate call.



• Answering a call

You can answer an incoming call by pressing the [] button.

Touch [] button to reject an incoming call.




• Disconnect

To disconnect a paired device, touch [Disconnect] button.

Call from Phonebook

- Touch [Contacts] button to show your phone book.
- Select a number to select and touch [] button to dial out.
- Touch [] to search a contact name.

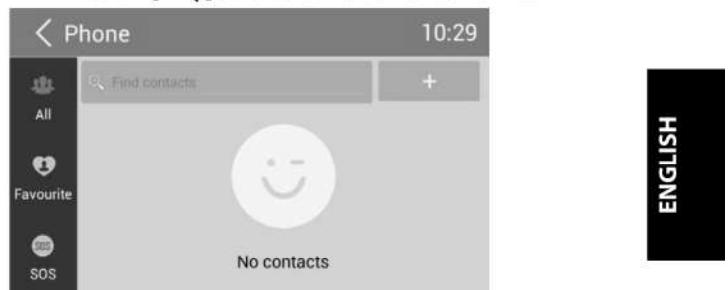

ENGLISH

Call History

Access Call History by touching [Call log] button.



Then select a number from Dialled/Missed/Received calls.

Bluetooth Audio Streaming

What is audio streaming?


Audio streaming is a technique for transferring audio data such that it can be processed as a steady and continuous stream. Users can stream music from their external audio player to their car stereo wirelessly and listen to the tracks through the car's speakers. Please consult your nearest dealer for more information on the product of wireless audio streaming transmitter offered.

CAUTION

Please avoid operating your connected mobile phone while audio streaming as this may cause noise or the sound to cut in and out on playback.

Audio streaming may or may not resume after telephone interrupt as this is dependent on your mobile phone.

Touch [Streaming] button to play music on your mobile phone.

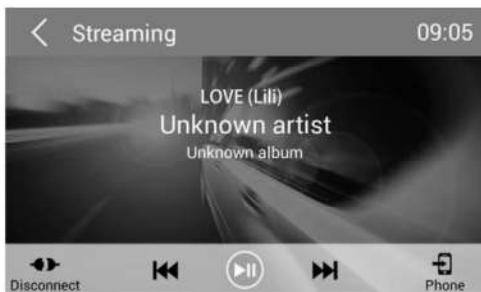

◀ : Previous track

▶ : Play/Pause

▶ : Next track

Phone : Enter Bluetooth Phone

Bluetooth Settings

1. In Bluetooth menu, touch [].

The option menu is displayed.



2. Touch on the selected option to change the setting.

- [Auto Connect]: To turn on or off "Auto connect" function.
- [Auto Answer]: To turn on or off "Auto answer" function.
- [Pair Password]: To set pairing code.
- [Phone Book sync]: To synchronize phone book, touch [Download] on the sub-menu popped out.

Phonebook sync may take several minutes to load on initial setup.

Overview of PhoneLink

The system of the car device is Android version, which supports the connection between the car device and Smart phone, and the connection way is standard USB interface connection.

And you can also control your phone by the car device, such as receiving calls, dialing calls, listening to the music and watching movies or pictures from your phone.

Note:

You can't control your iPhone by the unit. (iPhone mirrors display on screen)



Connect with Android phone

- ☛ Start Android phone [**USB debugging**].

The operations of Android phone's entering [Setting] are as follows (since the Android phone versions are not the same, it roughly has two conditions):

- 1) Existence of [Developer options]: Click [Additional settings]-Click [Developer options]-click to open [Start developer options]-click to open [USB debugging]-determine to allow.
- 2) Inexistence of [Developer options]: Click system version number (interior version number) for 8 times, then back to setting and click [Developer options]-click to open "Start developer options"-click to open [USB debugging]-determine to allow.

- ☛ Bluetooth connection.

Scan for Bluetooth devices and select this system for connection.

- ☛ Connect your cell phone with the USB port of the unit by USB cable.

- ☛ Finish connection.

(If it is not connected successfully, please replace USB cable or vehicle USB interface, or re-insert USB wire or restart Android phone and re-try).

- ☛ After connection, operate according to the screen software.

Tip:

- For your driving safety, please do not use the function during driving.
- For normal use, **Android 4.0 version to Android 6.0** is recommended. Since Android 2.3X and below version system lacks relevant support, when using these version system to connect the product, some functions (such as: mobile video play, etc.) may not display normally.
- Since the mobile phone data cable performance difference in the market, it is strongly recommended using the **original USB data** line to connect so as to guarantee the connection stability.
- Due to the difference of mobile phone performance, when using different mobile phones to connect, the performance may be different.


Connect with iPhone

- ☛ Connect your iPhone to the USB port of the unit.
- ☛ Open the Personal Hotspot on the settings menu of your iPhone.
- ☛ Open the control center of your iPhone and touch [AirPlay].
- ☛ Choose **XX:XX:XX:XX:XX:XX@Apple TV**, then mirror come.
- ☛ After connecting successfully, the desktop of you iPhone will display on the screen of the unit.


(If it is not connected successfully, please restart the WiFi of your iPhone, and refresh the hotspot list on the unit.

Wi-Fi Settings

- ☛ Connect the WiFi dongle to the unit. Touch the [Settings] icon on the main menu to enter setting menu, and turn on Wi-Fi (if necessary).

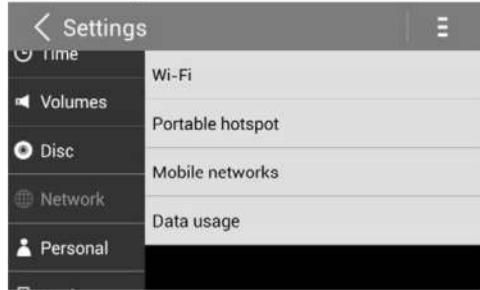


- ☛ Touch [Wi-Fi] to enter WiFi setting menu.

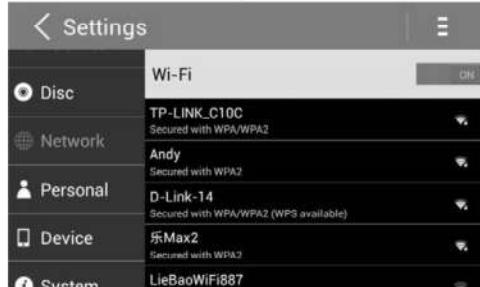

- ☛ Touch an available WiFi hotspot.



- ☛ Touch [Password] and input the password, touch [Connect] to confirm.

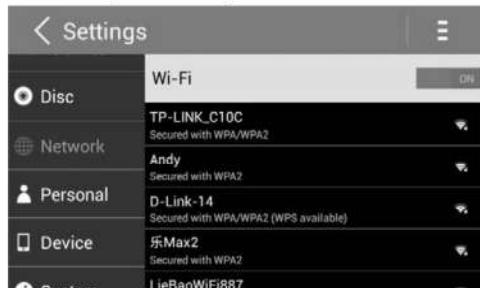**Visit Website**

To access the internet, you must setup "wireless & network" in system settings menu.

Select [] on the main menu to view a website.

Touch the dialog box on the upper side of the screen to show keypad. Input the website address, and touch [Go] to visit it. Drag the web page to scroll.

E-mail


Select [Email] or other mail software on the applications menu.

First you must setup an account, or sign into an existing account. Enter your Email address and password. Then you can send/receive E-mails through the unit.

Sound settings

Select [EQ] on the menu to enter sound setting mode.


Touch to select a preset EQ on upper side of the screen from Flat, Pop, User, Rock, Techno, Classic and Jazz.

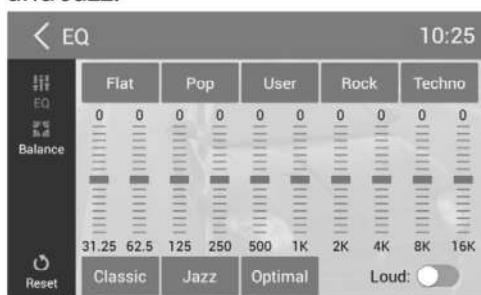

[Loud]: When listening to music at low volumes, this feature will selectively boost certain bass and treble frequencies.

Touch [] to enter Fader/Balance/Subwoofer setting menu.

Touch [◀] or [▶] to setup Balance, touch [▲] or [▼] to setup Fader.

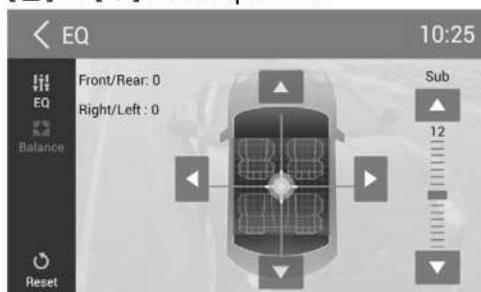

Sub Woofer

Sub woofer Level: Touch [▲] or [▼] to adjust subwoofer Level.

Navigation Operations

To navigate by the unit, simply select the desired navigation application on the main menu. Then navigate by the touch screen.

AUX Operations

Select [A/V In 1]/[A/V In 2] on the main menu to visit auxiliary device.

Steering Wheel Control

Select [SWC] on the main menu to enter SWC setting menu.

→ Touch number button to select a SWC button.



→ Select a function.

→ Press each individual steering wheel control button for each corresponding function.

→ Touch [Study] to program.

→ Once the final steering wheel control button is programmed, the functions are saved and the programming will end.

→ Touch [Reset] to reset the programming.

Basic Settings

In the settings menu, you can adjust the basic settings for the different functions of the device to your requirements.

In the main menu, press the [Settings] button. The settings menu is displayed, the General sub-menu is activated.

General

The following setting are possible:

Lighting - You can select the key color.

Radio region - Select the reception region for the radio reception.

Microphone - Internal/External microphone for Bluetooth calls.

Modify boot password - You should input the old password first, then set a new 4-digit password. (Default boot password:0000.)

Blackout - Choose screen blackout off, 15s or 30s.

Beep - Switch confirmation beep on/off.

Quick gesture operations definition.

Video

If "Parking" is activated, video/pictures will not be displayed during driving. Please set according to local laws.

Time

To setup Date & time.

Volumes

You can adjust the volume ratio for all audio sources in the volume menu.

Disc

Audio - Select DVD audio language. Options available depending on DVD disc.

Subtitle - Select DVD subtitle language. Options available depending on DVD disc.

Disk Menu - Select DVD menu language. Options available depending on DVD disc.

AgeControl - KID SAF/G/PG/PG13/PGR/R/NC17/ADULT

Parental - Set password to restrict the play of discs.

Networks

To setup the wireless configuration, such as Wi-Fi.

Personal

To setup Location access, Security, Language & input, Factory data reset, All data erase, Accounts, etc.

Device

To setup Brightness, Storage, Apps.

System settings

Accessibility

To setup accessibility related applications.

You need download a screen reader and establish an account.

Software version

To view software version information.

UUID QR code

To view UUID QR code information.


ENGLISH

Scope of delivery

The scope of delivery includes:

- 1 car sound system
- 1 operating / installation instructions
- 1 GPS antenna
- 1 external Bluetooth microphone
- 1 remote control (incl. battery)
- 7 connecting cable
- 4 screws M5*6
- 1 mouting bolt
- 1 rubber cusor
- 1 trim ring
- WIFI Dongle (Optional, not include in the package.)
- 3G Dongle (Optional, not include in the package.)

Connection diagram

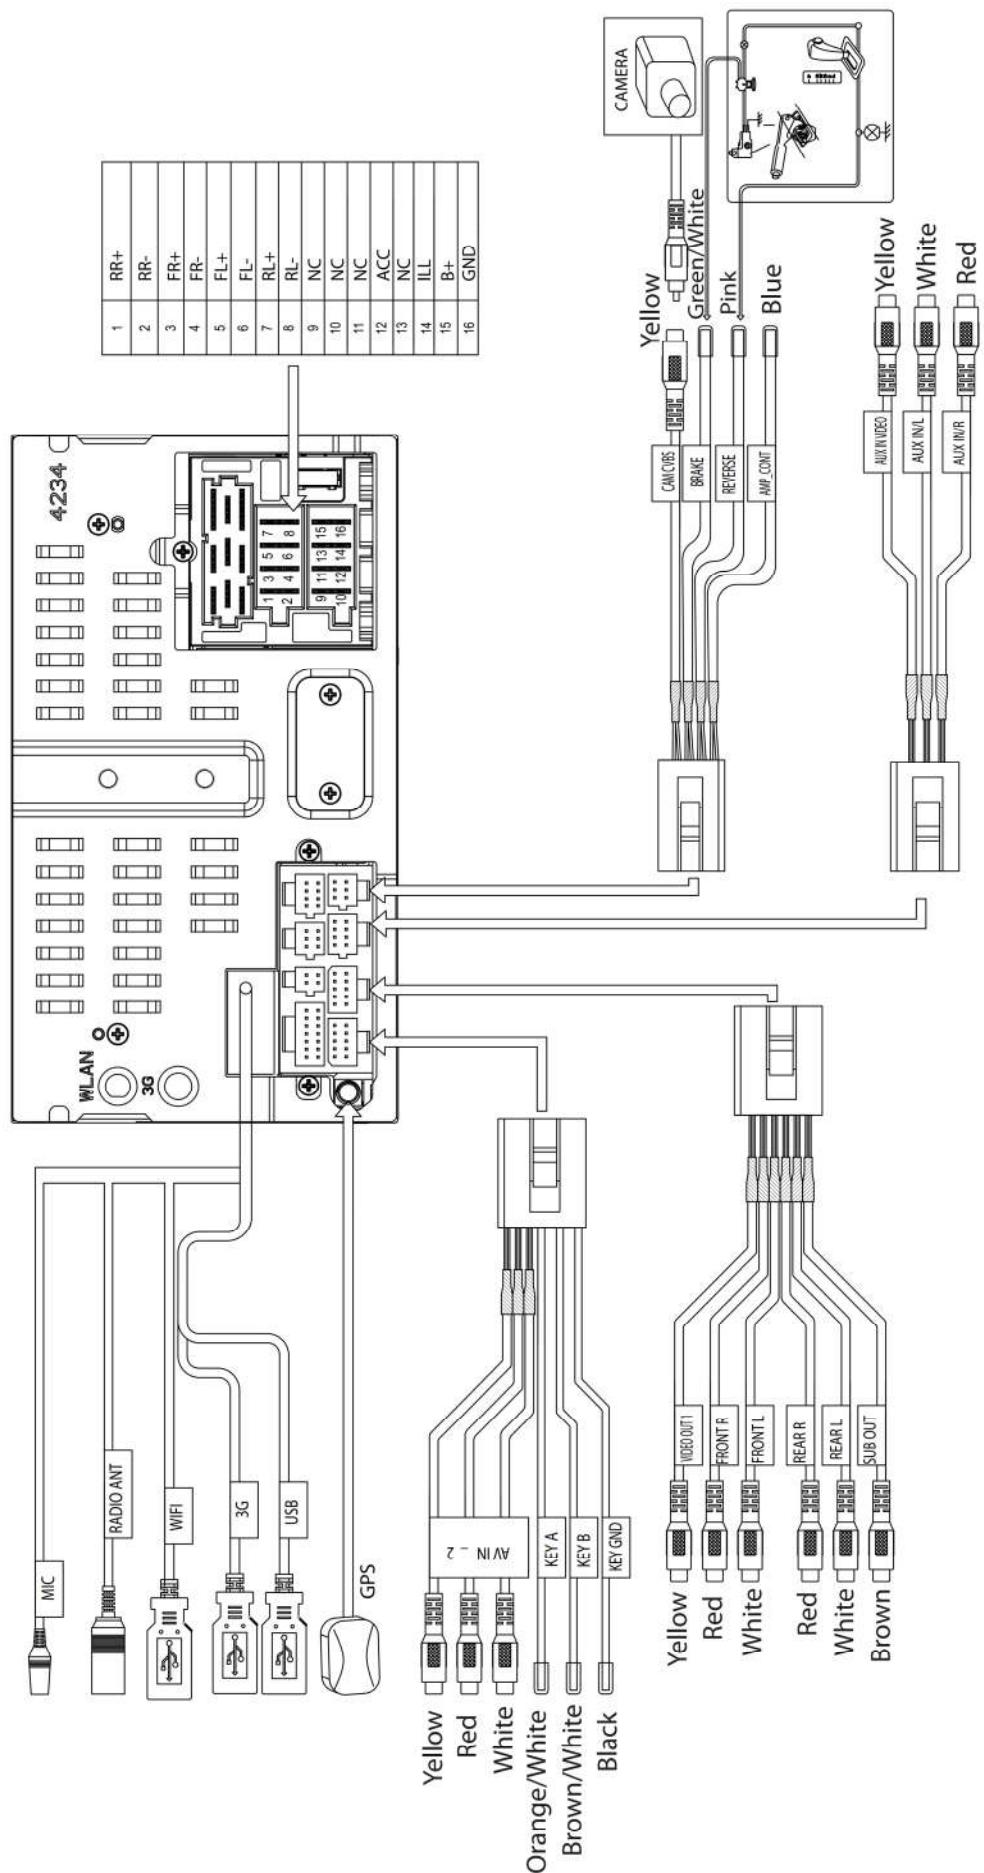

Notes of connection

- This unit is designed to be used in a vehicle with a 12-volt battery and negative grounding. Before installing this unit to a recreational vehicle, a bus, or a truck, make sure the battery voltage is appropriate for this unit to be used, otherwise, have a professionally installed transformer to convert the output voltage to 12V.
- To avoid short circuit in the electrical system, ensure that the negative battery cable is disconnected before installation.
- To prevent short circuit in the wiring and damaging to this unit, secure all wirings with cable clamp or adhesive tape. Route the wirings in a secured, out of heating place without touching any moving parts such as gear shift, handbrake, and seat rails to prevent the wiring insulation being melted / worn off.
- Never pass the yellow power cord through the installation hole into the engine compartment and connect to the car battery. Otherwise, a high possibility of serious short circuit to the electrical system may occur.
- If you need to replace the fuse, please replace with a 15A fuse. Using no fuse or a fuse with an improper rating may cause damage to the unit or a potential fire. If a proper fuse is installed and problems continue to occur, please contact your local retailer or installer.
- DO NOT connect other equipments with the car battery to avoid battery overheating.
- Please make sure all the wiring connections & the cables of the speakers are well-insulated. Otherwise, this unit may be damaged by short circuit.
- If there is no ACC available, please connect ACC lead to the power supply with a switch.
- If an external power amplifier is connected, please don't connect P.CONT lead to the power lead of the external power amplifier, otherwise, electric spark or other damage may result.
- Never ground the speaker output to prevent the damage to the built-in power amplifier.

ENGLISH

Troubleshooting

The following checklist can help you solve the problems which you may encounter when using the unit. Before consulting it, check the connections and follow the instructions in the user manual.

Problem	Possible cause	Solution
General		
The unit will not switch on.	Car ignition is not on. Cable is not properly connected. Fuse is burnt.	Turn your car key in the ignition. Check cable connection. Replace fuse with a new fuse of the same capacity.
No sound	Volume is set at minimum or the mute function is on.	Check the volume or switch the mute function off.
The unit or screen does not function normally.	The unit system is unstable.	Press the RESET button.
Remote control		
The remote control is not working or does not work properly	The battery is low or empty.	Change the batteries.
DVD mode		
The appliance will not play discs.	The disc is inserted incorrectly. The disc is dirty or damaged.	Disc must be inserted with the label side facing up. Clean the disc and check for damage. Try another disc.
Sound skips due to vibration.	Mounting angle is over 30°. Mounting is unstable.	Adjust mounting angle to less than 30°. Mount the unit securely with the supplied parts.
TUNER mode		
Unable to receive stations.	The antenna is not connected properly.	Connect the antenna properly.
Poor quality reception of radio station.	The antenna is not fully extended or it is broken.	Fully extend the antenna and if broken, replace it with a new one.
Preset stations are lost.	The battery cable is not properly connected.	Connect the permanent live on the unit to the permanent live on the vehicle.
USB mode		
Unable to insert USB device.	The USB device has been inserted the wrong way round.	Insert USB the other way around.

- Video

File Format	File Extension	Video Codec	Audio Codec	Video BitRate (kbps)	Audio BitRate (kbps)	Audio SampleRate (kbps)	Video Profile
MPEG	*.mpg *.mpeg *.dat *.vob *.m2v *.m1v	MPEG-1 MPEG-2	MPEG AC3 PCM MP3			MP3 8KHz/16KHz/1/32KHz 11KHz/22K/44KHz 12KHz/24K/48KHz	
AVI	*.avi	MPEG-1; MPEG-2; MPEG-4; MJPEG; H.264; H.263; Sorenson H263	MPEG MP3 AC3 PCM AAC FLAC		MP3 8K~320K	AC3 32KHz/44.1KHz/48KHz	
RM	*.rm *.rmvb	RV	COOK AAC		AC3 32K~640K	COOK 32K/44.1KHz	MPEG-1 N/A MPEG-2
FLV	*.flv	H264 Sorenson H263	PCM MP3 AAC		COOK 8K ~ 96K	APE 8K/16K/32K	simple(LL,ML,H-14,HL) main(LL,ML,H-14,HL) MPEG-4
MP4	*.mp4 *.mov *.m4v *.mp4 *.m4v *.3gp *.m4a (audio only)	MPEG-1; MPEG-2; MPEG-4; H.264; H.263; MJPEG; Sorenson H263	AAC MPEG MP3, AC3 PCM	BitRate:40Mbps FrameRate:30fps Resolution:1080P H263 only support: 128x96, 176x144, 352x288, 704x576, 1408x1152	800K~1.MK 64K ~ 16.2M <320K	11.025K/22.05K/44.1K/88.2K 12K/24K/48K/96K 88.2K/176.4K/192K 8K/16K/22.05K 24K/32K/44.1K 48K/96K	simple(L0,L1,L2,L3) advanced simple(L0,L1,L2,L3,L4,L5) H.264 baseline(<=L4.1) Extended(<=L4.1) main(<=L4.1) High(<=L4.1) High10(<=L4.1) H.263 Baseline Sorenson H263 N/A RV RV30;RV40
MKV	*.mkv	MPEG-1; MPEG-2; MPEG-4; H.264; RV; H.263; MJPEG; Sorenson H263	MPEG MP3 AC3 AAC PCM FLAC		VORVIS unlimited	AAC 8 ~ 96KHz	
OGM	*.ogm	MPEG-2; MPEG-4; H.264; RV; H.263	MPEG MP3 AC3, PCM AAC, RA_COOK VOBIS		MPEG 32KHz/44.1KHz/48KHz PCM 8KHz/16KHz/32KHz 11KHz/22KHz/44KHz 12KHz/24KHz/48KHz 48KHz/96KHz/192KHz		
TS	*.ts *.m2ts *.m2t *.tp *.trp	MPEG-2 H.264	MPEG MP3 AAC AC3				

ENGLISH

Supported formats

• Audio

File Format	File Extension	Audio Codec	Audio BitRate(kbps)	Audio SampleRate(kbps)
MP3	*.mp1 *.mp2 *.mp3	MPEG MP3	MP3 8K~320K MPEG 32K~912K	MP3 8KHz/16KHz/1/32KHz 11KHz/22K/44KHz 12KHz/24K/48KHz MPEG 32KHz/44.1KHz/48KHz
AAC	*.aac	AAC	AAC <320K	AAC 8 ~ 96KHz
WAV	*.wav *.pcm	PCM Microsoft ADPCM IMA ADPCM	PCM 64K~9.216M	PCM 8KHz/16KHz/32KHz 11KHz/22KHz/44KHz 12KHz/24KHz/48KHz 48KHz/96KHz/192KHz
FLAC	*.flac	FLAC	FLAC 64K ~ 16.2M	FLAC 88.2K/176.4K/192K 8K/16K/22.05K 24K/32K/44.1K 48K/96K
APE	*.ape	APE	APE 800K~1.MK	APE 8K/16K/32K 11.025K/22.05K/44.1K/88.2K 12K/24K/48K/96K
AC3	*.ac3	ac3	AC3 32K~640K	AC3 32KHz/44.1KHz/48KHz

• Picture

File Format	File Extension	Video Profile
JPEG	*.jpg *.jpeg	Baseline: no limitation progressive: width * height < 4096*4096 file size <20M
PNG	*.png	File size <20M
BMP	*.bmp	The size id depend on Android system, not hardware code
GIF	*.gif	GIF file size <20M Resolution: width * height < 4096*4096

電源開關：按面板上【】電源鍵開機。



1. 復位孔

恢復出廠設置

2. ▲ 退出鍵

按此鍵退出光碟 (當有碟片插入時)

3. 電源鍵

- > 開機 / 關機 (長按)
- > 進入靜音狀態 (短按)

4. 主菜單鍵

- > 按此鍵顯示主菜單 (短按)
- > 按此鍵顯示菜單選項 (長按)

5. 返回鍵

按此鍵返回上一級菜單。

6. 音量鍵 + / -

按此鍵增加/減少音量。


7. 麥克風 (本機配備有內置和外置麥克風)

建議使用外置麥克風，以獲取更好的聲音質量，內置麥克風僅供應急備用。

8. 碟槽

將光碟有標識的一面向上插入碟槽。

9. 地圖卡插槽

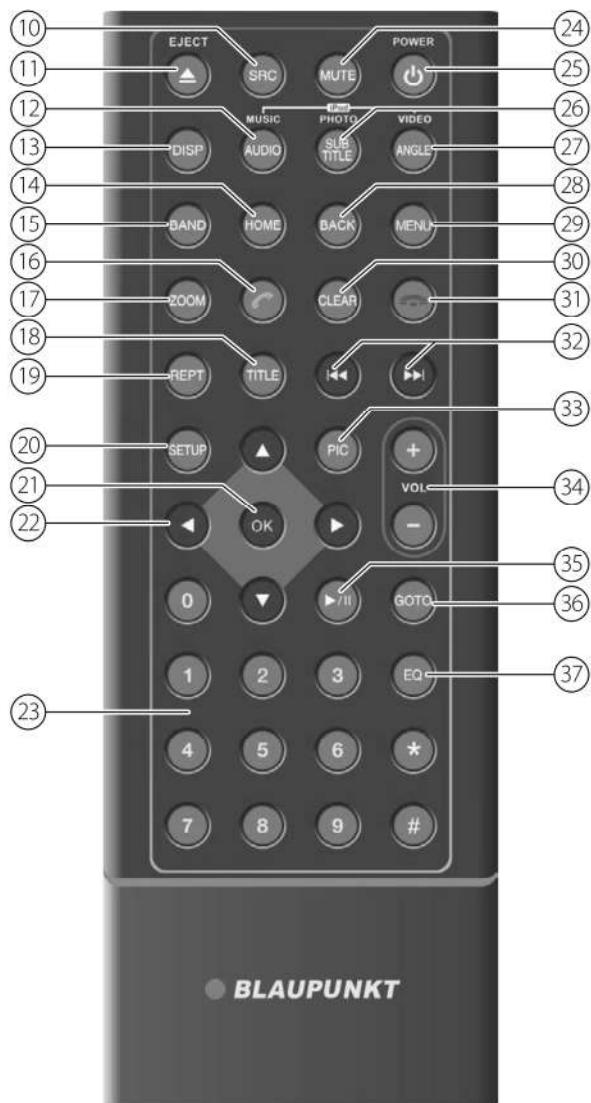

10. 模式選擇鍵
11. 出碟鍵
12. 選擇音頻語言
顯示歌曲目錄
13. 顯示播放信息
14. 顯示主菜單
15. 收音波段轉換
16. 撥號 / 接聽 (藍牙模式下)
17. 圖像變焦
18. 顯示 DVD 標題
19. 重複播放
20. 設置菜單
21. 確定鍵
22. 方向鍵 (上 / 下 / 左 / 右)
上 / 下鍵: 收音調臺
23. 數字鍵
24. 静音鍵
25. 電源鍵
26. DVD 字幕選擇
27. DVD 角度選擇
28. 返回鍵
29. 主菜單
30. 清除鍵
31. 掛機 (藍牙模式下)
32. 上一曲 / 下一曲
自動搜臺 (長按)
快退 / 快進 (長按)
33. 屏幕設置
34. 音量調節
35. 播放 / 暫停
36. 進入搜索模式
37. 進入 EQ 設置

基本操作	26
開機和關機	26
靜音	26
調節音量	26
模式選擇	26
倒車時自動顯示後視鏡圖像	26
禁止駕駛觀看	26
設置開機密碼	26
設置個性化桌面	26
主菜單	27
進入主菜單	27
應用程序菜單	27
收 音	27
選擇波段	28
手動調臺	28
自動搜臺	28
自動搜索存儲預置電臺	28
手動存儲預置/收藏電臺	28
讀取預置電臺	28
遠/近程搜索	28
頻率搜索	28
RDS	28
調節RDS設置	29
TA (Traffic Announcement)功能	29
AF(Alternative Frequency)功能	29
CT (時鐘)	29
PTY (Programme Type)功能	29
播放碟片	29
插入碟片	29
彈出碟片	29
DVD播放界面	29
CD播放界面	30
混合碟片播放	30
暫停播放	31
前進/後退	31
快進/快退	31
重複播放	31
隨機播放	31
搜索	31
DVD音頻選擇	31
VCD聲道選擇	31
DVD字幕選擇	31
USB操作	32
音樂播放	32
播放/暫停	32
上一曲/下一曲	32
快進/快退	32
按演出者選擇音樂	33
按專輯選擇音樂	33
按名稱選擇音樂	33
視頻播放	33
圖片庫	34
藍 牙	34
藍牙配對	34
撥打電話	35
斷開手機連接	35
通訊錄	35
通話記錄	35
藍牙菜單設置操作	35
手機互聯	36
手機互聯概述	36
連接安卓手機步驟	36
連接iPhone步驟	36
網絡應用	37
Wi-Fi設置	37
訪問網頁	37
電子郵件	37
音效設置	38
導航	38
輔助設備	38
SWC方向盤控制	38
系統設置	39
附件清單	39
電氣連接	40
故障排除	42
支持格式	43

提示:

在開始裝置前，請先移除機器頂部的機芯固定螺絲。（此螺絲僅在運輸途中起固定機芯的作用）

開機和關機

開機：按[]按鍵啓動主機。

關機：在工作模式下，長按[]按鍵即可關機。

靜音

播放時，短按[]按鍵進入靜音模式。

注意:

- 再次短按[]鍵或者調節音量將退出靜音狀態。

調節音量

按[]或[]鍵增加或減小音量。

音量調節的範圍從0到40。

模式選擇

- 開機狀態下，按[]鍵顯示主菜單。
- 在屏幕底部的工具欄裏點擊相應的圖標，進入選擇的模式，如碟片、導航、收音等。
- 在程序欄內按住屏幕並左右拖動以顯示更多內容。

倒車時自動顯示後視鏡圖像

如果倒車檢測線連接了手剎開關，屏幕顯示活動圖像將受停車線控制。

禁止駕駛觀看

- 若停車控制線“行車禁止播放”連接了手剎車開關，並且“行車時視頻”設置為開啟，屏幕圖像顯示將受停車線控制。
- 汽車在行駛時播放活動圖像，屏幕將顯示警告畫面，以保證行車安全。

設置開機密碼

本機需輸入開機密碼才可進入主菜單。

► 本機默認的開機密碼：0000。

► 用戶也可以更改開機密碼：在主菜單點擊[]進入系統設定界面，在通用設定選擇[變更開機密碼]後輸入舊密碼，并輸入二次新密碼，點擊[確定]，就可進行密碼的更改。



► 用戶如果忘了自己新設定的開機密碼，也可輸入萬能密碼：8078。

設置個性化桌面

按主菜單的[]鍵，出現個性化設置窗口。



► 選擇主題：

[主題1], [主題2]

(主題2為默認主題)

► 選擇播放模式

[桌面]: 顯示本機存儲的牆紙，按住并左右拖動查看更多內容。

[動態桌面]: 顯示本機存儲的動態牆紙，按住并上下拖動查看更多內容。

[圖片庫]: 訪問移動存儲設備的圖片。

選擇喜愛的圖片進行預覽，點擊[設定桌面]進行確認。

► 選擇LOGO

進入主菜單

按面板 [] 鍵進入主菜單。



- 顯示當前播放模式
- 進入個性化桌面菜單
- 按住并向下拖動以顯示提示信息。
- 車載音響播放模式
左右拖動顯示更多內容
點擊圖標進入相應的模式。
- 時間日期等標識顯示
- 進入音樂界面
- 進入收音機界面
- 顯示應用程序菜單
- 進入藍牙電話界面
- 進入設置菜單

應用程序菜單

點擊 [] 顯示應用程序列表。



- 車載
顯示車載影音程序。
- 應用程式
顯示已安裝的安卓程序。

在列表菜單，左右拖動進行翻頁。

按住一個圖標超過兩秒拖到桌面，可將其快捷方式添加到桌面。如果需要刪除快捷方式，將其拖到屏幕頂部的[X]，當圖標變紅時松開。

收音

在主菜單點擊 [收音] 進入收音模式。



- 返回主菜單
- 上一頻率 / 向后搜索(長按)
- 當前頻率
- 下一頻率 / 向前搜索(長按)
- 選擇預設EQ
- 用來指示當前臺是否為收藏電臺；如果是，點擊會取消收藏；如果不是，點擊會進入收藏列表管理界面
- 自動搜索存儲預置電臺
- 顯示搜索到的電臺列表；搜索時默認更新此列表
- 收藏列表，即收藏喜歡的電臺
- 波段轉換
- 當前波段預置電臺
- 顯示其余控制鍵



- 進入收藏列表管理界面
- 選擇接收本地或遠程電臺。
- 打開搜索菜單
- 靜音
- 隱藏第二行控制鍵
- RDS 設置

選擇波段

點擊屏幕下方 [BAND] 鍵選擇波段：FM和AM。

手動調臺

手動調臺時，頻率一步步變化。

點擊 [$<$] 或 [$>$] 選擇上一/下一頻率。

自動搜臺

長按 [$<$] 或 [$>$] 自動搜索上一/下一有效電臺。

如果要停止搜索，重複以上操作或進行其它收音操作。

自動搜索存儲預置電臺

點擊屏幕下方 [] 鍵，本機會自動搜索有效電臺並自動保存。

如果要停止搜索，進行其它收音操作。

注意：

進行此操作將覆蓋之前存儲的電臺。

手動存儲預置/收藏電臺

- 調臺至希望存儲的電臺，點擊屏幕的 [] 鍵，顯示收藏列表管理界面。
- 從列表中選擇合適的位置存儲當前電臺。
- 點擊左上角退出。



讀取預置電臺

方法1：

點擊屏幕下部的 [] 鍵選擇相應的預置電臺。

選擇波段

在屏幕中間，左右拖動，點擊列表中的電臺收聽節目。

方法2：

點擊 [] 鍵顯示收藏的電臺列表。

選擇波段

在屏幕中間，左右拖動，點擊列表中的電臺收聽節目。

遠/近程搜索

當近程模式開啓，只接收強信號電臺。

點擊控制欄 [....] 鍵，然後點擊 [] 選擇“遠程”或“近程”。



注意

當近程模式開啓，收聽的電臺數將會減少。

頻率搜索

點擊控制欄 [] 鍵進入頻率搜索界面。

點擊屏幕上的數字鍵輸入頻率，點擊 [OK] 收聽。



點擊 [\times] 鍵清除數字。

RDS

本機支持RDS(Radio Data System)廣播。使用前請確認您所在區域可收聽RDS廣播。RDS功能僅在FM模式下生效。



調節RDS設置

在收音菜單下，輕觸 [] 圖標。顯示RDS 設置菜單。

- [TA]: 打開或關閉 “TA” 功能。
- [AF]: 打開或關閉 “AF” 功能。
- [REG]: 打開或關閉 “REG” 功能。
- [CT]: 打開或關閉 “CT” 功能。
- [PTY]: 進入節目類型清單。

TA (Traffic Announcement)功能

如果您在欣賞音樂時不想錯過交通廣播，則可以打開 [TA] 功能。發布交通廣播時，本機會切到調諧器模式（無論當前處於什麼模式）開始廣播關於交通狀況的公告。交通廣播結束後，本機返回到原模式。

AF(Alternative Frequency)功能

如果從當前電臺接收的不良信號電臺，您可以打開 [AF] 功能讓本機搜尋信號 stronger 但具有相同節目編號的其它電臺。

CT (時鐘)

有些電臺在RDS編碼信號中發送時間和日期信息。當CT設置打開時，時間會自動調整。

PTY (Programme Type)功能

PTY是正在播出具有決定性節目類型的類型代碼（如新聞或搖滾樂）的縮寫。

PTY選項會顯示在屏幕上。輕觸屏幕上的滾動條，可查看更多PTY選項。

當一個PTY選項被觸摸（如新聞），本機會通過增加調諧頻率自動尋找下一個可用的PTY，直到查找到下一個PTY匹配的電流。如果沒有發現匹配的PTY，本機將返回到原來的無線電頻率。

插入碟片

將碟片有標識的一面朝上插入碟槽，本機會自動吸入光碟並開始讀取。

注意:

1. 入碟前請確認碟槽內是否已經有碟。
2. 入碟後，將退出當前模式，自動進入光碟播放模式。
3. 因刻錄方式不同，部分CD-R, CD-RW, DVD-R, DVD+R, DVD-RW, DVD+RW可能無法播放。

彈出碟片


按面板 [▲] 鍵彈出光碟。

注意:

1. 出碟後，自動轉換到其他可播放模式。
2. 請在出碟後10秒內取走光碟，否則光碟會再次吸入以免意外損壞。

DVD播放界面

在播放過程中點擊屏幕(除左上角)，顯示控制鍵。

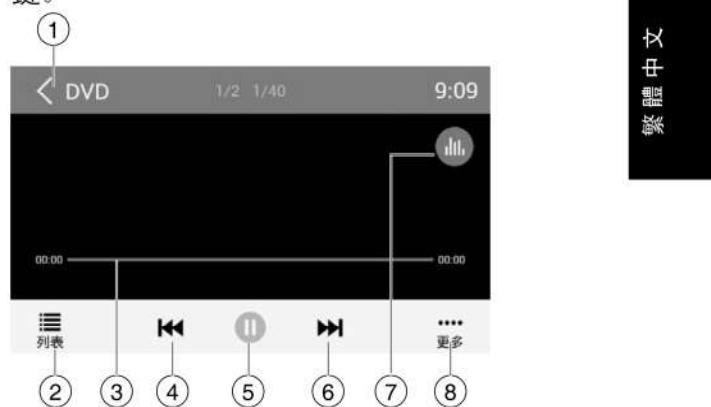

1. 返回主菜單
2. 顯示DVD目錄
3. 播放進度條
4. 上一章節
快退 (長按)
5. 暫停/播放
6. 下一章節
快進 (長按)
7. 進入預設EQ界面
8. 顯示更多控制按鍵



9. 循環播放
10. 進入搜索界面
11. 選擇音頻語言
12. 選擇字幕語言
13. 選擇播放角度(如果DVD包含多角度畫面)
14. 隱藏第二行控制鍵

CD播放界面

插入一張CD碟片，本機會自動讀取碟片內容。
部分碟片可能需要選擇播放音樂、視頻或圖片。



1. 返回主菜單
2. 打開文件列表
3. 上一曲/快退(長按)
4. 暫停/播放
5. 下一曲/快進(長按)
6. 顯示更多控制按鍵



7. 順序播放
8. 循環播放
9. 進入搜索界面
10. 隱藏第二行控制鍵


混合碟片播放

當插入混合碟片，本機會顯示文件列表，部分碟片可能需要選擇播放音樂、視頻或圖片。



1. 返回主菜單
2. 顯示音樂文件列表
3. 顯示視頻文件列表
4. 顯示圖片文件列表
5. 顯示目錄文件夾
6. 文件/文件夾列表
上下拖動瀏覽列表。
點擊文件名進行播放。

瀏覽圖片時，點擊屏幕顯示控制鍵。

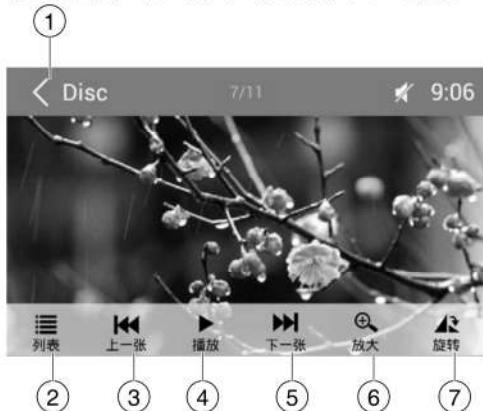

1. 返回主菜單
 2. 打開文件列表
 3. 上一張圖片
 4. 暫停/播放
 5. 下一張圖片
 6. 放大
 7. 順時針旋轉
- * 音頻、視頻文件播放請參考CD/DVD播放界面。

暫停播放

- ▶ 在播放時，按 **II** 鍵暫停播放。
- ▶ 按下 **>** 鍵繼續播放。

前進/後退

按 **<< / >>** 鍵選擇上一曲(章節)/下一曲(章節)。

快進/快退

播放時長按 **<< / >>** 鍵快進/快退。

重複播放

播放時，您可以選擇不同的循環播放模式，反復輕觸 **[II]** 圖標，根據播放文件格式不同，重複功能的選擇也不同，執行重複時所呈現的文字解釋如下：

- [II]**: 重複播放當前曲目。
- [II]**: 重複播放所有的曲目播放。
- [II]**: 取消重複播放。
- [II]**: 反復播放當前章節。
- [II]**: 反復播放標題中的所有章節。

隨機播放

隨機播放任一曲目/章節。

播放時，按 **[II] / [II]** 鍵進入隨機 / 順序播放模式。

搜索

- ▶ 在播放界面，點擊工具欄 [跳轉]。
- ▶ 點擊屏幕上的按鍵輸入數字。
- ▶ 點擊 **[OK]** 確認。

DVD音頻選擇

按 **[>>]** 鍵選擇音頻語言。
(如果DVD碟片包含多種音頻語言)

VCD聲道選擇

按 **[>>]** 鍵選擇 VCD 左聲道 / 右聲道 / 立體聲。

DVD字幕選擇

按 **[...]** 鍵選擇字幕語言。
(如果 DVD 碟片包含多種字幕語言)

USB操作

- 將 USB 設備連接到本機的 USB 接口。
當連接到USB，本機會自動讀取內容。
- 如需斷開連接，為避免數據損壞，請先切換到其它模式。

音樂播放

在程序菜單選擇[音樂]模式，本機將自動掃描移動存儲設備上全部音樂文件。



- 返回主菜單
- 選擇存儲設備
- 顯示收藏音樂列表
- 顯示新增音樂列表
- 按歌曲名字排列樂曲。
點擊樂曲名字開始播放。
- 按演出者排列文件。
- 按專輯排列文件。
- 顯示文件夾。
- 列表窗口
上下拖動瀏覽內容。
點擊選項進行選擇。
- 進入搜索界面。



- 點擊收藏此音樂
- 顯示文件列表
- 上一曲
快退(長按)
- 暫停/播放
- 下一曲
快進(長按)
- 顯示其余控制鍵



- 隨機/順序播放
- 循環播放
- 進入隨心聽模式
- 隱藏第二行控制鍵

播放/暫停

播放中，點擊 [II] 鍵暫停，此時無聲音輸出。
點擊 [▶] 鍵恢復播放。

上一曲/下一曲

點擊 [◀] 或 [▶] 鍵播放上一首歌曲下一首歌曲。

快進/快退

長按 [◀] 或 [▶] 鍵快退/快進播放。

按演出者選擇音樂

- 點擊屏幕上部 [歌手]。
- 點擊列表窗口中的演出者名稱顯示專輯 / 歌曲列表。
- 點擊歌曲名稱進行播放。

按專輯選擇音樂

- 點擊屏幕上部 [專輯]。
- 點擊列表窗口中的專輯名稱顯示歌曲列表。
- 點擊歌曲名稱進行播放。

按名稱選擇音樂

- 點擊屏幕上部 [歌曲]。
- 點擊列表窗口中的歌曲名稱進行播放。

視頻播放

在程序菜單選擇 [視頻]，本機將自動掃描移動存儲設備上全部視頻文件。
播放中點擊屏幕(除左上角)，顯示控制鍵。



- 返回主菜單
- 選擇文件源
上下拖動瀏覽列表。
點擊文件名進行播放。
- 文件/文件夾列表
- 列表與縮略圖的切換



- 顯示文件列表
- 上一章節
快退 (長按)
- 暫停/播放
- 下一章節
快進 (長按)
- 進入音效設置菜單
- 顯示其余控制鍵



- 隨機 / 順序播放
- 循環播放
- 隱藏第二行控制鍵

注意

- 當不使用USB時，請斷開連接。
- 請不要使用未授權的設備。



圖片庫

- 在主菜單選擇[圖片]
- 選擇屏幕上顯示的圖片集顯示圖片清單。



- 點擊進行瀏覽。



左右滑動翻頁

點擊左上角返回上一級菜單。

藍牙

本機具備藍牙無線傳輸功能，可連接具有藍牙功能的移動設備。本機可通過移動電話實現撥號/接聽等功能。

注意:

- 請勿將設備放置在陽光直射或高溫環境下，以免引起故障。
- 本機不保證支持所有藍牙音頻設備。
- 本機不保證支持所有型號手機。
- 藍牙音頻的音量與手機的音量是一致的。當在電話模式下將音量調得過大或過小，會影響到音頻播放。

藍牙配對

在主菜單點擊 圖標進入藍牙模式。



- 如果本機藍牙功能處于關閉狀態，會詢問您是否開啟藍牙功能。
(默認為開啓)
- 開啟手機的藍牙功能。
- 使用手機搜索新的藍牙設備，從列表中選擇本機名稱（顯示在本機藍牙配對界面的右側），並輸入配對密碼（默認密碼：1234）。或者點擊本機屏幕上的 [Q] 按鍵搜索周圍的移動藍牙設備。

連接成功後本機顯示如下界面：



撥打電話

- 撥號
- 使用觸摸屏上的數字鍵輸入要撥出的號碼。
- 點擊 [] 刪除輸入的數字。
- 點擊 [] 鍵撥出電話。
- 點擊 [] 鍵掛斷。



• 接聽

- 點擊屏幕上 [] 鍵接聽來電。
點擊屏幕上 [] 鍵拒絕接聽。



斷開手機連接

配對成功後，若要斷開手機連接，按屏幕上的 [斷開連接] 鍵，可以斷開手機和主機連接。

通訊錄

- 點擊 [] 顯示通訊錄。
- 選中一個號碼，并按 [] 鍵撥出。
- 點擊 [] 按名稱搜索。

通話記錄

點擊 [] 顯示通話記錄。



可以快速查尋到最近通話聯絡的人。

藍牙音樂播放

僅適用於具有 A2DP 和 AVRCP 功能的手機。
藍牙配對成功後，打開手機上的 MP3 音樂文件，
並選擇通過藍牙播放，手機上的 MP3 音樂播放
聲音會轉到本機。

CAUTION

請盡量避免在播放音樂時操作手機，以免造成
噪音或引起意外退出。

因手機設置不同，當接聽電話後，音樂播放有
可能無法自動恢復。

連接成功後，點擊主界面 [藍牙音樂] 開始播放
手機中的音樂。



[]：上一曲

[]：播放/暫停

[]：下一曲

[]：進入藍牙電話界面

中文
繁體

藍牙菜單設置操作

在藍牙主菜單點擊 [] 進入藍牙設置菜單。



用戶可更改以下本機藍牙設定：

[自動連接]：開啓或關閉“自動連接”功能

[自動接聽]：開啓或關閉“自動接聽”功能

[配對碼]：輸入默認密碼“1234”，您可以進
入重新設定配對碼。重新設定配對
碼完畢後，自動退出設定。

[電話簿同步]：打開“同步”功能，可把手機
中的“電話簿”同步到本機。
輕觸“同步”即可同步手機上
的電話號碼到本機中（同步過
程大約需幾分鐘時間），同步
完畢後，本機即可顯示手機電
話本上的相關資訊。

手機互聯概述

手機互聯功能是車載設備與手機進行信息交互的功能應用，對於手機本身的功能存在一定的依賴性。此功能可使您在汽車行駛過程中，不用看着手機屏幕、觸摸手機屏幕或操作手機按鍵，只需要用車機上的物理按鍵或車機的觸摸屏就可以控制和操作手機，包括接聽、撥打電話、聽手機音樂等功能。

本機支持車載終端與Android手機互控、與iPhone鏡像的功能。連接方式為標準USB接口連接。



連接安卓手機步驟

► 開啓手機 [USB調試]

手機進入“設置--關於設備”操作如下（由於手機版本不盡相同，大致有兩種情況）：

- 1) 存在“開發者選項”：點擊“開發者選項”—點擊打開“開啟開發者選項”—點擊打開“USB調試”—確定允許。
- 2) 不存在“開發者選項”：點擊系統版本號（內部版本號）8次，再回到設置中，點擊“開發者選項”—點擊打開“開啟開發者選項”—點擊打開“USB調試”—確定允許。

► 藍牙連接

需要建立手機與車載終端的藍牙連接，才能將手機音頻傳輸到車載終端，通過汽車揚聲器播放手機中的音頻內容，可以使用戶在使用本軟件的同時，方便的接聽和撥打手機電話、聽取音樂、視頻等功能。

► 用USB線和車機上專用USB接口相連。

► 完成連接。

（若未能連接成功，請更換USB線纜或車機USB接口，或重新拔插USB線或重啟手機，再次嘗試。）

► 完成連接後按屏幕軟件進行需求操作。

注：第二次連接只需直接連接USB線即可。

※提示：

- 為了您的行車駕駛安全，在開車時請勿使用該功能。
- 為了正常使用，本機推薦安卓系統**4.0版本至6.0版本**，由於Android2.3.X以下版本系統缺少相關支持，因此在使用這部分版本系統

手機連接本產品時，部分功能（如：手機視頻播放等）可能無法正常顯示。

- 由於市場上的手機數據線性能差异懸殊，強烈推薦您使用手機自帶的**原廠USB數據線**進行連接，以保證連接的穩定性。
- 由於手機性能的差异，使用不同的手機連接時，性能可能存在差异。

連接iPhone步驟

- 用USB線連接iPhone和車機。
- 在iPhone設定界面打開個人熱點。
- 從手機屏幕底部向上輕掃進入控制中心並點擊[Airplay]按鈕。
- 選擇**XX:XX:XX:XX:XX@Apple TV**，即可進行鏡像。
- 連接成功後，手機桌面將會顯示在車機上。

Wi-Fi設置

- 將 WiFi 模塊連接到本機。點擊主菜單 [] 鍵進入設置界面，開啟 WiFi (如果處于關閉狀態)。



- 點擊 [Wi-Fi] WiFi 設備界面。



- 選擇一個 WiFi 热點。



- 點擊 []，輸入密碼，進行連接。

訪問網頁

在聯接到互聯網前，請進行網路設置。

點擊應用程式菜單 [] 鍵打開網頁瀏覽器。

點擊屏幕上部的對話框，使用彈出鍵盤輸入網址，點擊[開始]進行訪問。拖動屏幕顯示更多內容。

電子郵件

在程序菜單選擇[電子郵件]或其他郵件程序。

首先建立您的帳戶，輸入郵箱地址和密碼。然後可通過本機接收 / 發送郵件。




在主菜單點擊[EQ]圖標進入音效設置菜單。

在屏幕上方選擇預置音效：原音，流行，個性，搖滾，輕快，古典，爵士或舒適。



點擊 [] 進入前後 / 左右 / 重低音設置界面。

點擊汽車模型的 [◀] 或 [▶] 圖標調整左右平衡，點擊汽車模型的 [▲] 或 [▼] 圖標調整前后衰減。

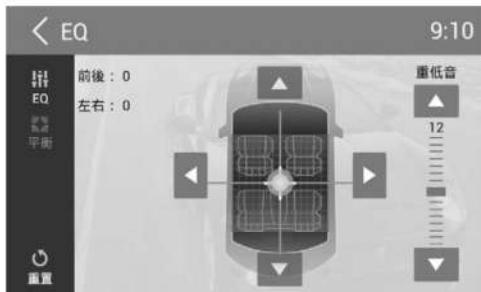

重低音

點擊 [▲] 或 [▼] 設置重低音數值。

導航

在主菜單選擇[導航]進入地圖界面，通過觸摸屏進行導航操作。

* 不要在開機狀態下取出地圖卡(Mini-SD card)。

輔助設備

在主菜單選擇[視頻輸入1]訪問前置輔助設備；選擇[視頻輸入2]訪問後置輔助設備。

SWC方向盤控制

在主菜單選擇[方向盤]進入方向盤控制界面。

點擊屏幕上數字鍵選擇一個方向盤控制按鍵。



選擇一項功能。

按下方向盤上對應的按鍵。

點擊 [學習] 開始同步。

完成新的設置後，之前設置的功能將被取消。

點擊 [重置] 恢復初始設置。

在主菜單選擇 [] 進入系統設置界面。
上下拖動顯示更多內容。



通用設置

- 燈光顏色：選擇按鍵燈光。
- 收音區域：選擇收音區域。
- 麥克風：選擇內置或外置麥克風。
- 變更開機密碼：可以更改開機密碼（原始開機密碼為 0000）
- 黑屏模式：選擇屏幕保護狀態（關 /15 秒 /30 秒）。
- 蜂鳴器：開啓 / 關閉按鍵音效。
- 手勢快捷操作定義

視頻

- 行車時視頻：開啓 / 關閉行車禁止播放功能。

時間

設置時間 / 日期

音量設定

- 您可針對不同的音源設定不同的音量增益，以使各個音源的音量輸出差異符合您的習慣。
- 輕觸 [音量]，顯示音源音量增益設定界面。
 - 選擇相應音源，輕觸滑鈕調節音量範圍：0 至 40。

Disc

- 聲音：選擇 DVD 音頻語言。
- 副標題：選擇 DVD 副標題語言。
- Disk 菜單：選擇 Disk 菜單語言。
- 級別等級：設置童鎖等級。
- Kid safe(限制等級最高), G, PG, PG-13, PG-R, R, NC-17, 成人(無限制)。
- 家長控制：設置童鎖密碼。在彈出的子菜單中輸入 4 位數的密碼，點擊 [確認] 確認輸入，點擊 [刪除] 刪除輸入的數字。

網路

設置無線網絡。
WiFi 設置請參考 “網絡應用”。

個人

設置定位服務、安全及語言等。

裝置

設置亮度、儲存空間及應用程式。

系統


顯示軟件版本等信息。

附件清單

本機包含如下附件：

- 1 主機
- 1 說明書
- 1 GPS 天線
- 1 外置藍牙麥克風
- 1 遙控器（包含電池）
- 7 整機配線
- 4 螺釘 M5*6
- 1 安裝螺栓
- 1 緩衝器
- 1 裝飾框
- WIFI Dongle (選配，不包含)
- 3G Dongle (選配，不包含)

連線圖

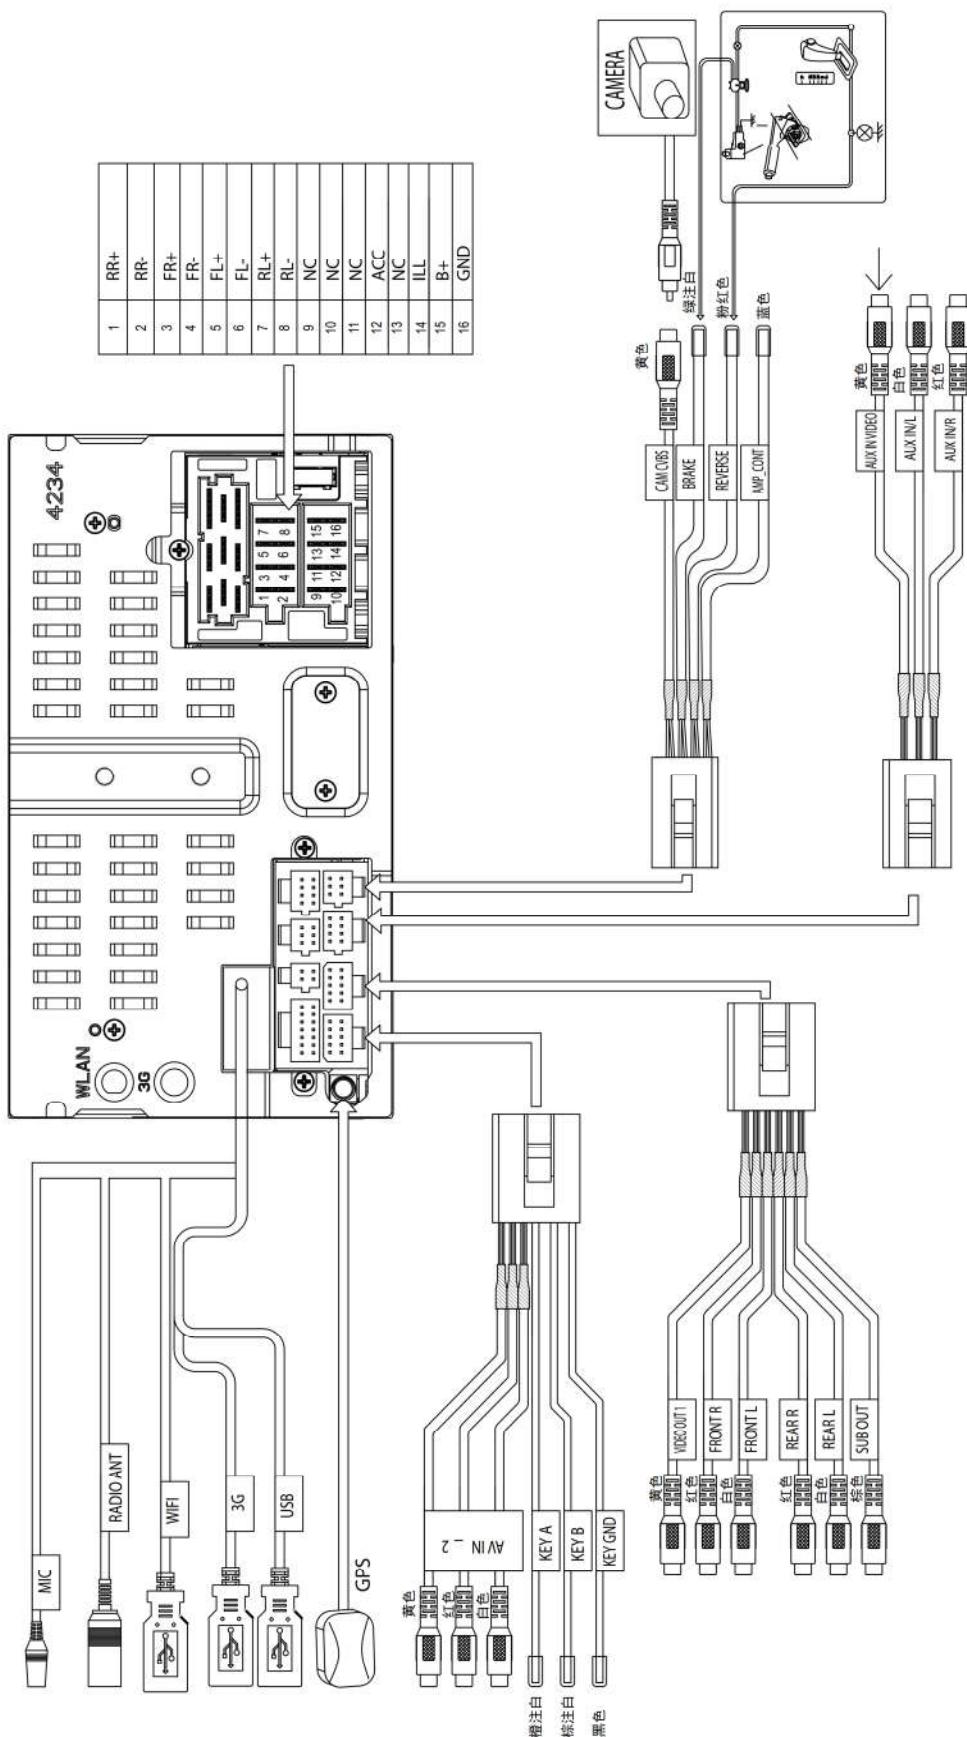

控制線連接注意事項

- 本機用於 12V 電池和負極接地的車輛，若將本機安裝在 24V 電池系統的車輛，請安裝降壓裝置。
- 為避免電氣系統短路，在安裝前應斷開電池的負極端的連線。
- 請將接線布置在可固定的地方，使其無法接觸任何移動部件，如手剎、變速杆、座椅固定道軌等；不要將接線布置在熱源區，如暖氣排放口附近等，否則會引起接線的絕緣層熔化或磨損，進而引起接線與車身短路。
- 不要將黃色電源線穿過安裝孔引入引擎倉再接電池，否則可能損壞電源線，進而引起電源線與車身短路。
- 更換保險絲時，請使用指定規格 (15A) 的保險絲，使用規格不匹配的保險絲可能導致無法正常工作，甚至損壞本機或引發火。
- 請勿將其他設備與本機共用電源，否則可能因過載導致故障。
- 當打開本機電源時，外接功放控制信號通過引線 P.CONT 輸出，若本機連接了外接功放，請不要將 P.CONT 引線連接至功放的電源端，否則會引發故障。
- 本機的揚聲器輸出端子嚴禁接地，否則將會燒壞功放。請勿使用共接地線的 3 線型揚聲器系統，不可將揚聲器線接在車體上。
- 連接本機的揚聲器的最小額定功率為 45W，阻抗值為 $4 \sim 8\Omega$ 。
- 務必將裸露的電線端口用絕緣膠帶捆扎好，避免與機身金屬部分碰觸，否則可能造成短路引發故障或火。

中文
說明
索引

故障排除

如果機器出現問題，請立即關閉電源。以下內容可幫助您判斷機器是否需要維修。
請勿擅自進行修理，如需維修，請聯系維修中心或經銷商。

問題	原因	解決方法
一般		
無法開機	汽車點火開關處於關閉狀態。	打開汽車點火開關。
	電線連接不正確。	檢查接線。
	保險絲熔斷。	更換指定規格保險絲。
沒有聲音	音量過小或開啟了靜音模式。	檢查音量及靜音開關。
		以上方法無效請按 RESET 孔復位。
遙控器		
遙控器不能工作	沒有電池或電池電量過低	更換電池
光碟		
光碟不能正常播放	碟片沒有按正確方向插入。	將光碟有標識的一面向上插入。
	碟片髒或嚴重劃傷。	將光碟清潔乾淨或更換新碟。
出現跳音，音質不佳	安裝角度超過 30 度。	將安裝角度調節到小於 30 度。
	安裝不穩固。	用安裝部件將本機安裝牢固。
收音		
接收不到電臺； 電臺信號弱，噪音大	收音天線沒有正確連接或損壞。	正確連接收音天線或更換天線。
預置電臺丟失	電池電纜連接不正確。	將電池電纜連接至當時帶電的接線柱。
USB		
無法插入 USB	插入方法不正確。	嘗試其它插入方向。

• Video

文件格式	文件擴展名	視頻編碼	音頻編碼	視頻碼率(kbps)	音頻碼率(kbps)	音頻采樣率(kbps)	支持的Profile
MPEG	*.mpg *.mpeg *.dat *.vob *.m2v *.m1v	MPEG-1 MPEG-2	MPEG AC3 PCM MP3			MP3 8KHz/16KHz/1/32KHz 11KHz/22K/44KHz 12KHz/24K/48KHz	
AVI	*.avi	MPEG-1; MPEG-2; MPEG-4; MJPEG; H.264; H.263; Sorenson H263	MPEG MP3 AC3 PCM AAC FLAC		MP3 8K~320K	AC3 32KHz/44.1KHz/48KHz	
RM	*.rm *.rmvb	RV	COOK AAC		AC3 32K~640K	COOK 32K/44.1KHz	MPEG-1 N/A MPEG-2
FLV	*.flv	H264 Sorenson H263	PCM MP3 AAC		COOK 8K ~ 96K	APE 8K/16K/32K	simple(LL,ML,H-14,HL) main(LL,ML,H-14,HL) MPEG-4
MP4	*.mp4 *.mov *.m4v *.mp4 *.mov *.m4v *.3gp *.m4a (audio only)	MPEG-1; MPEG-2; MPEG-4; H.264; H.263; MJPEG; Sorenson H263	AAC MPEG MP3, AC3 PCM	BitRate(位、碼 率):40Mbps FrameRate(幀速 率):30fps Resolution:1080P H263只支持 128x96, 176x144, 352x288, 704x576, 1408x1152 五種分辨率	800K~1.MK 64K ~ 16.2M <320K	11.025K/22.05K/44.1K/88.2K 12K/24K/48K/96K FLAC 88.2K/176.4K/192K 8K/16K/22.05K 24K/32K/44.1K 48K/96K AAC 8 ~ 96KHz VORBIS 8 ~ 96KHz MPEG 32KHz/44.1KHz/48KHz PCM 8KHz/16KHz/32KHz 11KHz/22KHz/44KHz 12KHz/24KHz/48KHz 48KHz/96KHz/192KHz	simple(L0,L1,L2,L3,L4,L5) H.264 baseline(<=L4.1) Extended(<=L4.1) main(<=L4.1) High(<=L4.1) High10(<=L4.1) H.263 Baseline Sorenson H263 N/A RV RV30;RV40
MKV	*.mkv	MPEG-1; MPEG-2; MPEG-4; H.264; RV; H.263; MJPEG; Sorenson H263	MPEG MP3 AC3 AAC PCM FLAC		VORVIS unlimited		
OGM	*.ogm	MPEG-2; MPEG-4; H.264; RV; H.263	MPEG MP3 AC3, PCM AAC,	RA_COOK VOBIS	MPEG 32K~912K	VORBIS 8 ~ 96KHz	
TS	* .ts *.m2ts *.m2t *.tp *.trp	MPEG-2 H.264	MPEG MP3 AAC AC3		PCM 64K~9.216M	PCM 8KHz/16KHz/32KHz 11KHz/22KHz/44KHz 12KHz/24KHz/48KHz 48KHz/96KHz/192KHz	

支持
的
方
法

支持格式

• Audio

文件格式	文件擴展名	音頻編碼	音頻碼率(kbps)	音頻采樣率(kbps)
MP3	*.mp1 *.mp2 *.mp3	MPEG MP3	MP3 8K~320K MPEG 32K~912K	MP3 8KHz/16KHz/1/32KHz 11KHz/22K/44KHz 12KHz/24K/48KHz MPEG 32KHz/44.1KHz/48KHz
AAC	*.aac	AAC	AAC <320K	AAC 8 ~ 96KHz
WAV	*.wav *.pcm	PCM Microsoft ADPCM IMA ADPCM	PCM 64K~9.216M	PCM 8KHz/16KHz/32KHz 11KHz/22KHz/44KHz 12KHz/24KHz/48KHz 48KHz/96KHz/192KHz
FLAC	*.flac	FLAC	FLAC 64K ~ 16.2M	FLAC 88.2K/176.4K/192K 8K/16K/22.05K 24K/32K/44.1K 48K/96K
APE	*.ape	APE	APE 800K~1.MK	APE 8K/16K/32K 11.025K/22.05K/44.1K/88.2K 12K/24K/48K/96K
AC3	*.ac3	ac3	AC3 32K~640K	AC3 32KHz/44.1KHz/48KHz

• Picture

文件格式	文件擴展名	支持的Profile
JPEG	*.jpg *.jpeg	baseline: 無限制 progressive : width * height < 4096*4096 文件size/小于20M
PNG	*.png	文件size/小于20M
BMP	*.bmp	大小由Android系統定, 非硬解碼
GIF	*.gif	靜態GIF文件size/小于20M 分辨率: width * height < 4096*4096

Designed and engineered by Blaupunkt