 
 


CONTROL PANEL & FUNCTIONS

RHW:

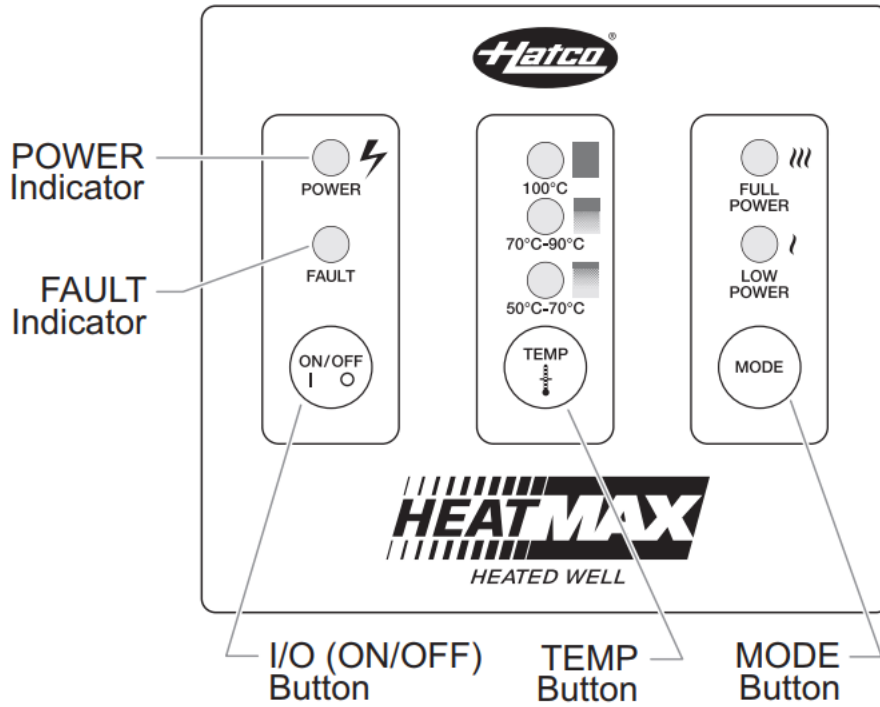


RHW2:

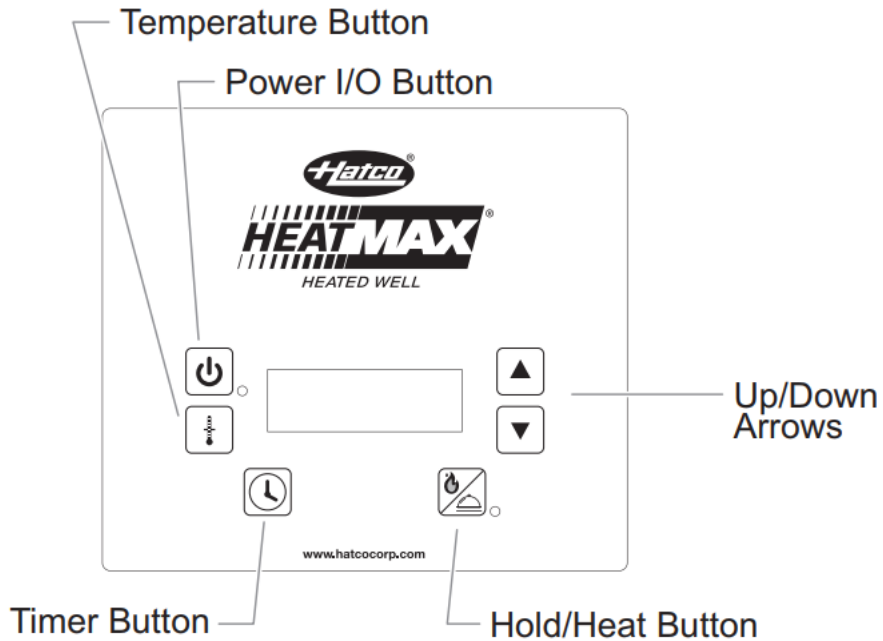

	RHW	RHW2
Temperature	High (100°C) Mid (70°C ~ 90°C) Low (50°C ~ 70°C) Non-Adjustable	40°C ~ 95°C Adjustable in 1°C increment in HOLD mode
Modes	Low & FULL Power	Heat (FULL Power) & Hold
Timer	NIL	Yes , for Heat & Hold modes. Can be turned off, or 1~120mins for HEAT mode, or 1~360mins for HOLD mode.


REMOTE CONTROL BOX CUTOUT

RHW:

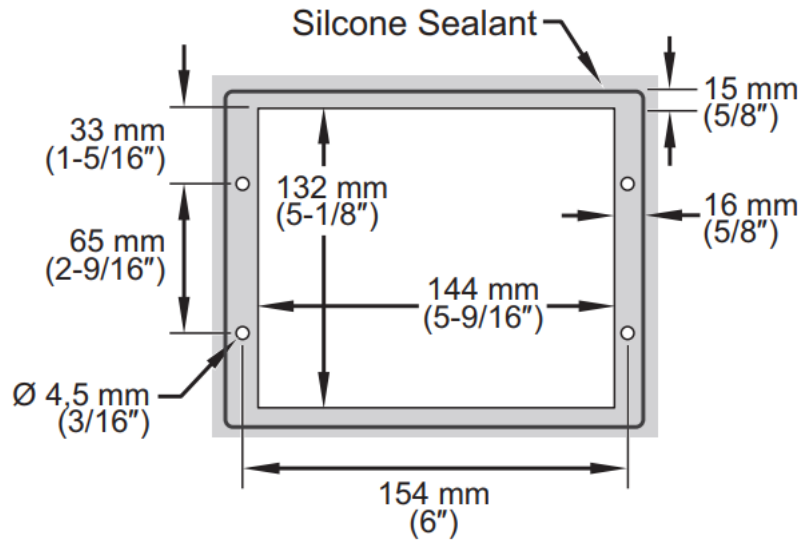

Cutout Hole Size: 144mm x 132mm (Width x Height)

RHW2:

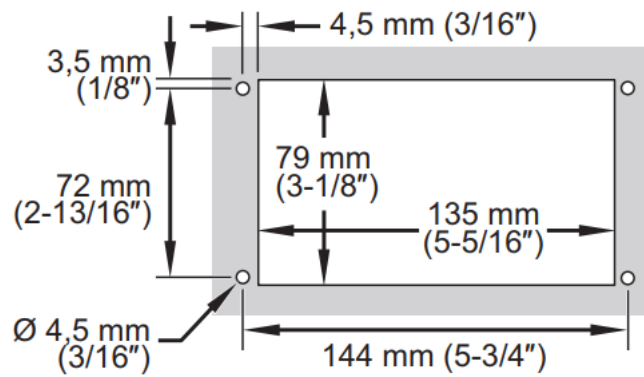


Cutout Hole Size: 135mm x 79mm (Width x Height)

ACCESSORY

Item# RHW1-CTL-ADP:

Step 1 – Install RHW1-CTL-ADP on existing RHW Remote Control Box cutout.

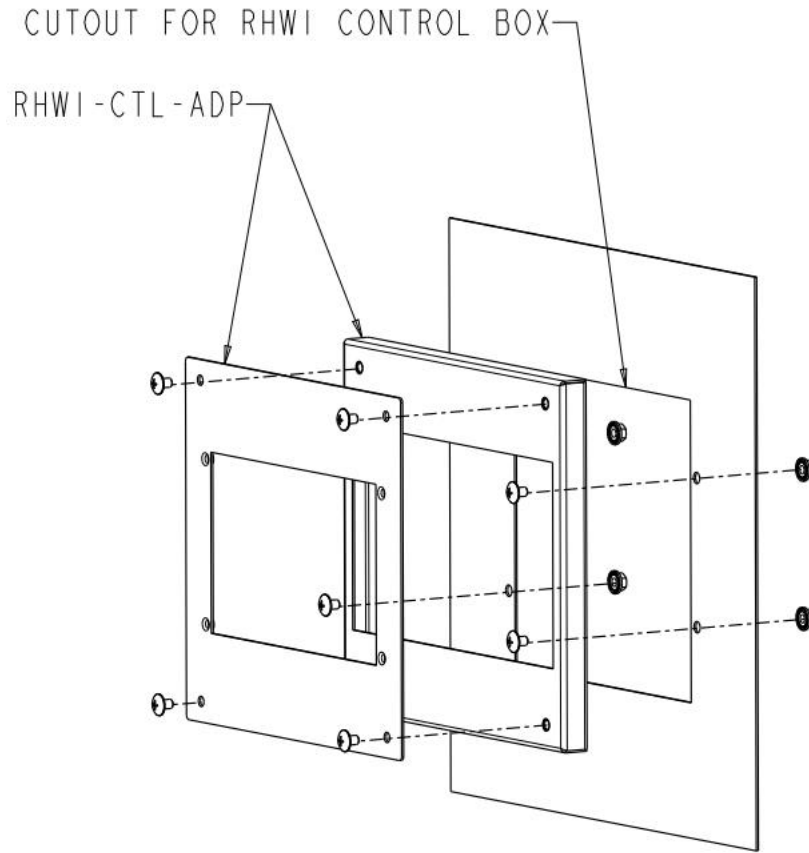

Step 2 – Install RHW2 Remote Control Box on RHW1-CTL-ADP.

