 


Product Structure

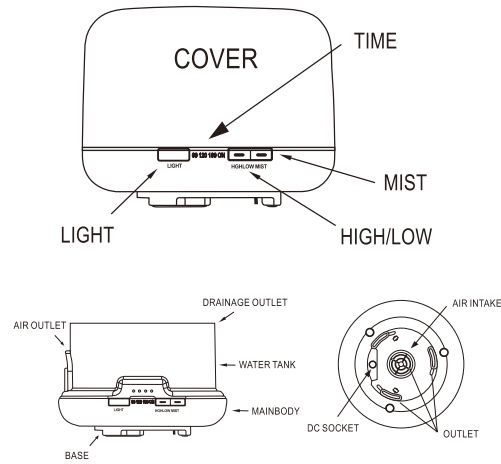

This Aroma Diffuser uses Ultrasonic waves to instantly vaporize water and essential oil in the water tank, to produce a cool, dry fragrant mist.

Packing List

Parts Name	Quantity
Aroma Diffuser	1
Ac Adapter	1
Measuring Cup	1
Instruction Manual	1

Warranty

Warranty is applied upon manufacturing defect only. Warranty does not cover defects and malfunction due to essential oil, human misuse and abnormal voltage or in-coming power supply.

Please register your warranty at below QR Code



Precautions

Please check below to avoid malfunction of product.


1. Do not fill water over 600mL “MAX” at any time.
2. Do not switch on power when tank is empty.
3. Do not touch the Ultrasonic Vibration Plate.
4. Clean regularly as per cleaning & maintenance instructions to avoid malfunction.
5. Always unplug from power supply before maintenance.
6. For hygiene reasons, pour away the remaining water from “DRAIN SIDE” of tank and wipe with clean dry cloth after use.
7. Essential oil can leave stain when contact, do wipe away with soft cloth.
8. Only use measuring cup provided to add water, do not fill directly from the water tap.
9. Do not let mist blow directly to the furniture, clothing, walls etc.
10. Keep away from direct sunlight and air conditioners or fans.
11. Keep away from electronic devices, such as TV and Audio devices.
12. Do not use more than 10hours any time.
13. Wait 60 minutes before restart to avoid damage to ultrasonic plate.
14. Use tap water only, do not use mineral water or sparkling water etc.
15. The amount of mist product is affected by water type, humidity, temperature and air currents.
16. Never move the product when operating.
17. Do not touch any part of the product with wet hands.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Keep cord clear of path ways; do not pull forcefully at any point.
20. If smoke or burning is detected, unplug immediately.

**Deroma
Aroma Diffuser**

WD600

Innovate With Science & Technology
Succeed With Excellent Quality

User Manual

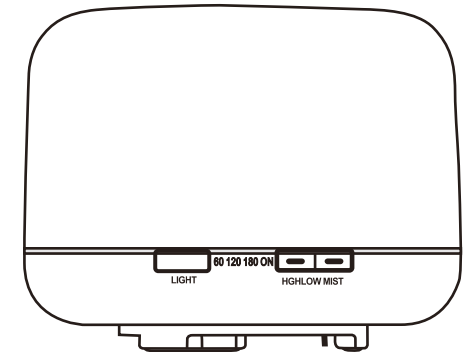

Manufactured & Distributed by:
Deroma Holding Sdn. Bhd.

Address: K1-9, Jalan 3, Taman Seri Merdeka,
68000 Ampang, Selangor.

☎ Call: +603-4288 5351

☎ +6013-556 1199

Website: www.deroma.com.my

E-mail: deromamy@gmail.com

Thanks for choosing our product
Read the instruction carefully before use

Products Specification

Product Name: Aroma Diffuser
 Product Model: WD600
 Capacity: 600mL
 Voltage: 24V
 Power: 12W
 Method of Mist Production: 24.M HZ
 Time Mode: 60/120/180/ON Minutes
 Dimension: Approx. 168*168*121mm
 Weight: Approx. 520g


Attention

1. The amount of mist produced will vary according to water type, humidity, temperature, air currents, and it is no unusual and should not be considered as a fault.
2. If there is no water in the tank, pressing the MIST button will cause the product to “Beep” 3 times to remind you to add water. The product will not operate without water.
3. Only 100% natural essential oil can be use for this product. Those containing chemical fragrance, spice or impurities will cause malfunction.
4. Use 3-5 drops per 100mL water a time. Too much oil will clog the plate and cause malfunction. Please clean the unit as per the maintenance instructions, before changing to use a new type of essential oil.

Accidental Leakage

In the event of product being knocked over or tipped during use, please follow below steps to avoid malfunction.

1. Unplug the unit and remove cover.
2. Pour out remaining water from water tank.
3. Shake the unit gently to drain water inside and allow drying for at least 24 hours.

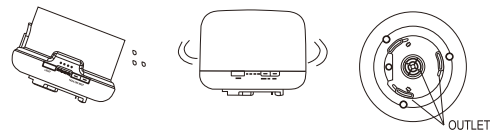

Product Instructions

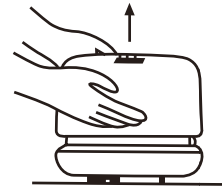


FIG1

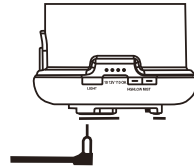


FIG2

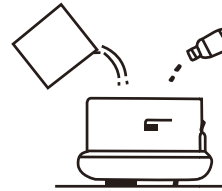


FIG3

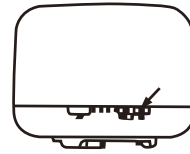


FIG4

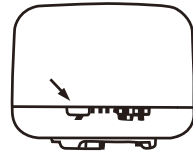


FIG5

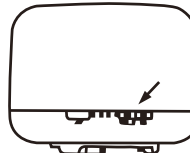


FIG6

1. Place the product on the table and remove the upper cover. **Fig 1**
2. Connect the AC adaptor to the base of the DC connector of the main body. **Fig 2**
3. Use measuring cup to fill water from water pipe and fill water to the water tank with measuring cup. **Fig 3**
 - Do not exceed the max line on the water tank for the filled water level.
 - Water with high temperature may caused the mist fly out, do not fill water during operating.
4. Drip the essential oil into the water tank vertically. Add about 2-3 drops (about 0.1-0.15mL) per 100mL water. **Fig 3**
5. Install the cover back to the original position. **NOTE:** Upper cover should be cover when operate the product.
6. Connect the adaptor with home power socket.

7. To operate the product, press the MIST button on the main body of product, mist function is on. You can set up the timer with pressing the MIST button. Each time press on this button, the timer will change between 60 minutes, 120 minutes, 180 minutes, ON and OFF. **Fig 4**
8. Press “HIGH/LOW” button to adjust the mist level (Strong or Weak). The default setting is strong mist.
9. The diffuser has two light modes (Warm Light and 7 Color LED Lights). Press “LIGHT” to switch colors and adjust brightness for each light mode. Press “LIGHT” to the end of each color mode to turn off lights for the diffuser. **Fig 5 & Fig 6**
10. If do not use the product for long time, please drain out the water from water tank, dry and store it well. If you want to use it again, please use neutral detergent to clean the water tank before us.

Cleaning and Maintenance

After using 5-6 times, or 2-3 days, please clean the product as follows:


1. Unplug the product from main supply and remove the cover.
2. Drain out any remaining water from the “DRAIN SIDE” of the water tank.
3. Unplug the power cord from the unit base.
4. Put 1 tablespoon of citric acid in the water tank, add just approx. 100ml of warm water (up to 70° C)
5. Leave for 5 minutes, then drain the solution from the “DRAIN SIDE” of the tank.
6. Wipe with a soft cloth and avoid the Ultrasonic Vibration Plate area, which can be gently cleaned with a cotton bud.

NOTE: Never use other acids, enzymes or detergents, as it may risk poisonous gas to be created or cause malfunction.

Cleaning and Maintenance

The cover has an inner cover that can also be removed for cleaning.

1. Pull grip as indicated in the diagram to release.
2. After cleaning the inner cover, replace by holding grip, and pressing down inner and outer cover until click is heard.

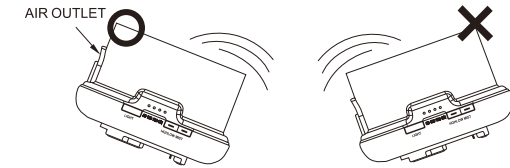

Failure Analysis and Solutions

The aroma diffuser is unable to switch on or switch off early.

Cause: Lack of water / Power cord not connected.
 Solution: Add water to the tank. / Disconnect, check cables and re-connect carefully.

No mist or abnormal mist.

Cause: Lack of water or too much water / Dirt on the Ultrasonic plate / Cover and inner cover not installed properly / Dirt on the air suction port on the underside of the base.

Solution: Add suitable amount if water in the tank / Water must never be filled over 600ml (MAX) line / Refer to maintenance instruction to remove and re-install the cover and inner cover correctly so mist can be released freely / Clean the air suction port / Restricted airflow will affect mist.

Water leakage

Cause: Cover and inner cover not installed properly / Product has been tipped over / Low temperature or high humidity.

Solution: Remove and re-install correctly / Follow accidental leakage instructions / If low temperature or high humidity, the mist may condense quickly into water droplets.