

ESSENTIAL OIL  
NEBULIZING DIFFUSER MANUAL




Introduction

Essential oil nebulizers use the two-fluid atomization principle to diffuse the organic natural molecules of essential oils through air pressure atomization. The particles of active molecules were released without heat or water and aromatics of the essential oil quickly diffused in the wider range of space. It is the best choice for those who love aromatherapy.

\*Only pure essential oils can be used with a nebulizer.

Parts of Nebulizer

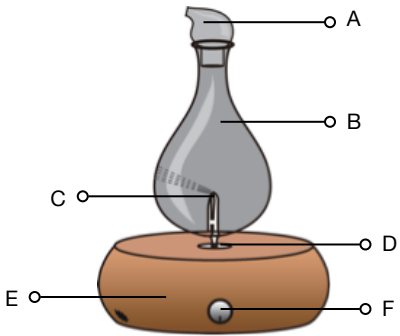



- A. Glass Cap
- B. Glass Chamber
- C. Air Pipe & Essential Oil Catheter
- D. Silicone Vent
- E. Wooden Base
- F. Adjustable Knob

Instruction

1. Align the bottom tip of the glass chamber to the silicone vent.
2. Press down the glass chamber with light strength without rotating the glass chamber or wood base.



3. Add essential oils into the glass chamber with dropper. Start with 8 drops to 15 drops. You may add more but not over the max. line.

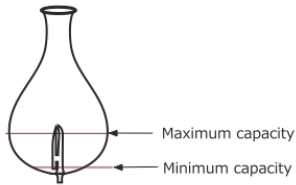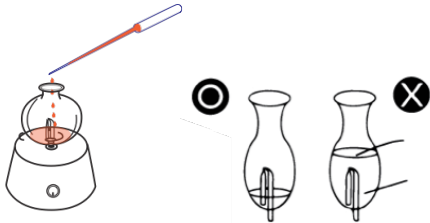

4. Place the caps on top of glass chamber.




5. Connect the device to power plug.
6. Turn on the knob to enjoy your aromatherapy.




Cleaning

Method 1

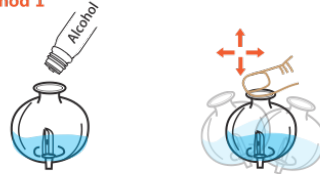


1. Pour in oil solvent, e.g: medical alcohol or plain Vodka which is more readily available at home.
2. Press your thumb on the opening and shake the glass chamber so the solvent fully covered the inner wall of the glass.

Method 2

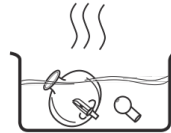

1. If the solvent doesn't fully cleaned the glass. Soak the glass into warm soapy water for few hours.
2. Rinse the glass clean and let it completely dry before next use.


Method 3

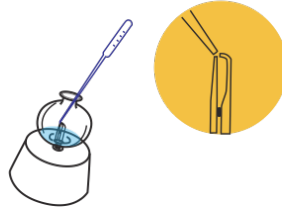

1. Pour the solvent inside the glass chamber and turn on the device. If no mist, place the dropper in between the catheter and air pipe. Press the air out in different direction.

Method 4

1. Drop the solvent into the pipe from bottom if the air pipe is clogged & no mist when using the device.
2. Use the brush provided, insert the tip of the brush to the pipe in & out to brush out any residue remains inside.
3. Wash & rinse clean.

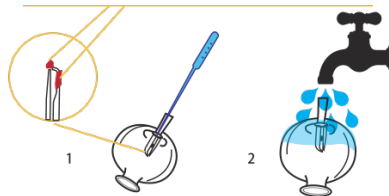

Troubleshooting

No mist:

Pull out the glass chamber. Turn on the device, press the silicon vent with your finger to check if there is any air pressure. If the device is in good condition, please clean the glass chamber.

Not working:

Check the power supply. Change the power outlet to test the device. Check if it is on intermittent mode instead.

Safety and Care

1. DO NOT use with charger more than 5V.
2. Keep away from children and pet to avoid broken glass.
3. Keep away from wet areas.
4. Use only pure essential oil. Please avoid thick essential oil such as sandalwood oil or patchouli oil as it will clog the diffusers easily.
5. Clean the glass chamber periodical to avoid oil clog.
6. When remove the glass chamber from the wood base, please do not pull out forcefully. Slowly pull up with light strength.
7. Broken glass is physical hazards. Please handle with care.

Specifications

Essential Oil Nebulizing Diffuser

Material:

Bamboo wood base, glass chamber, glass cap

Rated Voltage: 100 ~ 240V

Rated Frequency: 50HZ / 60HZ

Power: 5V 1A

Intermittent mode:

Atomise 5 mins, rest 3 mins, auto shut-off after 2 hours/ 3 hours. Refer to individual specifications.

LED light: Warm light / Multi colour

Noise Level: 20~40dB

Diffusion Coverage: 20 ~ 40sqm

[WWW.EARTHESPRIT.COM](http://WWW.EARTHESPRIT.COM)

