



Installation Instructions For 2011-2016 BMW F10/F11 535i (N55 3.0T)

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	3.5" Intake Pipe	1
2	Heat Shield	1
3	Silicone Hose	1
4	M4 Bolt 10mm	2
5	15mm L150mm Silicone Hose	1
6	89mm Clamp	2
7	70mm Clamp	1
8	Air Filter 89/90mm	1
9	Electrical Extension	1
10	Bracket	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.原廠引擎室



Figure 4: Remove the air box.拆下原廠集氣箱



Figure 2: Loosen the stock tube hose clamp.
鬆開原廠管軟管夾



Figure 5: Remove the strut bar.拆下支柱桿



Figure 3: Remove the rubber that fixes the cords.
取下固定電線的橡膠



Figure 6: Remove the PCV clip.拆下PCV 夾

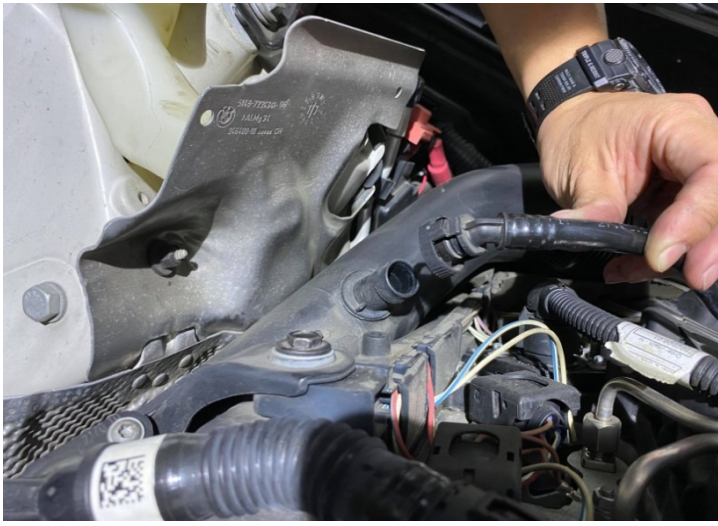


Figure 7: Remove the PCV. 移除 PCV



Figure 10: Unclip the sensor. 鬆開感應器



Figure 8: Remove the PCV. 移除 PCV



Figure 11: Remove the stock tube. 拆下原廠管



Figure 9: Remove the M6 bolt. 拆下M6螺栓



Figure 12: Remove the PCV from the stock intake pipe.
從原廠進氣管拆下 PCV



Figure 13: Remove the MAF sensor from the stock intake pipe.從進氣管拆下 MAF 感應器



Figure 16: Bend the heat insulation plate.將隔熱板折彎



Figure 14: Remove the heat shield's bolt.拆下隔熱罩的螺栓



Figure 17: Install the bracket.安裝支架

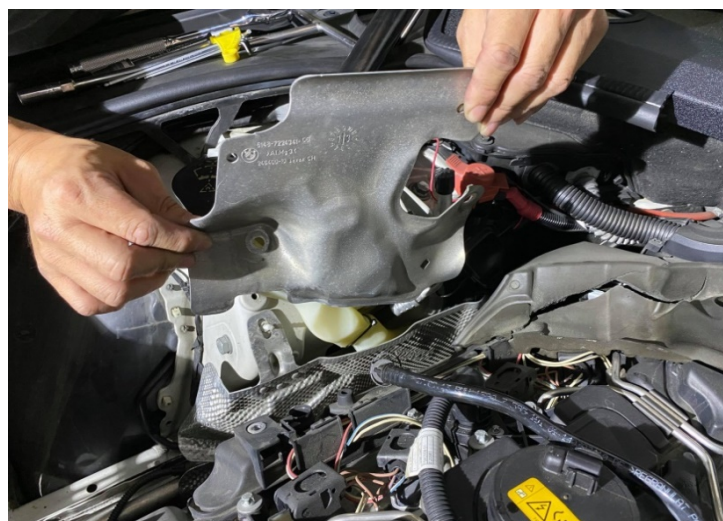


Figure 15: Remove the heat shield.拆下隔熱罩



Figure 18: Remove the retainer clip.取下固定夾



Figure 19: Install the heat shield.安裝隔熱罩



Figure 22: Install the silicone hose and tube.
安裝矽膠軟管和管子



Figure 20: Install the retainer clip.安裝固定夾



Figure 23: Reinstall the PCV.重新安裝 PCV



Figure 21: Secure the nut.固定螺帽



Figure 24: Reinstall the PCV.重新安裝 PCV



Figure 25: Electrical extensions to plug them back in to the factory wiring harness.
用於將它們插回工廠線束的電氣擴充件



Figure 28: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.
恭喜！您剛剛完成了此進氣系統的安裝。定期檢查進氣口的對準情況，正常磨損會導致螺帽和螺栓鬆動



Figure 26: Connect the mass air sensor.
連接空氣品質感測器



Figure 27: Install the MST air filter.安裝 MST 空氣濾芯