



Installation Instructions For 2014+ BMW M2/M3/M4 S55 ENGINE

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Tube A	1
2	Intake Tube B	1
3	Heatshield A	1
4	Heatshield B	1
5	Screw	11
6	M4 Bolt 12mm	4
7	Air Filter 130/76mm	2
8	Silicone Hose	1
9	Clamp	4

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.

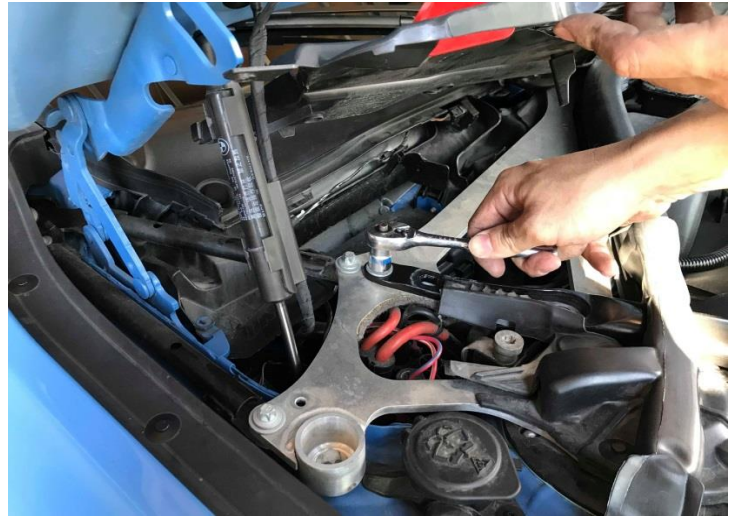


Figure 4: Remove the bolts on the struts bar and take it out put it aside.



Figure 2: Remove the bolts on the struts bar. Total of 9 bolts.



Figure 5: Remove PCV.



Figure 3: Remove the bolts on the struts bar. Total of 9 bolts.

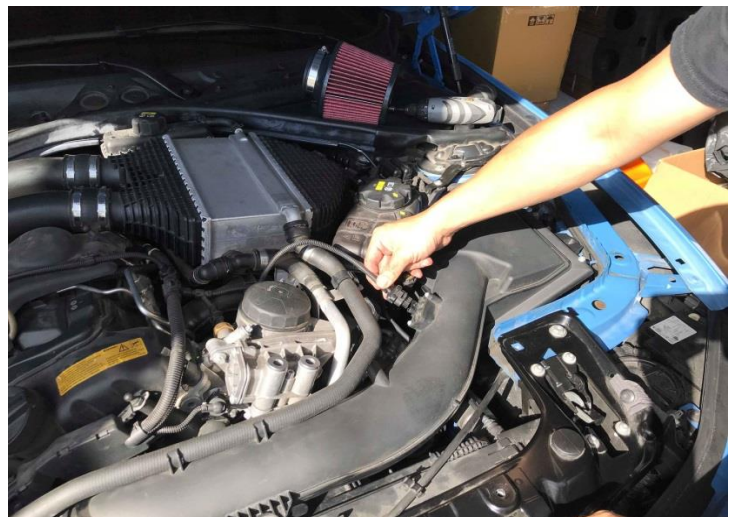


Figure 6: Disconnect the mass air sensor.

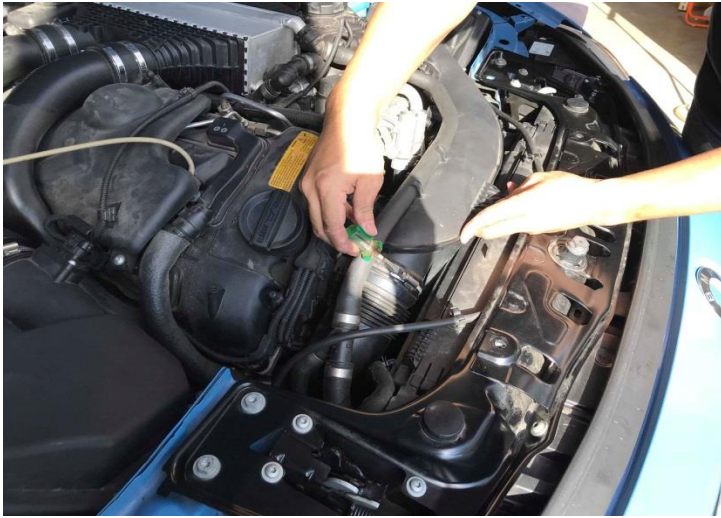


Figure 7: Loosen the hose clamp.



Figure 10: Remove the mass air flow sensor from the stock air box.

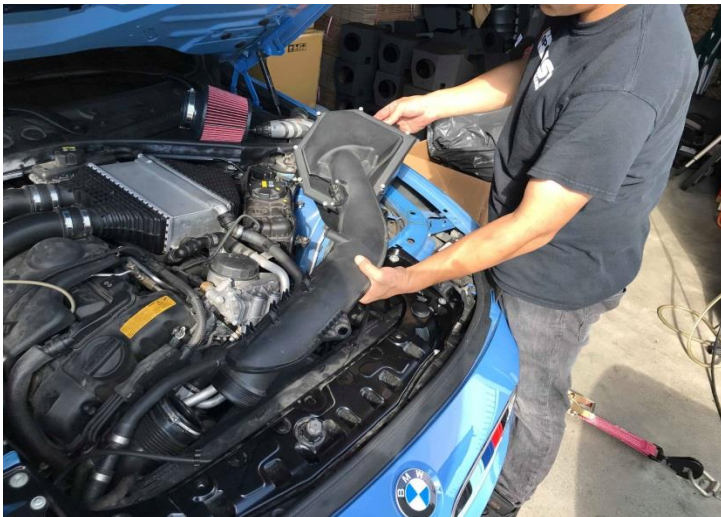


Figure 8: Remove the stock air box.



Figure 11: Remove the stock air box cover and filter.



Figure 9: Remove the mass air flow sensor from the stock air box.



Figure 12: Install the heat shield on the top of air box and secure with bolts.

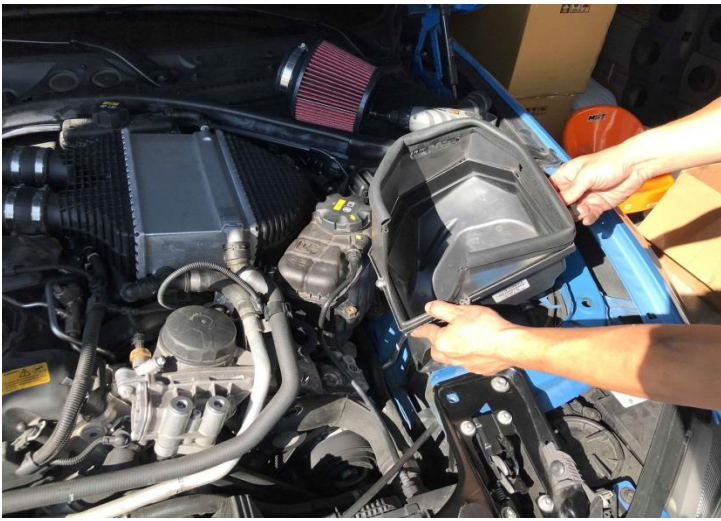


Figure 13: Install the heat shield.



Figure 16: Secure intake tube breaket with bolt.

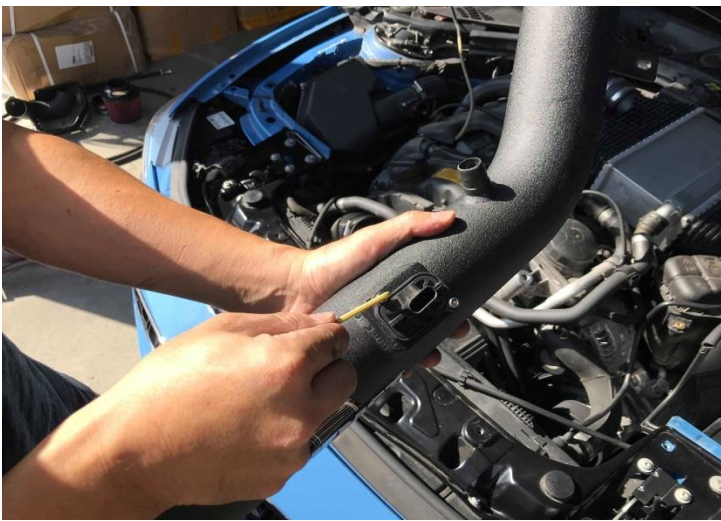


Figure 14: Install mass air sensor into the intake tube.

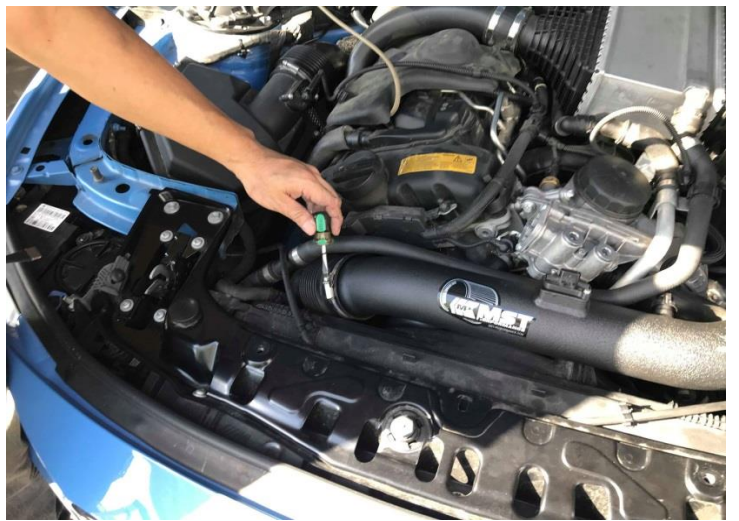


Figure 17: Tighten the hose clamp.

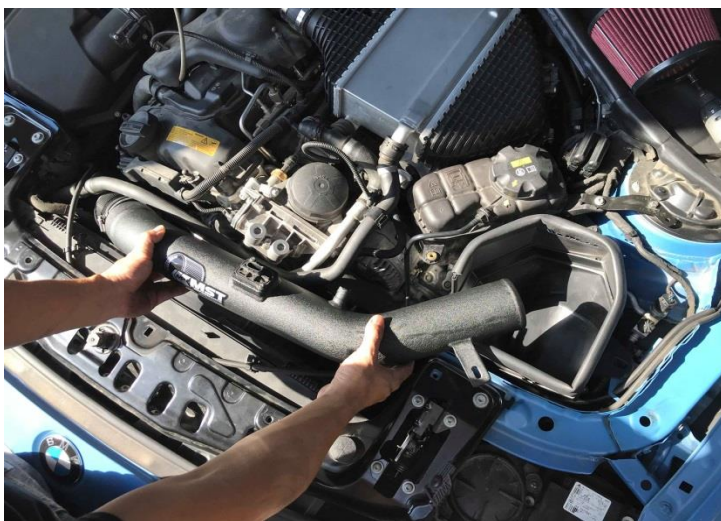


Figure 15: Install the MST intake tube.

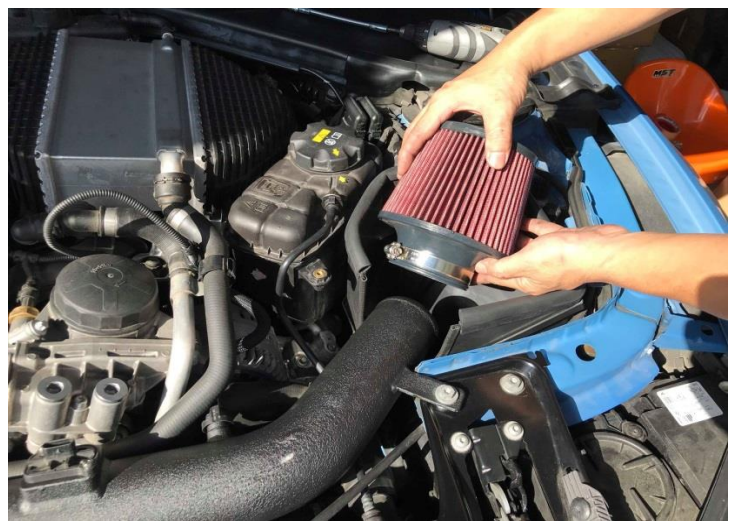


Figure 18: Install the air filter .

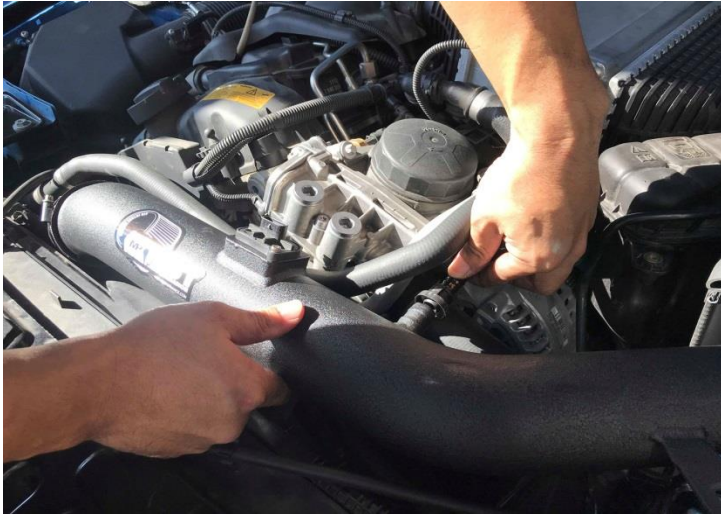


Figure 19: Connect PCV.



Figure 22: Remove the stock air box.



Figure 20: Plug in the mass air flow sensor connector.



Figure 23: Remove the mass air flow sensor from the stock air box.

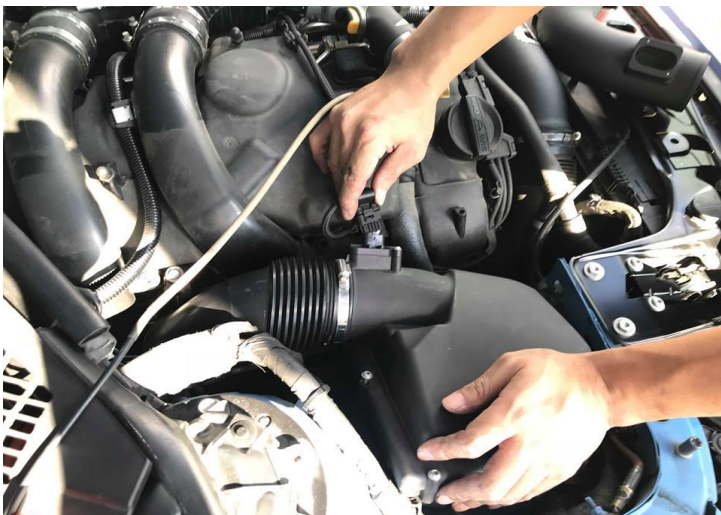


Figure 21: Remove the mass air flow sensor from the stock air box.



Figure 24: Install mass air sensor into the intake tube.



Figure 25: Install the heat shield on the top of air box and secure with bolts.



Figure 28: Plug in the mass air flow sensor connector.



Figure 26: Set the heat shield.



Figure 29: Install the air filter.

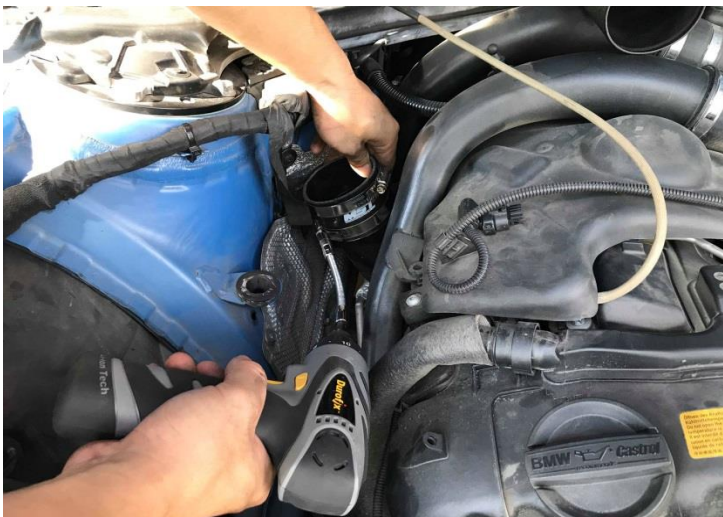


Figure 27: Install silicone hose on stock tube.



Figure 30: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.