



Installation Instructions For 2012-2016 BMW 335i/435i [F30/F32]

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Heatshield	1
3	Heatshield Cover	1
4	M6 Bolt	3
5	M6 Nut	1
6	M6 Washer	4
7	M4 Bolt	5
8	M4 Washer	3
9	M4 Spring Washer	3
10	Heat Shiled Mount	2
11	Air Filter	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.



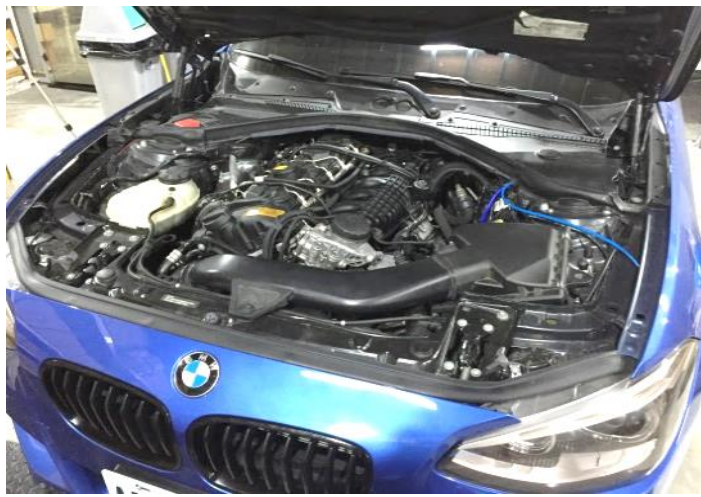


Figure 1. OPEN ENGINE HOOD AND FIND LOCATION OF FACTORY INTAKE SYSTEM.
 打開引擎罩並找到進氣系統的位置



Figure 2. LOOSEN HOSE CLAMP OF THE INTAKE PIPE BY PROPER TOOL.
 用適當的工具鬆開進氣管的軟管夾



Figure 3. CAREFULLY DISCONNECT MAF SENSOR WIRING.
 小心斷開 MAF 感應器接線



Figure 4. DISCONNECT THE CRANK CASE VENT LINE FROM FACTORY INTAKE PIPE.
 斷開曲軸箱通風管與 FACTORY 進氣管的連接



Figure 5. REMOVE STOCK AIR BOX
 拆下原廠集氣箱



Figure 6. INSTALL HEAT SHIELD MOUNT TO HEAT SHIELD.
 將隔熱罩安裝座安裝到隔熱罩上



Figure 7. INSTALL ANOTHER HEAT SHIELD MOUNT ON HEAT SHIELD AS SHOWN.
如圖所示，在隔熱罩上安裝另一個隔熱罩安裝座



Figure 8. INSTALL HEAT SHIELD IN PLACE AS SHOWN.如圖所示將隔熱罩安裝到位



Figure 9. TIE UP M6 BOLT/NUT/WASHER(X2) AS SHOWN ONTO HEAT SHIELD.
如圖將 M6 螺栓/螺帽/墊圈 (X2) 固定在隔熱罩上



Figure 10. LOOSEN BOLT FROM FACTORY BRACKET AS SHOWN.
如圖所示，鬆開原廠支架上的螺栓



Figure 11. INSTALL INTAKE PIPE AS SHOWN.如圖所示安裝進氣管



Figure 12. TIE UP HOSE CLAMP ON INTAKE PIPE. 將軟管夾固定在進氣管上



Figure 13. INSTALL BRACKET OF INTLE PIPE ONTO FACTORY PLATE AND TIE UP BOLT AS SHOWN.
將進氣管支架安裝到工廠板上並固定螺栓



Figure 14. REMOVE MAF SENSOR FROM FACOTRY AIR BOX.
從工廠氣箱拆下 MAF 感應器



Figure 15. INSTALL MAF SENSOR INTO INTAKE PIPE.
將 MAF 感應器安裝到進氣管中



Figure 16. RECONNECT THE CRANK CASE VENT LINE ONTO INTAKE TUBE.
將曲軸箱通風管重新連接到進氣管上



Figure 17. INSTALL AIR FILTER AND TIE UP HOSE CLAMP.
安裝高流量濾芯和紮緊軟管夾



Figure 18. INSTALL TOP COVER OF HEAT SHILED.安裝隔熱罩頂蓋

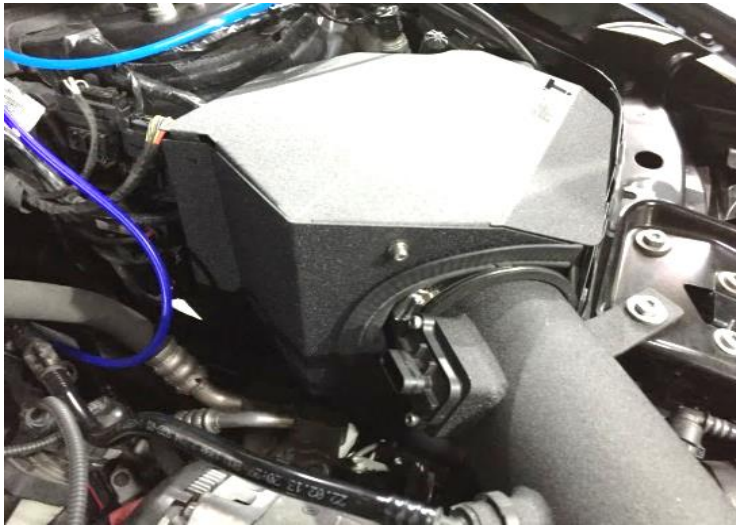


Figure 19. TIE UP M4 BOLT/WASER & SPRING WASHER ONTO HEAT SHIELD TO LOCK TOP COVER.

將 M4 螺栓/墊圈和彈簧墊圈綁在隔熱罩上以鎖定頂蓋



Figure 18. Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

恭喜！您剛完成了該進氣系統的安裝。定期檢查進氣口的對準情況，正常磨損會導致螺帽和螺栓鬆動

