



Installation Instructions For

2012+ BMW F20 21 30 31

(116i 118i 120i 316i 318i 320i)

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Heatshield	1
3	Heatshield Cover	1
4	M4 Bolt	6
5	M4 Washer	4
6	M4 Spring Washer	4
7	M6 Bolt	1
8	M6 Washer	2
9	M6 Nut	1
10	M8 Bolt	1
11	M8 Nut	1
12	M8 Washer	2
13	Mount Rubber	1
14	Air Filter	1

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or

our dealer that you purchased this product from.

Before installing any parts of this system, please read the instructions

thoroughly. If you have any questions regarding installation

please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic

is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to

the original purchaser against defects in materials and workmanship.

Warranty claims must be handled through the dealer

from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8



Figure 9



Figure 10



Figure 11



Figure 12



Figure 13

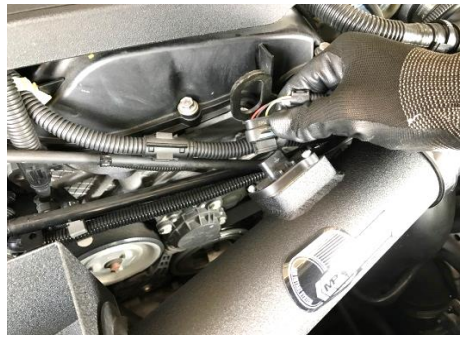


Figure 14



Figure 15



Figure 16



Figure 17



Figure 18



Figure 19



Figure 20
Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

