

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe A	1
2	Intake Pipe B	1
3	76-76mm Silicone	1
4	Heatshield	1
5	Heatshield Cover	1
6	M4 Bolt	6
7	M4 Washer	4
8	M4 Spring Washer	4
9	M6 Bolt	1
10	M6 Washer	2
11	M6 Nut	1
12	M8 Bolt	1
13	M8 Nut	1
14	M8 Washer	2
15	Mount Rubber	1
16	Air Filter	1
17	Clamp	2

Please Check the Contents of this box immediately.

*Report any defective or missing parts to us or our dealer that you purchased this product form.

*Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

*Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid that may be hot.

*MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

☐All installation of parts must be performed by a trained professional.





Figure1. The stock intake system



Figure 2. Gently unplug the MAF sensor connection from the MAF sensor.



Figure 3. Loosen the band clamp as shown



Figure 4. Remove the airbox by gently lifting up



Figure 5. Overview of after removing the airbox



Figure 6. Release the fasteners that tighten the clamp



Figure 7. Remove the scoop as shown



Figure 8. Loosen the fasteners that hold the MAF sensor.



Figure 9. Remove the MAF sensor from the OEM airbox



Figure 10 Install the MAF on MST intake pipe



Figure 11 . Fit on the silicone hose (with a clamp on) to the pipe A and tighten them up (Do not overtighten)



Figure12. Install the pipe B



Figure 13. Install the MST heat shield into the vehicle



Figure 14. Secure it with M8 screws kit

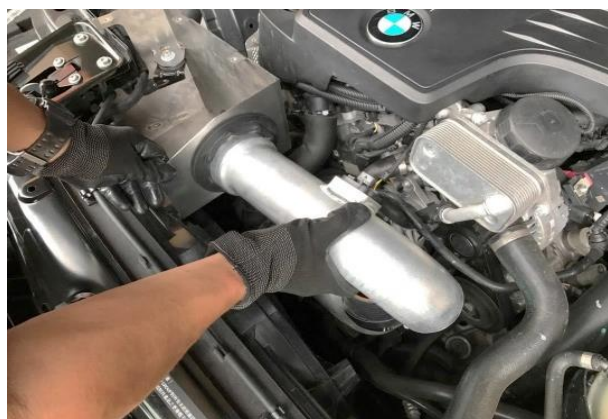


Figure 15. Install the a hose clamp to the silicone hose then install Pipe A



Figure 16. Tighten the clamps until nice and secure without overtight.



Figure 17. Connect the MAF plug to the MAF sensor



Figure 18. Install the filter with a provided hose clamp



Figure 19. Secure the air filter by tightening the clamp (Do not overtighten)



Figure 20. Remove rubber bushing from plastic anchor.



Figure 21. Install a provided rubber

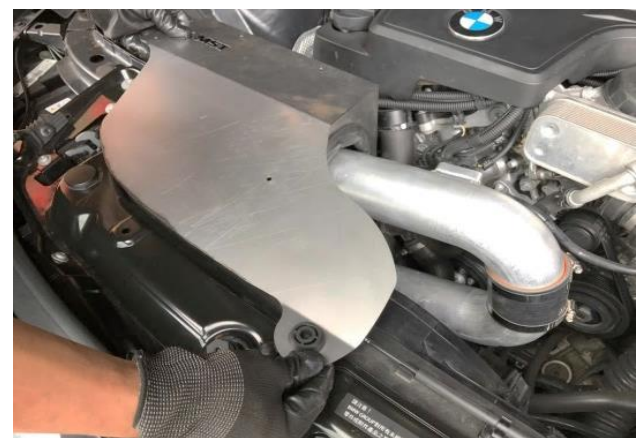


Figure 22. Install MST heatshield cover



Figure 23. Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

Please note that N20 engine vehicles. The Vendo valve & PVC valve are common problems for this vehicle. If the dashboard warning lights pop up, there are some points that are needed to know to solve these problems. Please drive your vehicle to your local car dealership or repair workshop for a checkup, to see if the Vendo valve or PVC valve is in need of changing. Other solutions: Clean the dirt or debris off the MAF sensor. Check other parts of the car.