



Installation Instructions For

2013-2017 BMW F2X F3X N20/26 2.0L EGW

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Turbo Inlet Tube	1
2	Intake Tube	1
3	M4 Bolt 10mm Kit	5
4	M6 Bolt	1
5	M6 Washer	3
6	M6 Nut	1
7	76-76 Silicone Hose-15 degree	1
8	Electrical Extension	1
9	Air Filter 89mm 90L	1
10	Turbo Inlet O-Ring	1
11	3 1/2 clamp	2
12	Heat Shield	1
13	Heat Shield Cover	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box. 原廠引擎室

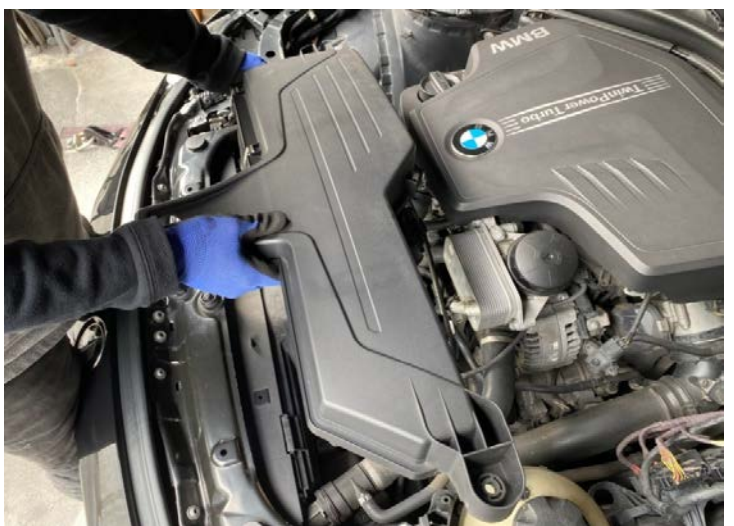


Figure 4: Remove the air box. 拆下原廠箱



Figure 2: Disconnect the sensor. 斷開感應器連接

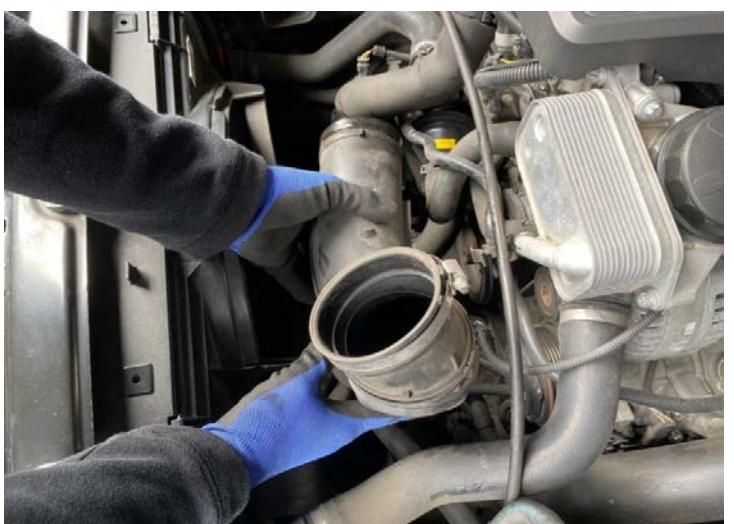


Figure 5: Remove the tube. 拆下原廠管



Figure 3: Loosen the stock tube clamp. 鬆開原廠管夾

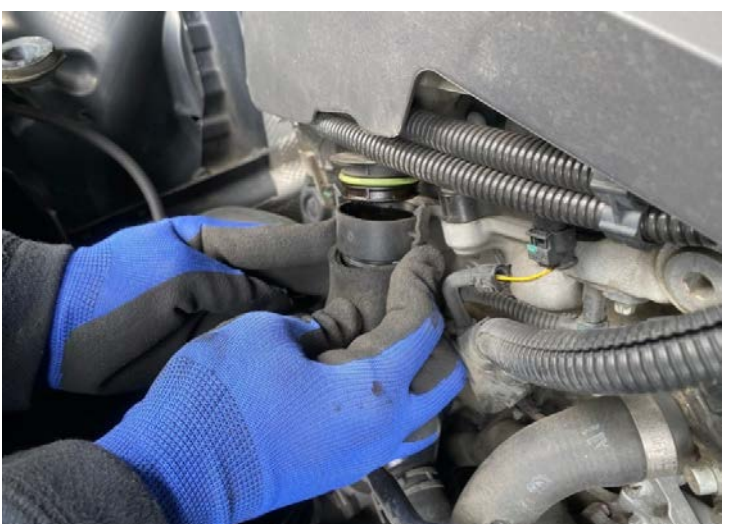


Figure 6: Remove the PCV breather hose.
拆下 PCV 軟管

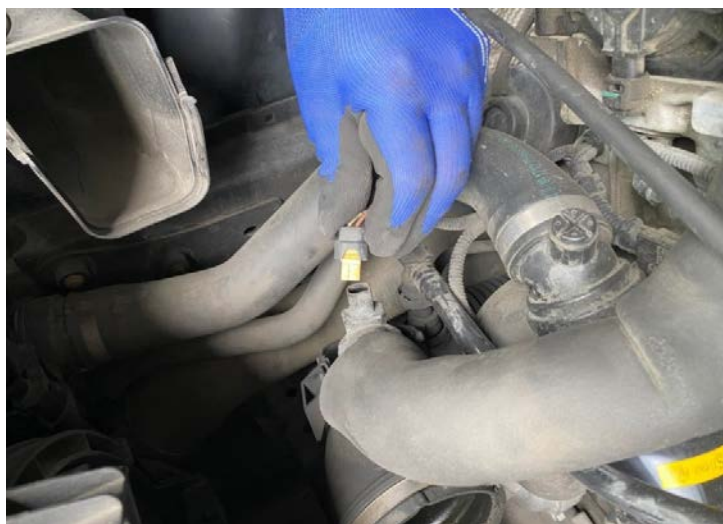


Figure 7: Disconnect the sensor.斷開感應器連接



Figure 10: Remove the stock turbo inlet.
拆下原廠渦輪進口



Figure 8: Remove the PCV hose.拆下 PCV 軟管



Figure 11: Remove the screw.拆下螺絲

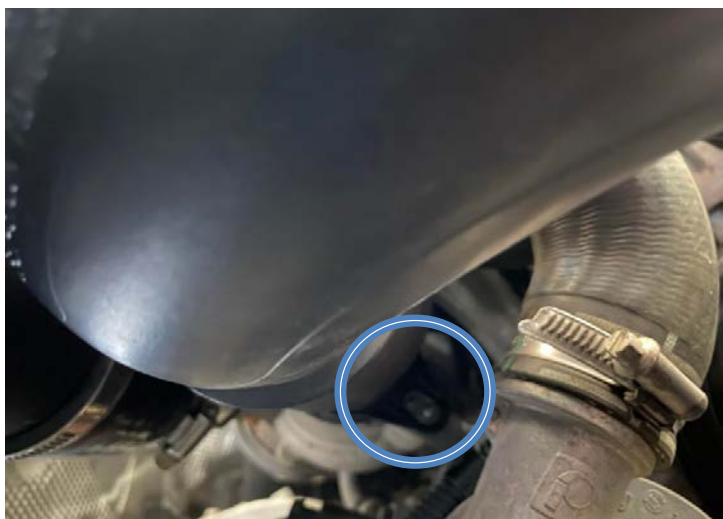


Figure 9: Remove the stock turbo inlet nut.
拆下原廠渦輪進口螺母



Figure 12: Remove the screw.拆下螺絲



Figure 13: Remove the stock air box bracket.
拆下備用集氣箱支架



Figure 16: Tighten the turbo inlet screw.
擰緊渦輪進口螺絲



Figure 14: Tighten the screw. 擰緊螺絲



Figure 17: Install the PCV breather hose.
安裝 PCV 軟管



Figure 15: Install the MST turbo inlet tube.
安裝 MST 渦輪進氣管



Figure 18: Connect the sensor. 連接感應器



Figure 19: Install the heat shield.安裝隔熱罩



Figure 23: Install the MAF on tube.將 MAF 安裝在管上



Figure 20: Tighten the screw.擰緊螺絲



Figure 24: Install the silicone hose.安裝矽膠管



Figure 21: Tighten the screw.擰緊螺絲

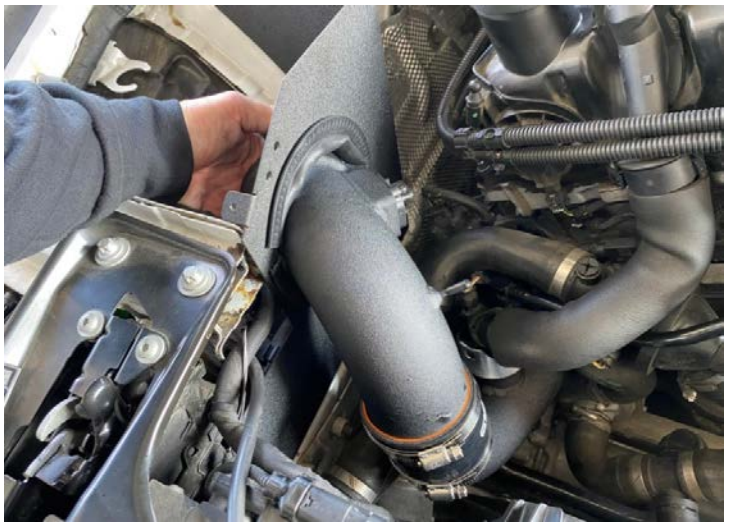


Figure 25: Install the MST tube.安裝MST管



Figure 26: Electrical extensions to plug them back in to the factory wiring harness.
 電氣擴充裝置可將其插回線束



Figure 29: Install the MST filter.安裝MST高流量濾芯



Figure 27: Connect the sensor.連接感應器



Figure 30: Install the heat shield cover .安裝隔熱罩



Figure 28: Connect the hose連接軟管



Figure 31: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.
 恭喜！您剛剛完成了此進氣系統的安裝。定期檢查進氣口的對準情況，正常磨損會導致螺帽和螺栓鬆脫