



Installation Instructions For

2019+ TOYOTA SUPRA / BMW Z4 3.0L(SUP05)

2019+ BMW G20 G21 G26 G42 3.0L(B5811)

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	6" Intake Tube	1
2	Air Box	1
3	Air BoxHeat Shield	1
4	M6 Bolt	3
5	M5 Bolt	2
6	M6 Washer	3
7	M5 Washer	2
8	M5 Spring Washer	2
9	Silicone Turbo Inlet	1
11	Aluminum mount	3
12	Clamp	2
13	Air Filter 152mm/115L	1
14	Aluminum Adapter	1

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.

SUP05



B5811





Figure 1: Stock air box.



Figure 4: Loosen stock air box cover spring.



Figure 2: Disconnect the mass air sensor.



Figure 5: Remove stock air box cover.



Figure 3: Loosen the hose clamp.



Figure 6: Remove the stock turbo inlet pipe spring.

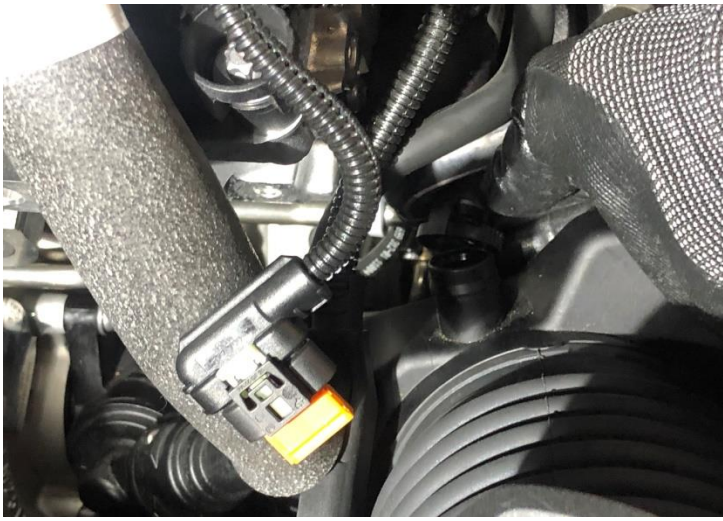


Figure 7: Remove the PCV.



Figure 10: Remove the spring clip clamp.



Figure 8: Remove the stock turbo inlet pipe.



Figure 11: Install stock seal on the MST inlet adapter.



Figure 9: Remove the stock turbo inlet tube seal.



Figure 12: Install the spring clip clamp.



Figure 13: Install adapter on the MST silicone hose.



Figure 16: Install the heat shield on the air box.



Figure 14: Before installing silicone turbo inlet, please connect the PCV hose first.



Figure 17: Install the MAF sensor on the tube.

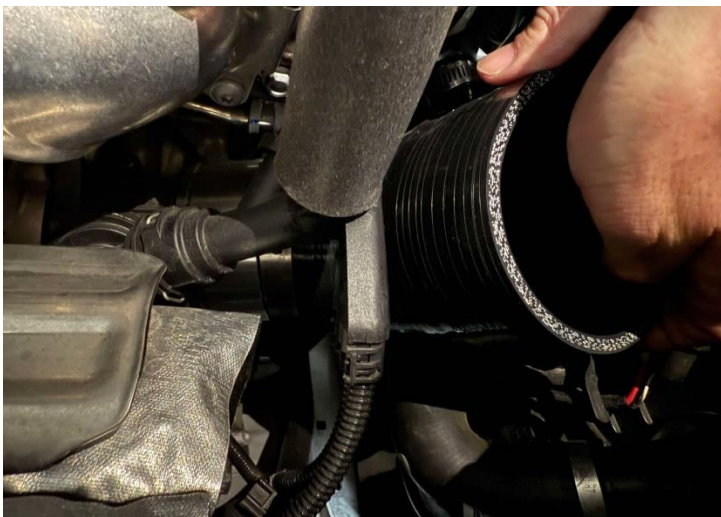


Figure 15: Install the tube on the turbo.



Figure 18: Install the filter, tube and aluminum mount on the air box.

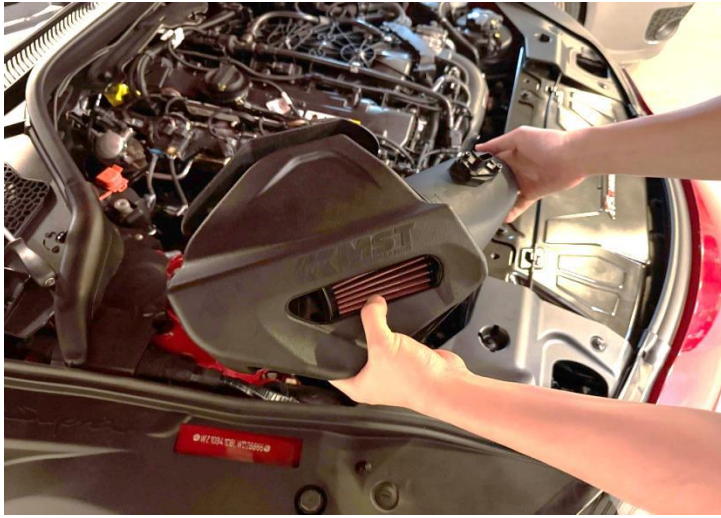


Figure 19: Install the intake kit.



*This clip is installed on the inside of the air box for toyota supra 3.0



Figure 20: Tight the clamp.



*This clip is installed on the outside of the air box for 3.0 BMW G-Chassis



Figure 21: Plug in the mass air flow sensor connector.



Figure 22: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.