

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	90 degree 60mm Hose	1
3	Heatshield	1
4	M6 Bolt	2
5	M6 Nut	2
6	M6 Washer	4
7	M4 Bolt	2
8	Clamps	2
9	Air Filter	1
10	Vent Hose	1

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Complete stock air intake cleaner and air intake duct.
完整的原廠集氣箱



Figure 2: Loosen the clamp on the tube using 7mm nut driver.
使用 7mm 螺絲起子鬆開管子上的夾子



Figure 3: When equipped with EVAP, disconnect the EVAP vent line from the factory intake tube as shown.
配備 EVAP 時，如圖所示斷開 EVAP 排氣管與原廠進氣管的連接



Figure 4: Pull back the ram air scoop from radiator support.
拔掉導風罩



Figure 5: Now lift up and remove the stock air box out of vehicle.
現在抬起並從車輛中取出備用空氣箱



Figure 6: disconnect the vent hose from air box.
斷開通風軟管與空氣箱的連接



Figure 7: Loosen the 2 screw holding in the MAF sensor using T20 torx bit.
使用 T20 torx 鑽頭鬆開固定在 MAF 感應器中的 2 個螺絲



Figure 8: Now install the MAF sensor into the new intake tube.
現在將 MAF 感應器安裝到新的進氣管中



Figure 9: Secure and tighten using provided M4 screws.
使用提供的 M4 螺絲固定並擰緊



Figure 10: Install the heatshield and position into vehicle. Locate the 2 holes on heatshield to the grommets.
安裝隔熱罩並放入車內。將隔熱罩上的 2 個孔定位到索環

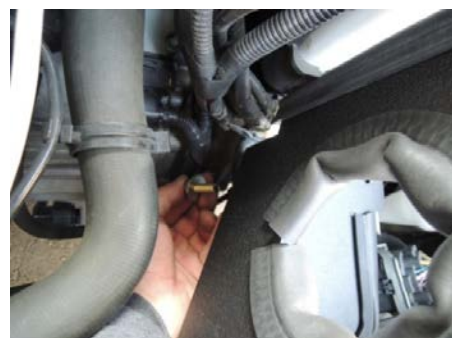


Figure 11: Secure back side the larger 2 holes on heatshield using provided Long M8 bolts and washer.
使用提供的長 M8 螺栓和墊圈固定隔熱罩上較大的 2 個孔的背面



Figure 12: Secure the washer and m8 locknut. Tighten the 2 bolts using 13mm socket and wrench.
固定墊圈和 m8 鎖緊螺母。使用 13mm 套筒和扳手擰緊 2 個螺栓



Figure 13: Now install the straight hose with clamps on the tube. Tighten the clamp on the tube side only. 現在將帶夾子的直管安裝到管子上。僅擰緊管側的夾具



Figure 14: Now install the intake tube to the hose on tube. 現在將進氣管安裝到管上的軟管上



Figure 15: Connect the MAF sensor harness. 連接 MAF 感應器線束



Figure 16: When equipped with vent hose, install the vent hose to the npt vent fitting. 配備排氣軟管時，將排氣軟管安裝到 npt 排氣接頭上

配備排氣軟管時，將排氣軟管安裝到 npt 排氣接頭上

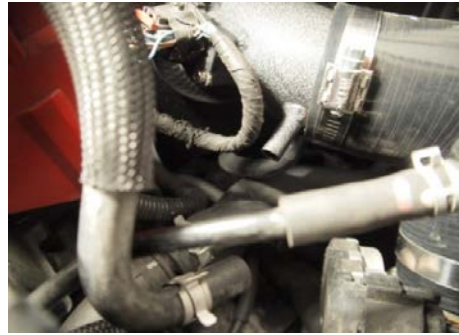


Figure 17: Connect to the intake pipe. 連接到進氣管



Figure 18: Install the EVAP vent hose to the npt vent fitting. 將 EVAP 排氣軟管安裝到 npt 排氣接頭上



Figure 19: Install the filter to the intake tube and tighten. 將過濾器安裝到進氣管上並擰緊

將過濾器安裝到進氣管上並擰緊



Figure 17: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

恭喜！您剛剛完成了該進氣系統的安裝。定期檢查進氣口的對齊情況，正常磨損會導致螺母和螺栓鬆動