



Installation Instructions For 2015+ Ford Focus Mk3.5 1.5 Ecoboost Silicone Inlet Hose

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	SILICONE INLET HOSE	1

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.

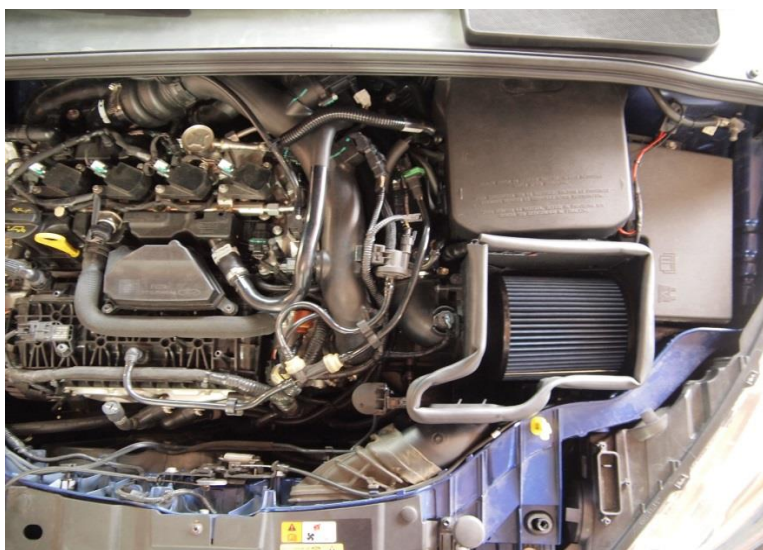




Figure 1



Figure 2

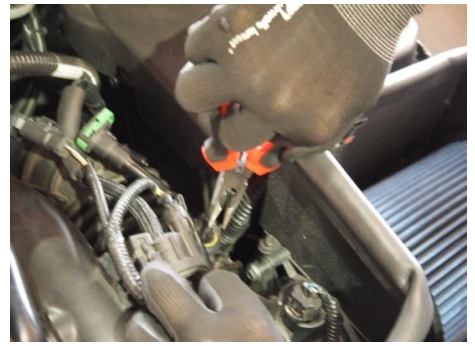


Figure 3

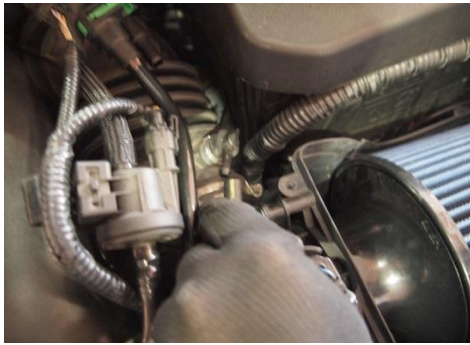


Figure 4



Figure 5

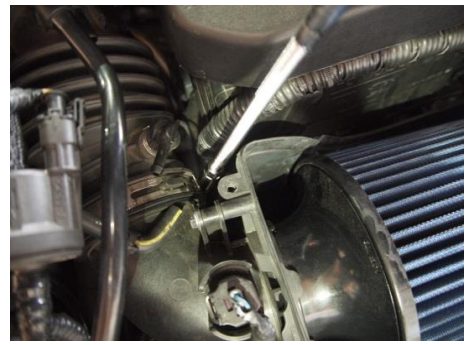


Figure 6



Figure 7



Figure 8



Figure 9

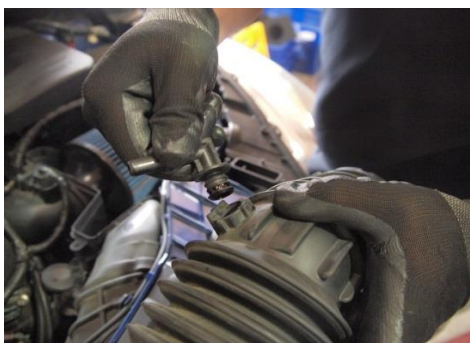


Figure 10

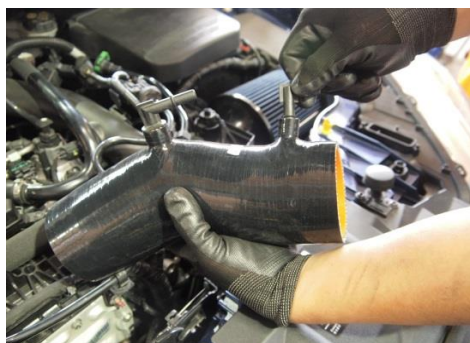


Figure 11



Figure 12



Figure 13



Figure 14



Figure 15



Figure 16

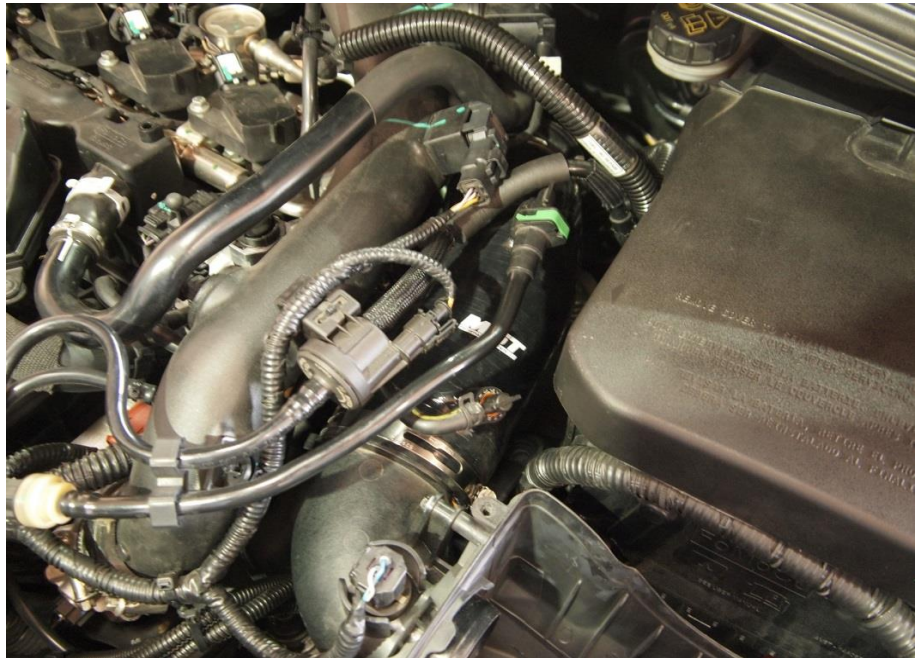


Figure 17

Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.