

KIT CONTENTS


NO.	DESCRIPTION	QTY	
1	89mm Intake Pipe	1	Please Check the Contents of this box immediately. Report any defective or missing parts to us or our dealer that you purchased this product form. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory. Installing does require some mechanical skills. A qualified mechanic is always recommended. ※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot. MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.
2	Heat Shield	1	
3	Heat Shield Cover	1	
4	Bracket	3	
5	M4 Bolt 10mm kit	12	
6	M6 Washer	3	
7	M6 Nut	1	
8	M6 Bolt	1	
9	ALU Mount	1	
10	M8 Bolt	2	
11	M8 Nut	2	
12	M8 Washer	4	
13	76-89mm Silicone Hose	1	
14	28-28mm Silicone Hose	1	
15	30mm Clamp	2	
16	76mm Clamp	1	
17	89mm Clamp	2	
18	89mm 115 Air Filter	1	

*All installation of parts must be performed by a trained professional.





Step 1. Open the hood/bonnet to make sure the engine is cool enough to work on
 步驟 1: 原廠進氣系統

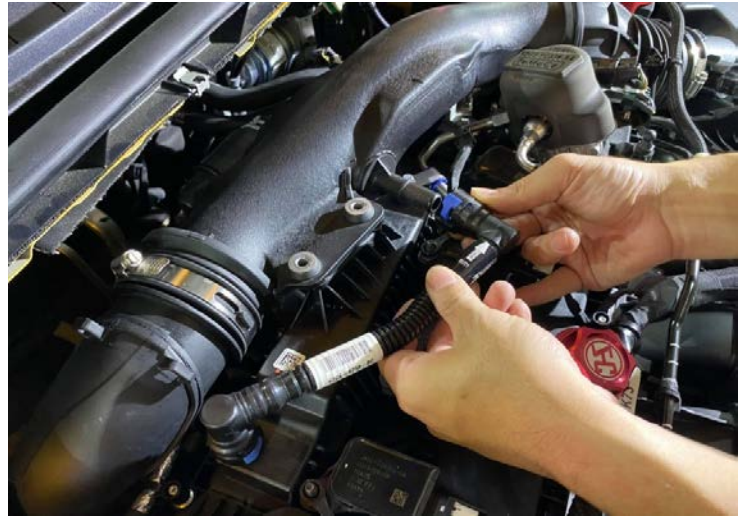

Step 4. Disconnect the Positive Crankcase Ventilation (PCV) hose from the stock induction pipe
 步驟 4: 將PCV管從原廠進氣管路上移卸下



Step 2. Use 10mm socket to remove plastic engine trim cover retainer as shown
 步驟 2: 使用10號六角取下螺絲



Step 5. Use 8mm socket to remove the stock induction pipe retaining bolts
 步驟 5: 使用8號六角工具取下進氣管固定螺絲



Step 3. Remove plastic engine trim cover
 步驟 3: 移除引擎飾板



Step 6. Use 7mm socket to loosen the stock induction pipe hoseclamp as shown
 步驟 6: 使用7號六角工具鬆開原廠進氣管管束



Step 7. Use 7mm socket to loosen the stock induction pipe hose clamp (air box side) as shown
 步驟 7: 使用7號六角工具鬆開原廠進氣管管束



Step 10. unplug the air temperature sensor plug on the air box as shown
 步驟 10: 斷開集氣箱上方溫度感應器插頭




Step 8. Use spring clamp pliers to release spring clamp and pull off the rubber pipe behind the stock induction pipe
 步驟8用夾子將原廠進氣管後方橡膠管鬆開



Step 11. Pull the stock airbox unit upward and remove it completely
 步驟 11: 將原廠集氣箱往上拉,移除集氣箱



Step 9. Remove the stock induction pipe
 步驟 9: 將原廠進氣管移除

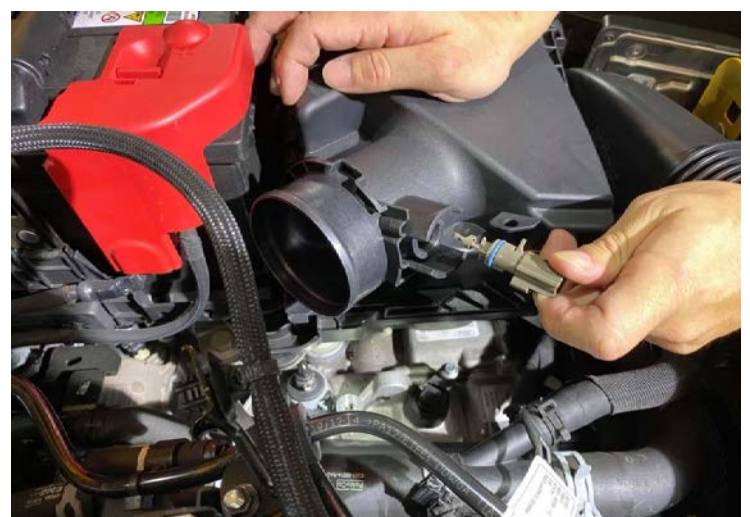

Step 12. Remove the air temperature sensor from the stock air box
 步驟 12: 將溫度感應器至集氣箱上移除



Step 13. Install the MST heat shield mounting bracket with M4 bolts onto the heat shield as shown
步驟 13: 安裝MST隔熱罩吊板,使用M4螺絲固定




Step 16. Use M6 fasteners to mount the aluminium cone shape anchor head to the mounting bracket
步驟 16: 將錐形鋁座安裝至吊板上,使用M6螺絲固定




Step 14. Install the MST heat shield mounting bracket with M4 bolts onto the heat shield as shown
步驟 14: 安裝MST隔熱罩吊板,使用M4螺絲固定



Step 17. Install the bottom half of the MST heat shield air box unit
步驟 17: 安裝MST隔熱罩

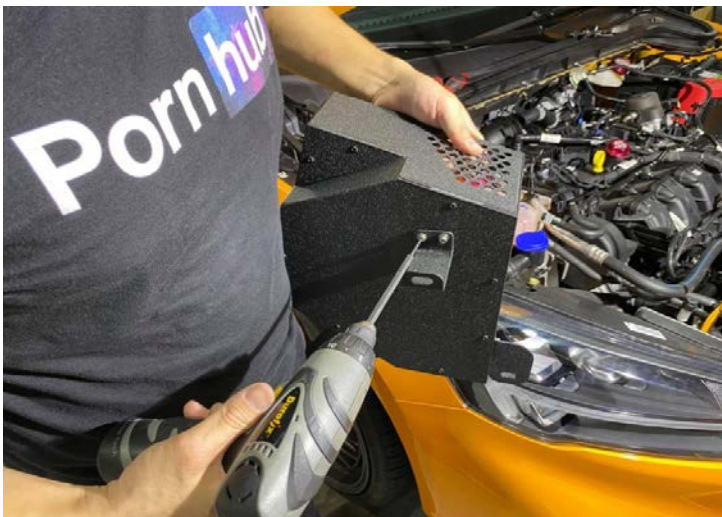


Step 15. Install the MST heat shield mounting bracket with M4 bolts onto the heat shield as shown
步驟 15: 安裝MST隔熱罩吊板,使用M4螺絲固定

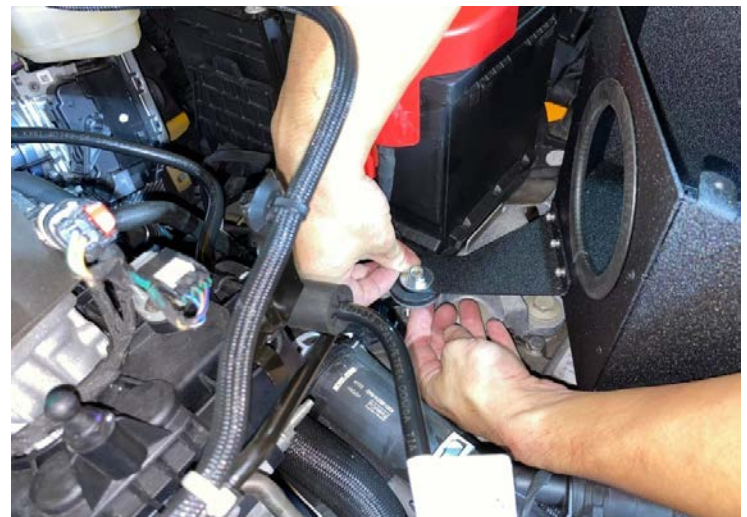


Step 18. secure the mounting bracket with M8 fasteners as shown
步驟 18: 使用M8螺絲固定隔熱罩



Step 19. secure the mounting bracket with M8 fasteners as shown
 步驟 19: 使用M8螺絲固定隔熱罩

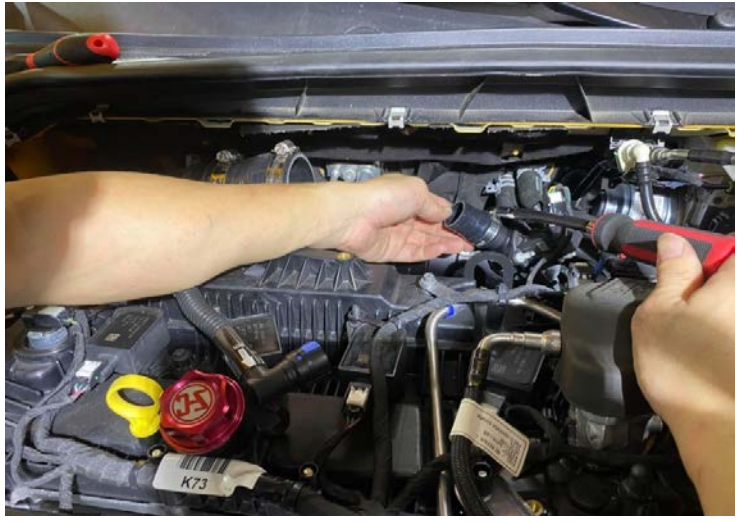

Step 22. Slide the 2 hose clamps (both 30mm hose clamps) over the MST 28-28mm Silicone hose onto the factory Blow Off Valve, fasten the hose clamp on the BOV side
 步驟 22: 安裝28-28矽膠管至原廠卸壓閥上使用管束鎖緊

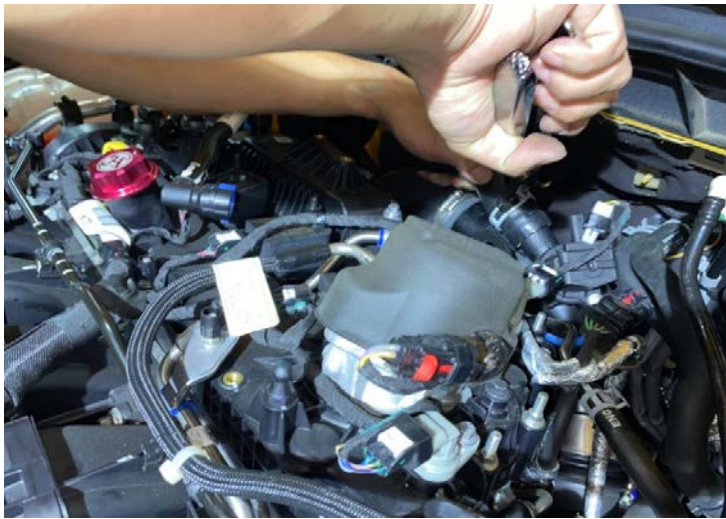

Step 20. Use spring clamp pliers to release spring clamp and remove the stock rubber hose from the factory Blow Off Valve (BOV)
 步驟 20: 移除原廠卸壓閥上方橡膠管




Step 23. fit the MST induction pipe in position
 步驟 23: 安裝MST進氣管



Step 21. Slide the 2 hose clamps (76mm + 89 mm hose clamps) over the MST 76-89mm Silicone hose and fit into position as shown (do not tighten the hose clamps yet)
 步驟 21: 安裝MST 76-89矽膠管



Step 24. Use 10mm socket and secure the induction pipe with M6 nut
 步驟 24: 使用10號工具鎖上M6固定螺母

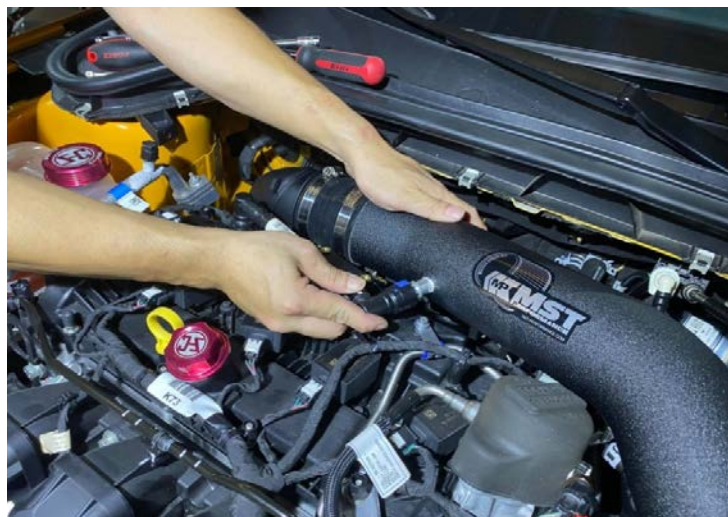

Step 25. Connect the Positive Crankcase Ventilation (PCV) to the MST induction pipe as shown
 步驟 25: 接回PCV管



Step 26. Refit the factory air temperature sensor removed back in Step 12 onto the MST induction pipe as shown
 步驟 26: 安裝溫度感應器至MST進氣管上



Step 27. Slide the 89mm hose clamp over the MST air filter and fit the air filter onto the induction pipe as shown, tighten the air filter hose clamp
 步驟 27: 安裝MST高流量濾心



Step 28. fit the MST Heat Shield Cover onto the bottom half of the air box and secure with fasteners, all the related hose clamps can now be tightened, make sure to tighten and check all of the related hose connections, hose clamps and spring clips
 步驟 28: 蓋上MST集氣箱上蓋鎖緊螺絲



Step 29 Refit the plastic engine trim cover removed back in Step 3
 步驟 29 安裝原廠引擎飾板



Step 30. Congratulations! You have just completed the MST Performance Induction system installation, be sure to periodically check all of the induction system mounting screws including hose piping connections if they come loose at all
 步驟 30: 恭喜！您已經完成MST進氣系統的安裝請定期檢查進氣系統的安裝鎖點，正常車輛使用會導致螺母和螺絲鬆動