



Installation Instructions For

2019+ Mercedes Benz A250/CLA250/A35/CAL35

2019+ A180/A200

KIT CONTENTS

NO.	DESCRIPTION	QTY	
1	CNC Intake Tube	1	Please Check the Contacts of this box immediately. Report any defective or missing parts to us or our dealer that you purchased this product form. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory. Installing does require some mechanical skills. A qualified mechanic is always recommended. ※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot. MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.
2	Heat Shield	1	
3	Heat Shield cover	1	
4	M4 Bolt 10mm	10	
5	M6 Bolt	2	
6	M6 Washer	2	
7	Heat Shiled Bracket	2	
8	Heat Shiled Mount	2	
9	Air filter 145/89mm (AT)	1	

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.

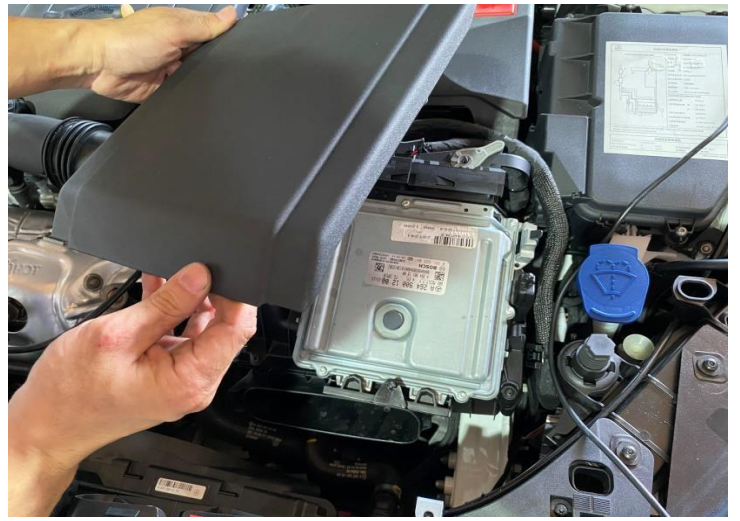


Figure 4: Remove the stock air box cover.



Figure 2: Remove the factory scoop from the vehicle.



Figure 5: Remove the ECU (DON'T DISCONNECT THE ECU)



Figure 3: Remove the factory scoop from the vehicle.

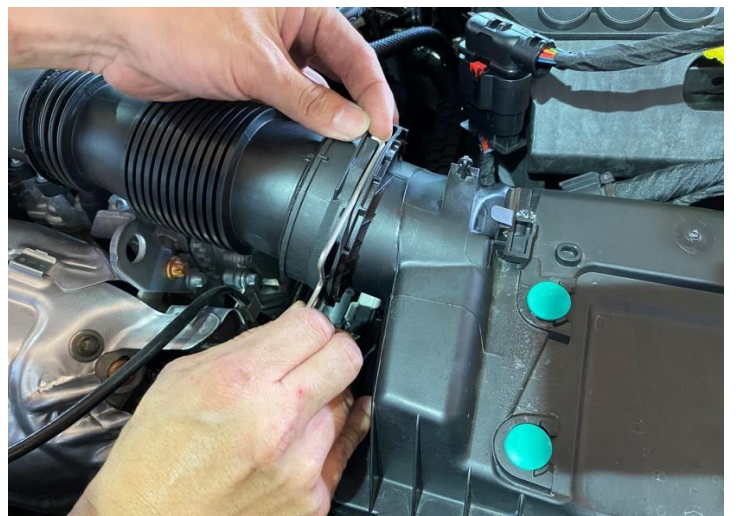


Figure 6: Remove the spring clamp.



Figure 7: Remove the stock tube. (A180/200 w/o)

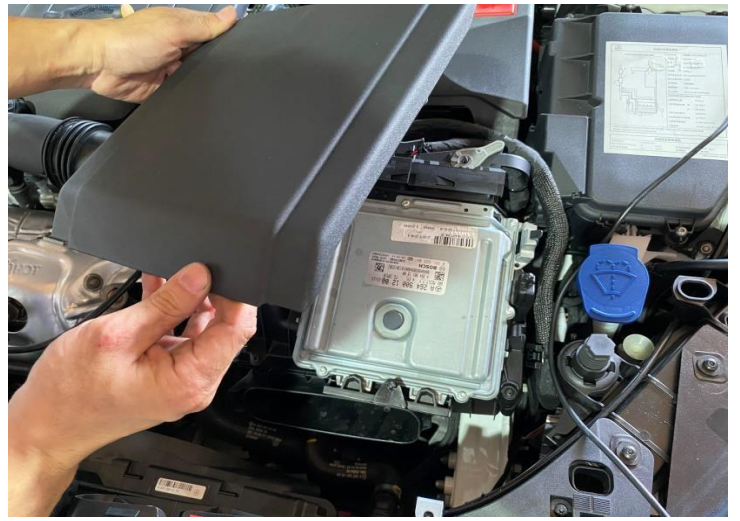


Figure 9: Remove the o-ring from the stock air box. (A180/200 w/o)



Figure 8: Remove the stock air box.



Figure 11: Install the stock o-ring on the MST tube. (A180/200 w/o)

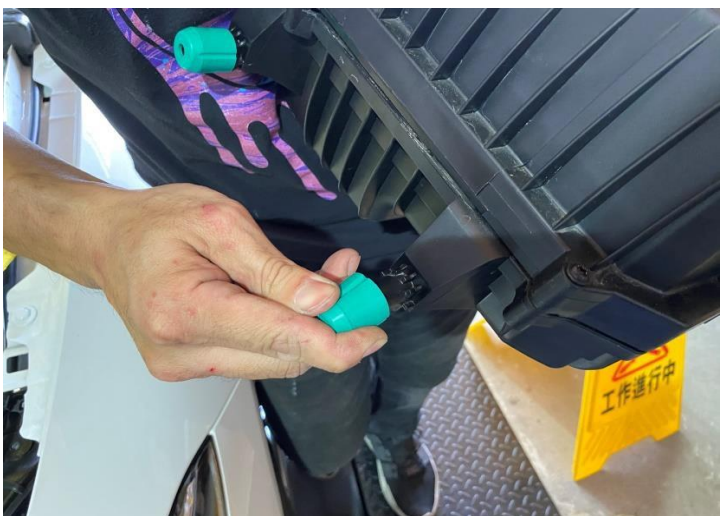


Figure 9: Remove the air box rubber*1.



Figure 12: Install the bracket and mount on heat shield.

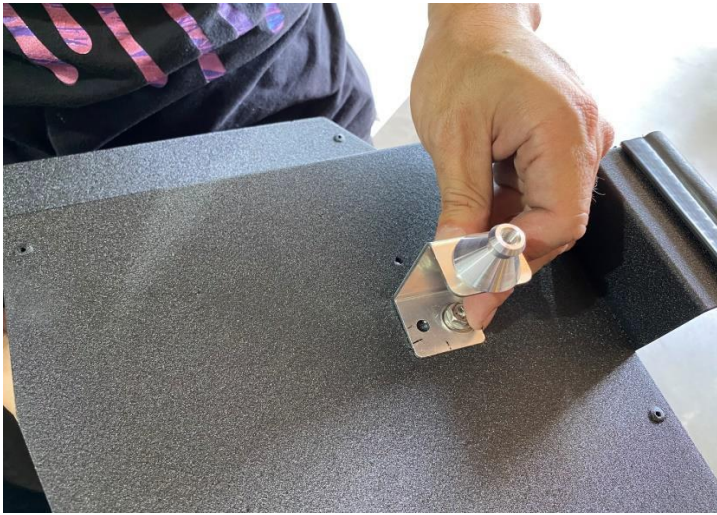


Figure 13: Install the bracket and mount on heat shield.

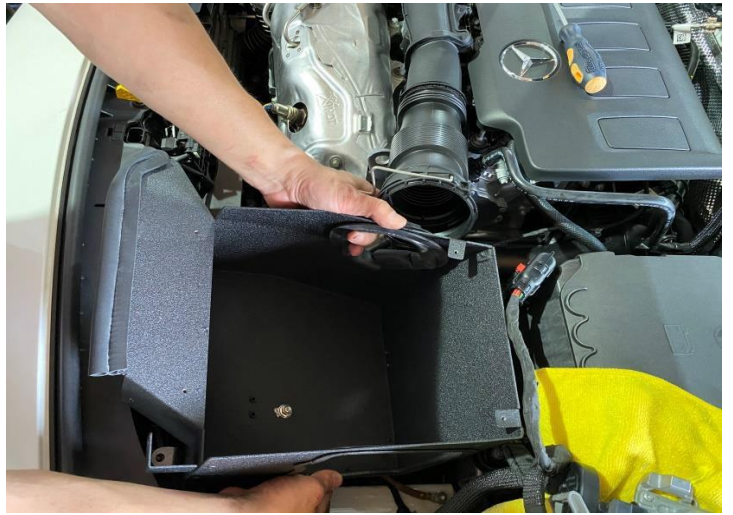


Figure 16: Set the heat shield.



Figure 14: Install the stock rubber on bracket mount.



Figure 17: Tighten the screws.

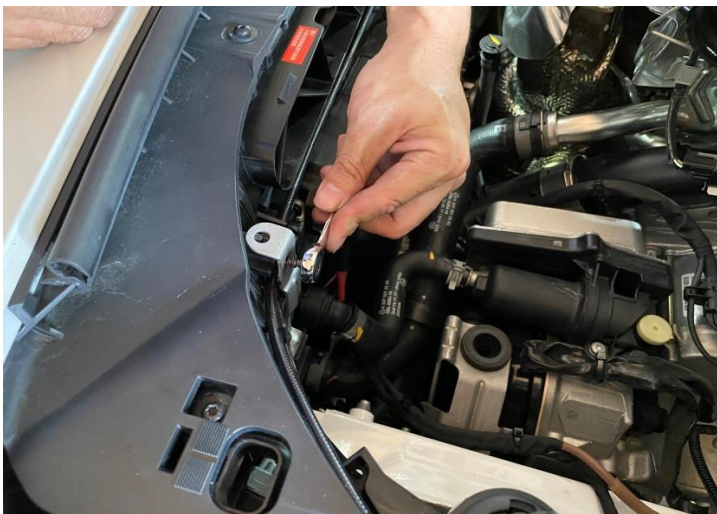


Figure 15: Remove the Screws.



Figure 18: Install the ECU on the heat shield.

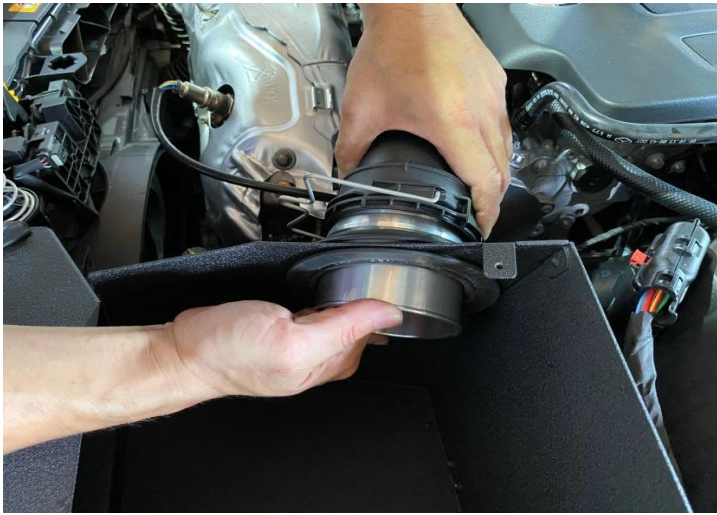


Figure 19: Install the MST tube.



Figure 20: Install the MST filter.

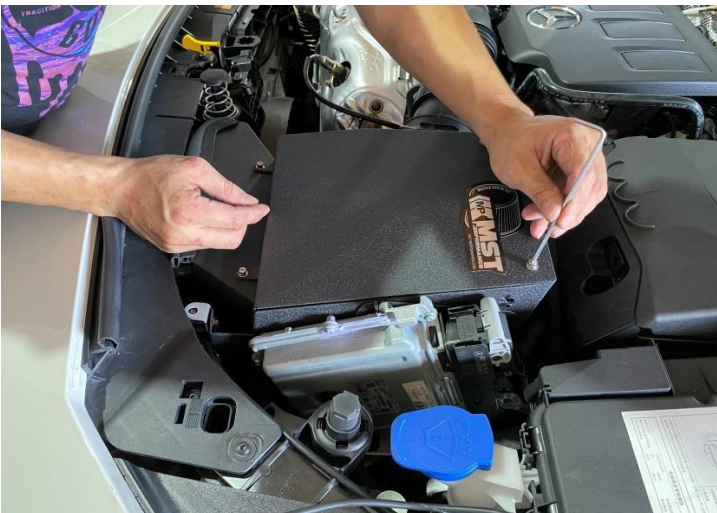


Figure 21: Install the heat shield cover and secure with bolt.



Figure 22: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.