



Installation Instructions For

2019-2021 Mercedes Benz (M264)
C180/C200/C300/GLA300

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	83-89 Intake Tube	1
2	Heat Shield	1
3	Heat Shield cover	1
4	M4 Bolt 10mm	5
5	M6 Bolt	8
6	M6 Washer	13
7	M6 Nut	5
8	Heat Shiled Bracket	3
9	Cylindrical Mount	1
10	Electrical Extensions	1
11	Air filter 145/89mm (AT)	1
12	Heat Shiled Mount	2
13	PCV Hose Connector	3
14	PCV Hose Connector 23-23mm	1
15	4 1/4 Clamp	1
16	3 1/2 Clamp	1
17	1 3/4 Clamp	1
18	1 1/16 Clamp	3

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship.

Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Remove the factory scoop from the vehicle.
從車上拆下導風管



Figure 4: Remove the spring from the stock intake tube.
從進料管上拆下彈簧



Figure 2: Remove the PCV plug.拆下 PCV 插頭



Figure 5: Remove the PCV plug.拆下 PCV 插頭



Figure 3: Remove the spring from the stock intake tube.
從進料管上拆下彈簧



Figure 6: Remove the stock intake tube.拆下進料管



Figure 7: Remove the plug. 拔下插頭

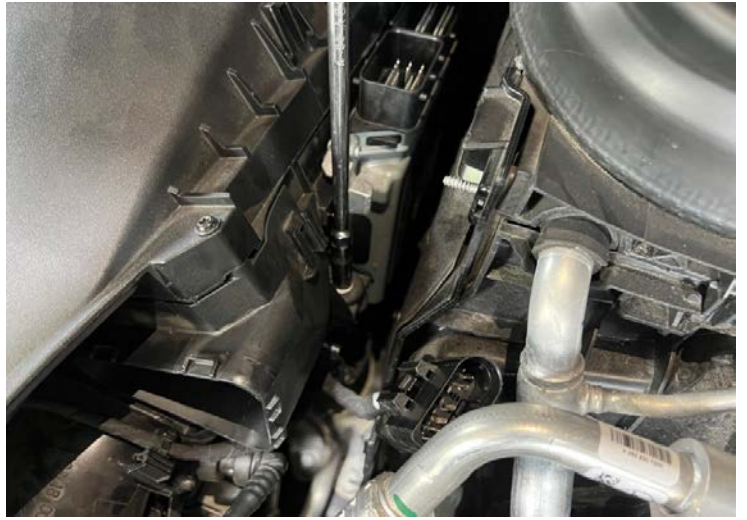


Figure 9: Remove the stock air box bolt.
拆下備用空氣箱螺栓



Figure 8: Remove the plug. 拔下插頭



Figure 11: Remove the PCV plug.
拆下 PCV 插頭



Figure 9: Remove the pressure sensor plug from air box.
從氣箱中拆下壓力感知器插頭



Figure 12: Remove the stock air box.
拆下庫存空氣箱



Figure 13: Remove the DME from stock air box.
從備用空氣箱中取出 DME



Figure 16: Install the mounts on the brackets.
將安裝座安裝到支架上

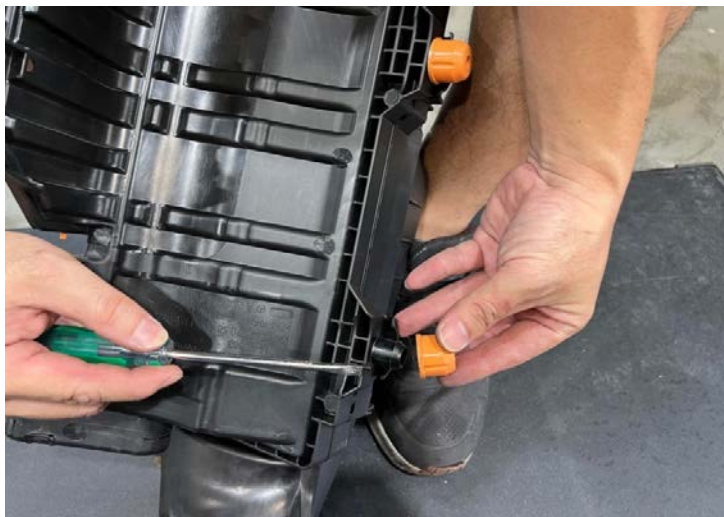


Figure 14: Remove the rubbers from stock air box.
從庫存空氣箱中取出橡膠

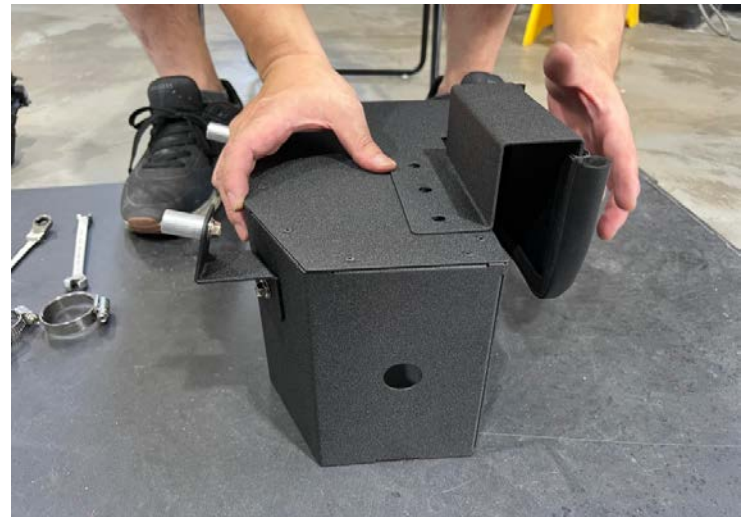


Figure 17: Install the DME bracket.
安裝 DME 支架

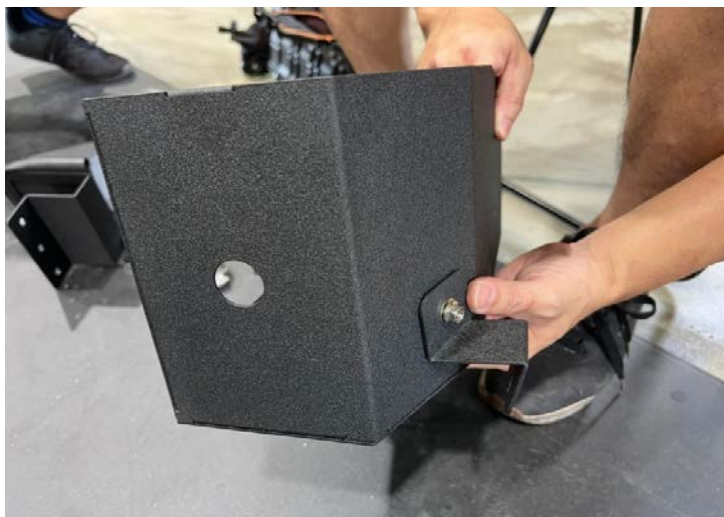


Figure 15: Install the brackets.安裝支架



Figure 18: Install the rubbers on the mounts.
將橡膠安裝到安裝座上



Figure 19: Install the cylindrical mount.
安裝圓柱形安裝座



Figure 22: Connect the electrical extension.連接電氣擴展



Figure 20: Remove the clip.取下夾子



Figure 23: Install the MST heat shield.安裝 MST 隔熱罩

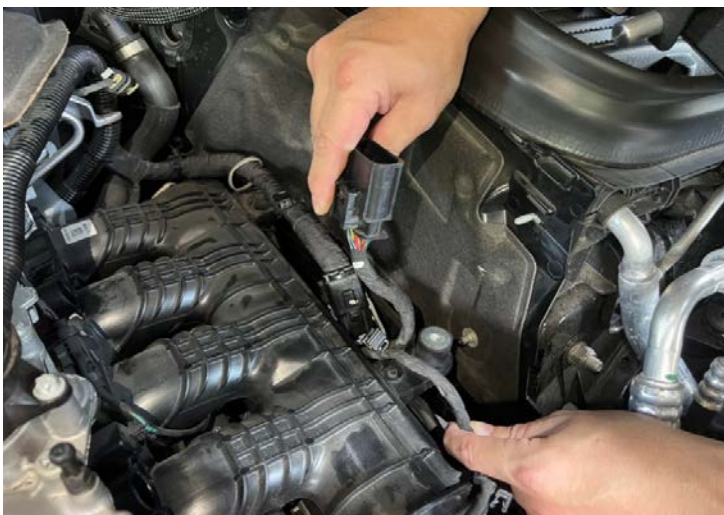


Figure 21: Move the wires to the top.將電線移至頂部



Figure 24: Tighten the bolt.擰緊螺栓



Figure 25: Install the PCV hose connector on the silicone hose.將 PCV 軟管接頭安裝到矽膠軟管上



Figure 28: Connect the PCV plug * 4.連接PCV插頭*4



Figure 26: Install the silicone hose.安裝矽膠軟管



Figure 29: Install the 83-89 tube.安裝83-89鋁管

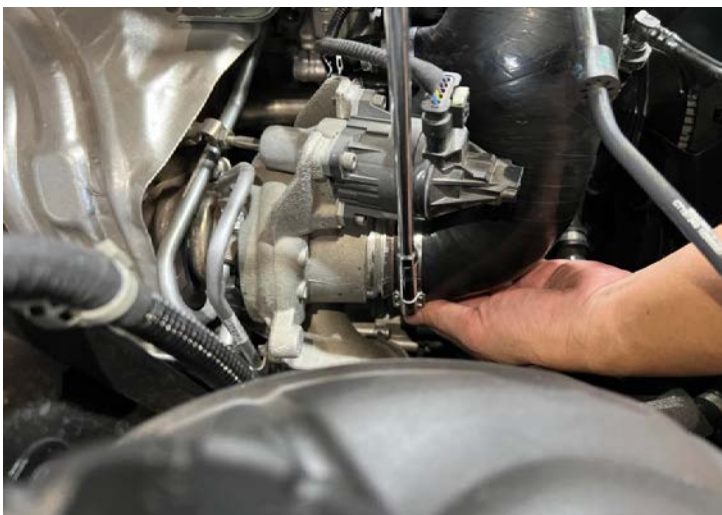


Figure 27: Tighten the clamp.擰緊夾子



Figure 30: Install the DME on the heat shield.
將 DME 安裝在隔熱罩上



Figure 31: Connect the DME plug.
連接 DME 插頭



Figure 34: Install the MST filter.安裝 MST 過濾器



Figure 32: Remove the pressur sensor from stock air box.
從原廠空氣箱取出壓力感知器



Figure 35: Install the heat shield cover.安裝隔熱罩

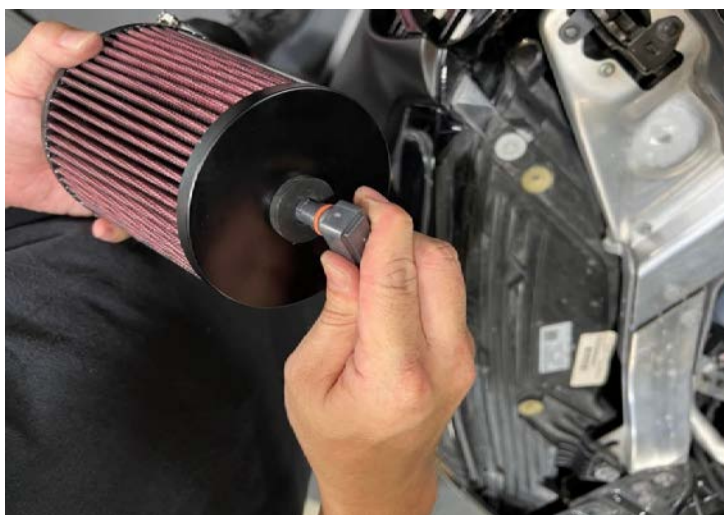


Figure 33: Install the pressur sensor on the MST filter.
將壓力感知器安裝在 MIST 過濾器上



Figure 36: Reinstall the factory scoop.
重新安裝原廠導風管



Figure 37: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts become loose.

恭喜！您剛完成了該進氣系統的安裝。定期檢查進氣口的對準情況，正常磨損會導致螺帽和螺栓鬆脫