



Installation Instructions For 2008-2023 NISSAN GTR R35

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	6" Velocity Stack	2
2	Heat Shield	2
3	Air Intake Tube	2
4	M4 Bolt	12
5	60-76 Silicone Hose	2
6	76-76 Silicone Hose	2
7	MAF Sleever	2
8	Clamp	8
9	Heat Shield Bracket	4
10	Air Filter 152mm/115L	2

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form. Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.



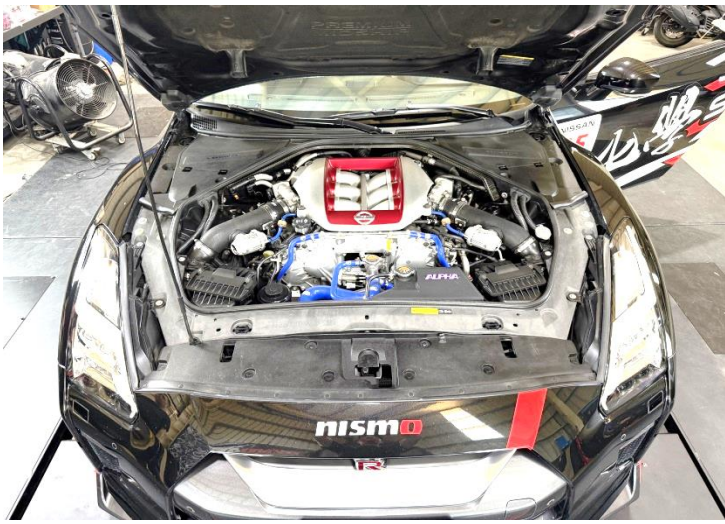


Figure 1: Stock air box.



Figure 4: Remove the stock snorkel.



Figure 2: Remove stock air box bracket bolts and air box cover.

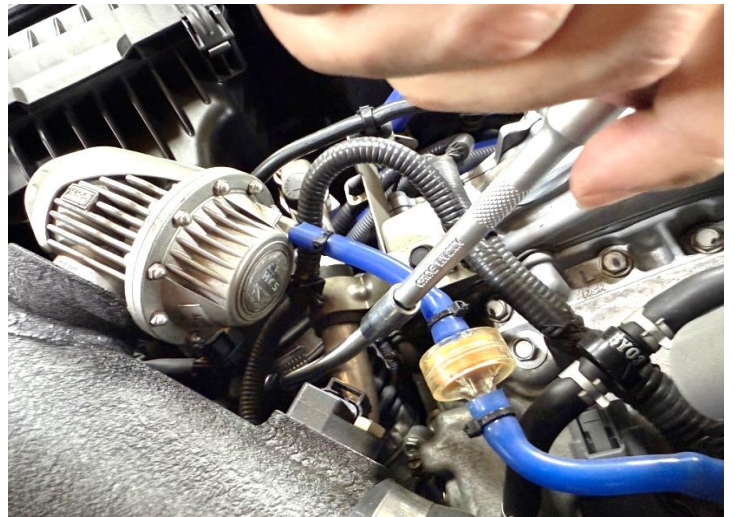


Figure 5: Loosen the stock intake hose clamps.

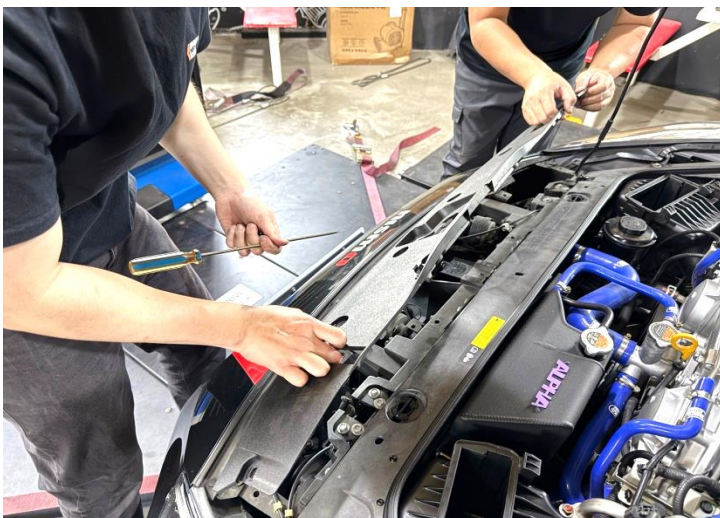


Figure 3: Remove the clips and front cover.



Figure 6: Disconnect the MAF sensor.



Figure 7: Remove the stock air box.



Figure 10: * Vehicle is stock tune please install MAF sleeve.

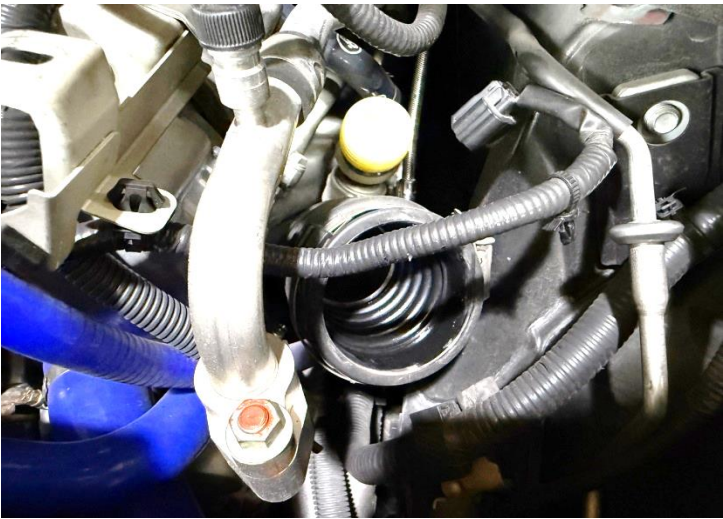


Figure 8: Remove the stock tube.



Figure 11: * Vehicle is a 3" tube remap tune, do not install the MAF sleeve.

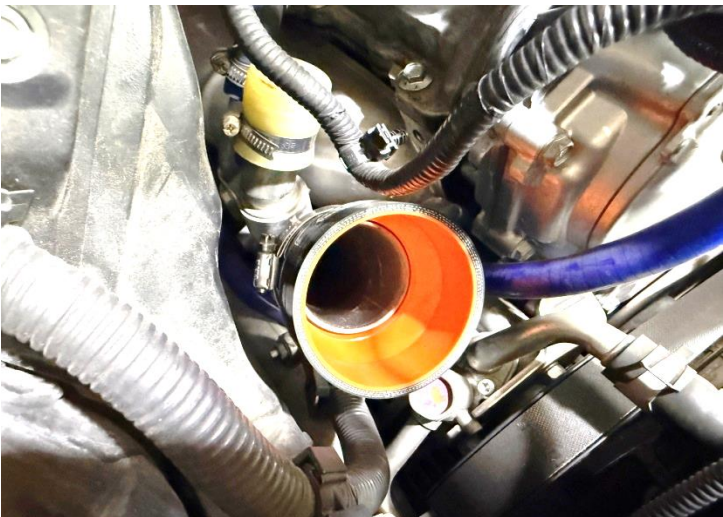


Figure 9: Install the 60-76 silicone hose on the turbo.



Figure 12: Remove the MAF from the stock air box.



Figure 13: Install the heat shield.

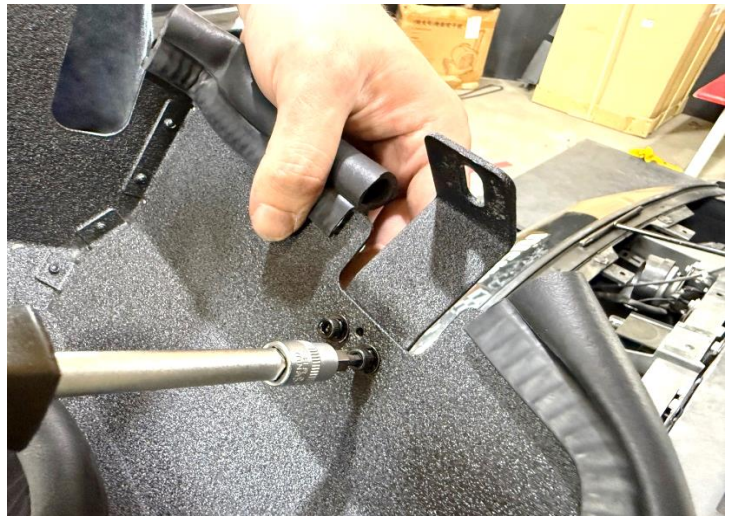


Figure 16: Install the bracket on the heat shield.



Figure 14: Install heat shield bracket and tighten the bolts.



Figure 17: Remove the stock rubber mount.



Figure 15: Install heat shield bracket and tighten the bolts.



Figure 18: Install the heat shield.



Figure 19: tighten the bracket bolts.



Figure 22: Install the 76-76 hose on the velocity stack.



Figure 20: Install the MST tube.



Figure 23: Install the velocity stack on the MST tube.



Figure 21: Install the MAF sensor and plug in the sensor connector.



Figure 24: Heat shield and air intake tube installation completed



Figure 25: Install the MST filter.



Figure 26: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.