

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Silicone Tube	1
3	Heatshield	1
4	Heatshield Cover	1
5	M4 Bolt	6
6	M4 Washer	4
7	M4 Spring Washer	4
8	M6 Bolt	3
9	M6 Washer	4
10	M6 Nut	1
11	Mount Rubber	1
12	Bracket A	1
13	Bracket B	1
	★Choose the proper bracket (A or B) for the model version	
14	Air Filter	1
15	Clamp	2

Please Check the Contents of this box immediately.

*Report any defective or missing parts to us or our dealer that you purchased this product form.

*Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

*Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid that may be hot.

*MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workman shop. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure1. Stock air box.

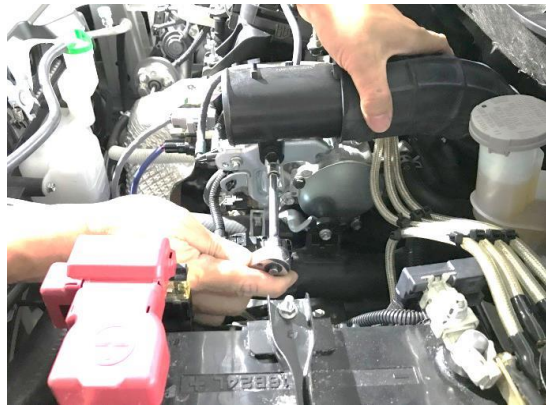


Figure 5. Remove the stock tube bracket.



Figure 2. Remove the engine cover.

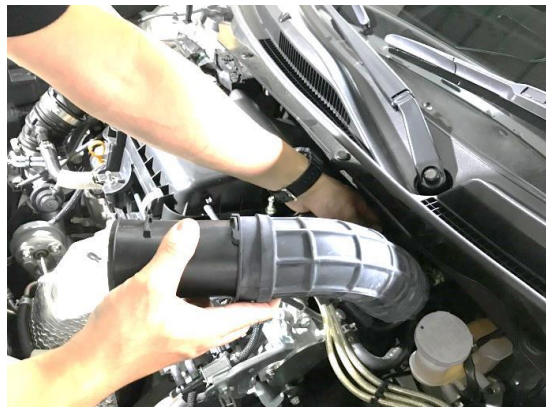


Figure 6. Remove the stock tube.



Figure 3. Remove the bolts.



Figure 7. Remove the air box bolts.

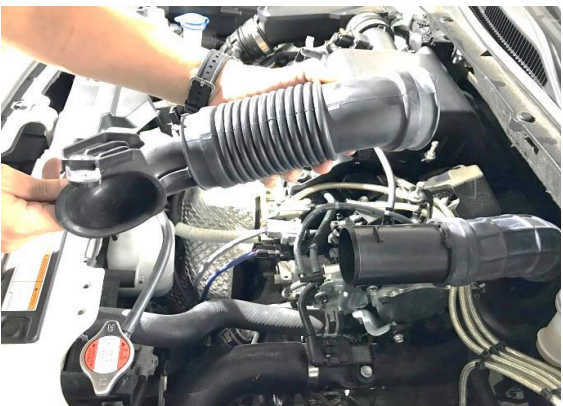


Figure 4. Remove the scoop.



Figure 8. Remove the PCV.



Figure 9. Disconnect the mass air sensor.



Figure 13. Remove the stock tube.



Figure 10 . Remove the MAF sensor from the airbox.



Figure14. Open the air box cover.



Figure 11. Loosen the hose clamp.



Figure 15. Remove the stock air filter.



Figure 12. Loosen the hose clamp.



Figure 16. Remove the stock air box.



Figure 17. Install the MST silicone tube.



Figure 18. Connect the PCV.



Figure 19. Remove the bolt.

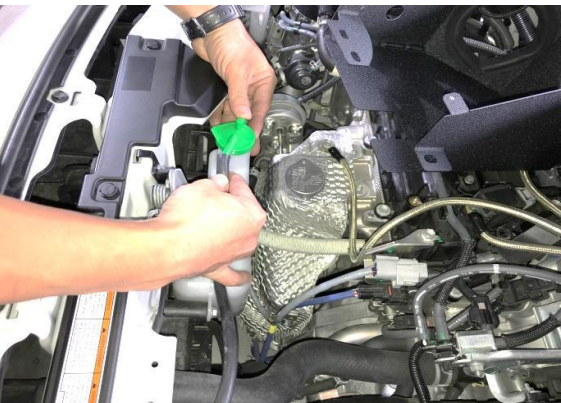


Figure 20. Remove the radiator hose.

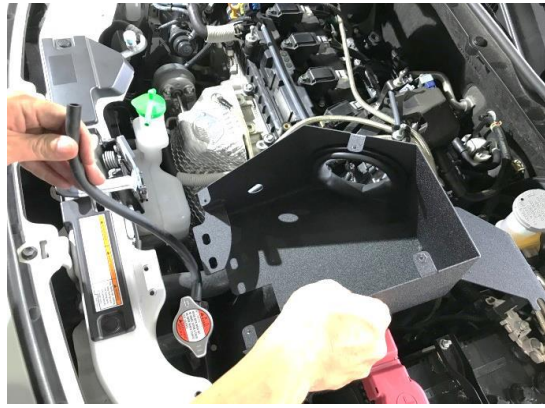


Figure 21. Install the heat shield.



Figure 22. Get the hose through the heat shield.



Figure 23. Secure the heat shield bracket A at battery side with bolt. *Choose Bracket B if there's no the same mounting point for your vehicle model.



Figure 24. Install the mount Rubber.
*Choose bracket B for your vehicle model



Figure 25. Install the bracket B
★Choose the proper bracket (A or B) for the model version



Figure 29. Install the air filter.



Figure 26. Install the intake tube.



Figure 30. Install the heat shield cover.



Figure 27. Connect the MAF plug to the MAF sensor.



Figure 28. Connect the MAF plug to the MAF sensor.

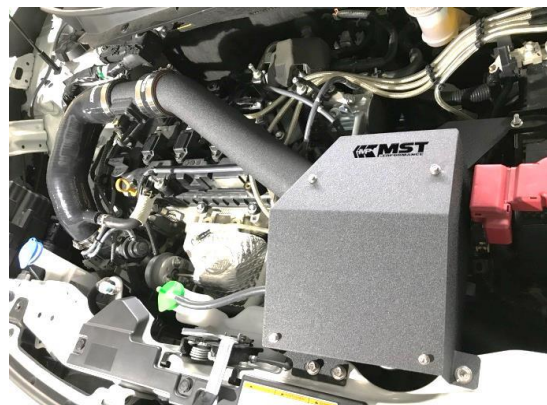


Figure 31. Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.