



Installation Instructions For

2016-2021 SUBARU WRX 2.0/LEVORG 2.0
/ LEVORG 1.6

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Tube	1
2	Air Box	1
3	Silicone Hose	2
4	152mm Air Filter	1
5	152-76mm Velocity Stack	1
6	MAF Sleeve	1
7	Clamps	4
8	M4 Bolts	6
9	M6 Bolte	4
10	M6 Spacer	4
11	M6 Nuts	3
12	Extension Harness	1
13	M8 Spacer	1
14	Air Scoop	1
15	Bracket	1
16	Rubber Mount	2

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship.

Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Remove the air scoop retaining clips.



Figure 4: Remove the bolt from stock air box.



Figure 2: Revome the air scoop.



Figure 5: Disconnect the MAF sensor.



Figure 3: Remove the bolts from stock air box bracket.

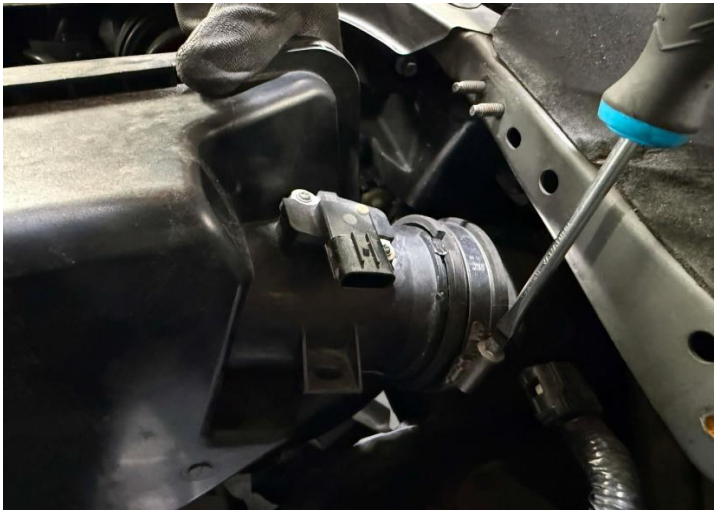


Figure 6: Loseen the sotck tube clamp.

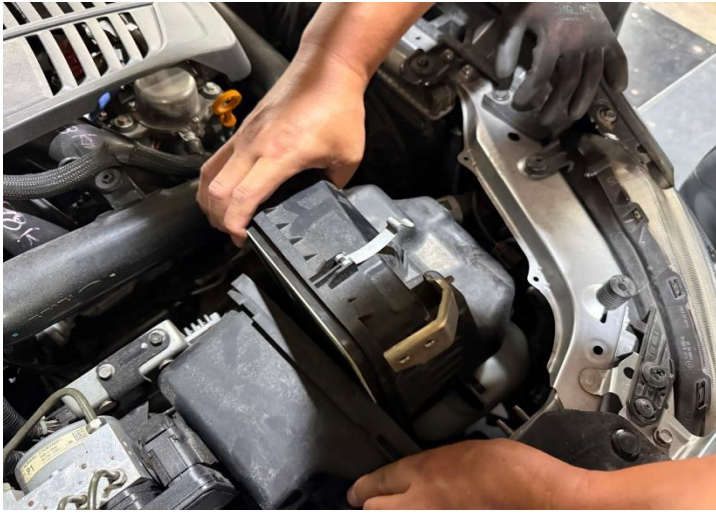


Figure 7: Remove the stock air box.



Figure 10: Loseen the clamp on the turbo inlet.



Figure 8: Loseen the stock tube clamp and rubber mount.



Figure 11: Remove the stock intake tube.



Figure 9: Remove the stock intake tube.



Figure 12: . Install the stock MAF sensor on the MST tube.



Figure 13: Install the silicone hose onto the MST tube, ensuring it is oriented at the correct angle.



Figure 16: Tighten the MST tube onto the rubber mount.



Figure 14: Install the rubber mount onto the bracket.



Figure 17: Install the rubber mount onto the vehicle body.



Figure 15: Install the MST tube and connect it to the turbo inlet. Tighten the hose clamp.



Figure 18: Install the MST air box bracket onto the vehicle body.



Figure 19: Connect the extension harness and connect the MAF.



Figure 22: Install the MST air box.



Figure 20: A sleeve is install inside the MST tube.



Figure 23: Tighten the bolts.



Figure 21: Install the silicone hose onto the MST tube



Figure 24: Install the MST filter.



Figure 25: Tighten the air filter clamp through the service access hole in the MST air box.



Figure 28: Install the air scoop retaining clips.



Figure 26: Install the rubber plug to seal the service access hole.



Figure 29: Install the air box cover and tighten the M4 bolts.



Figure 27: Install the MST air scoop.



Figure 30: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.