



Installation Instructions For 2019-2025 TOYOTA COROLLA 2.0L

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Air Box	1
3	Air Box Cover	1
4	M4 Bolt 6mm	6
5	M6 Bolt	2
6	M6 Washer	2
7	EVAP Solenoid Bracket	1
8	Clamps	4
9	70-76(15)Silicone Hose	1
10	70-70 Silicone Hose	2
11	MAF Sleeve	1
12	Air Filter 76/115mm	1
13	MST Rubber Plug	1
14	16mm PCV Hose	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.






步驟 1: 原廠集氣箱



步驟 4: EVAP從原廠進氣管路拔除



步驟 2: 斷開MAF接頭

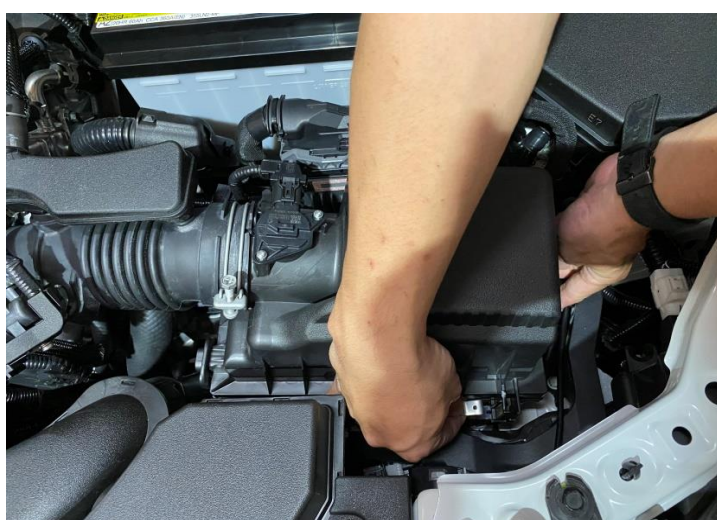


步驟 5: 鬆開原廠集氣箱上蓋彈簧移除上蓋



步驟 3: PCV管路從原廠進氣管上拔除




步驟 6: 移除原廠濾心

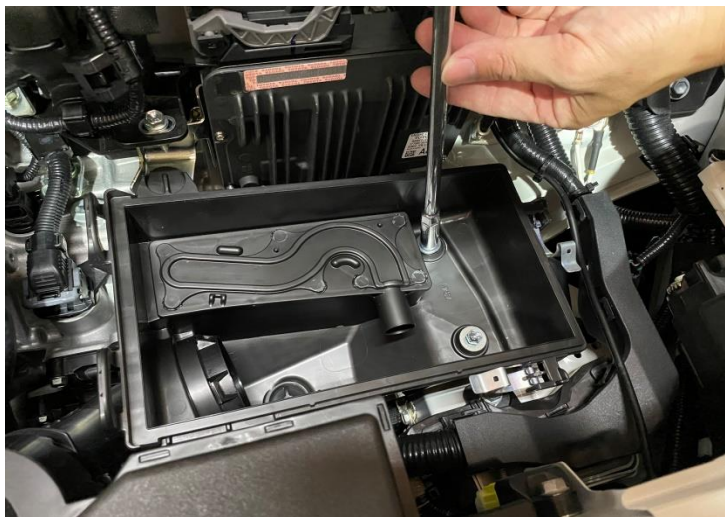

步驟 7: 鬆開集氣箱內的固定螺絲



步驟 10: 從原廠進氣管上移除MAF

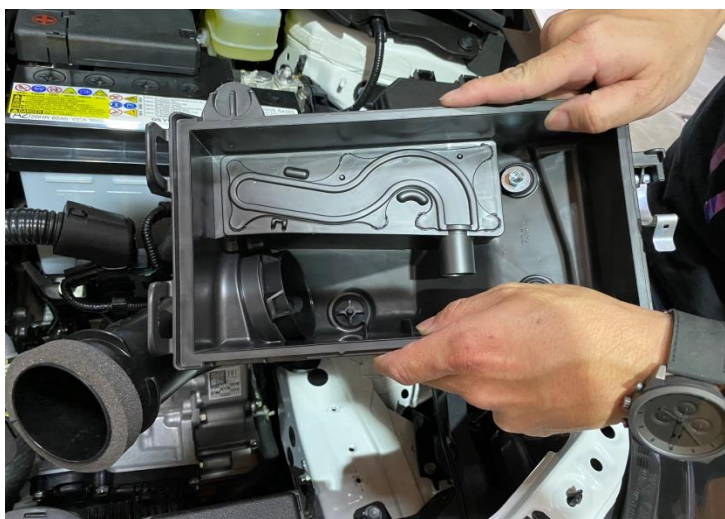

步驟 8: 移除原廠集氣箱



步驟 11: 將MAF安裝至MST進氣管路



步驟 9: 用十字起子鬆開MAF螺絲



步驟 12: 將MAF感應器套管裝入MST 鋁管內



步驟 13: 安裝70-76 15度矽膠管至節氣門，注意角度



步驟 16: 安裝集氣箱



步驟 14: 鎖緊管束



步驟 17: 使用原廠螺絲固定集氣箱



步驟 15: 安裝70-70直管矽膠至集氣箱上



步驟 18: 鎖緊導風口矽膠




步驟 19: 將濾心放入集氣箱內



步驟 22: 鬆開原廠EVAP支架上的螺絲



步驟 20: 安裝MST進氣管，濾心跟進氣管連接

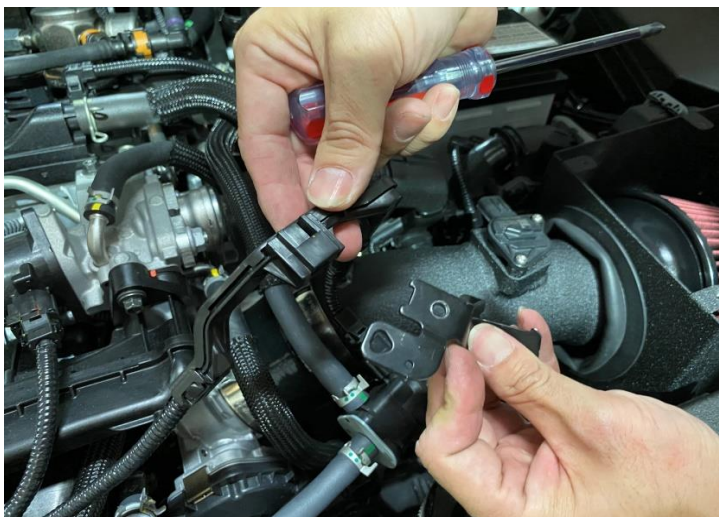

步驟 23: 將EVAP從原廠支架上移除



步驟 21: 安裝PCV真空管和連接MAF接頭



步驟 24: 安裝EVAP至MST支架



步驟 25: 使用螺絲固定



步驟 28: 安裝MST集氣箱上蓋鎖緊螺絲



步驟 26: 固定EVAP支架到進氣管路上



步驟 29: 恭喜！您已經完成進氣系統的安裝，請定期檢查進氣系統的安裝鎖點，正常車輛使用會導致螺母和螺絲鬆動



步驟 27: 鎖緊M6螺絲