



Installation Instructions For

2023+ TOYOTA GR COROLLA P2C90 CODE FIX PARTS

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	T-Piece	1
2	4mm Vacuum Hose L 24.5cm	2
3	4mm Vacuum Hose L 14cm	1
4	4mm Rubber Cap	2

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.



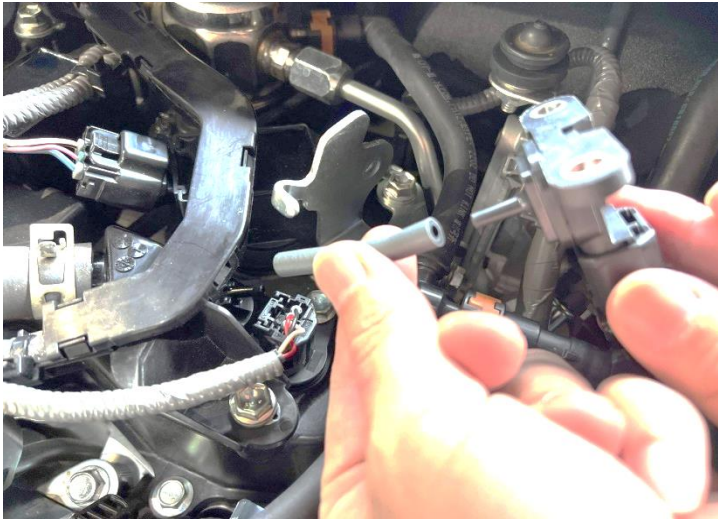


Figure 1: Remove the stock short vacuum hose from PCV pressuer sensor.



Figure 4: Disconnect the vacuum line from the E.F.I sensor

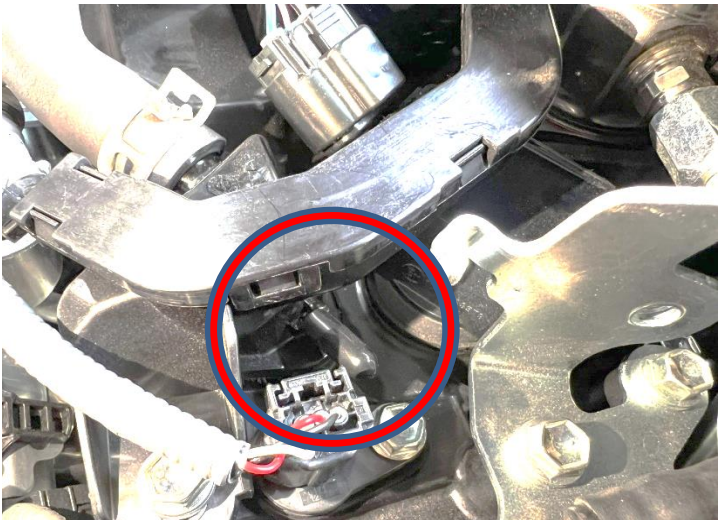


Figure 2: 4mm rubber cap to plug the PCV.



Figure 5: Remove the vacuum hose.

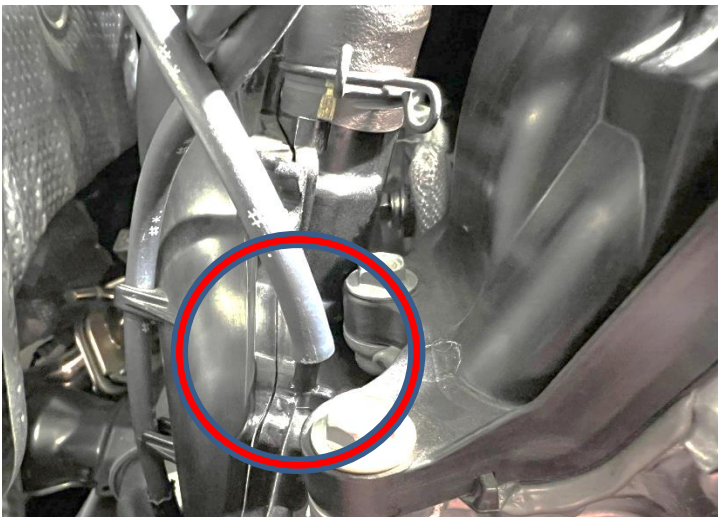


Figure 3: Disconnect the vacuum hose from the turbo air inlet.

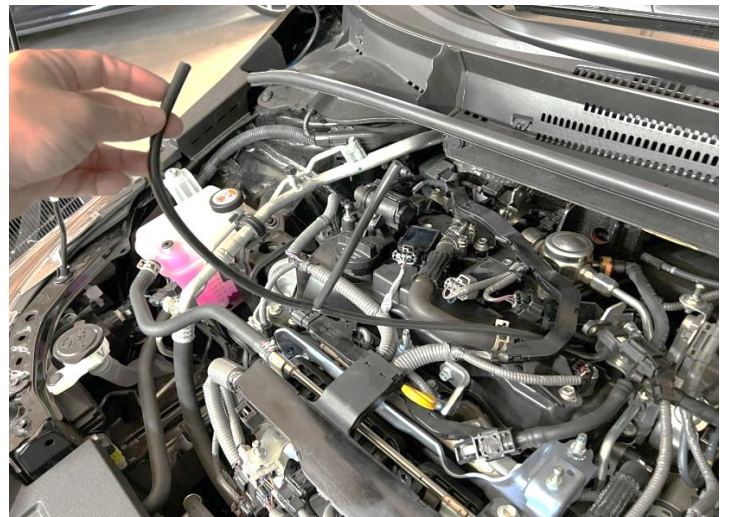


Figure 6: Install the T-Fix vacuum hose.

ATTENTION!



Figure 7: Connect the vacuum hose to the PCV sensor.



Notice: Connect plug, rubber hose to plug the vacuum module


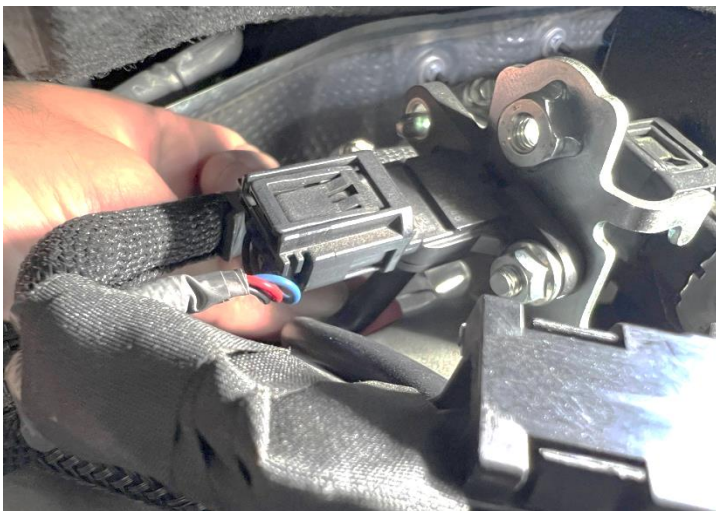


Figure 8: Connect the vacuum hose to the E.F.I sensor.

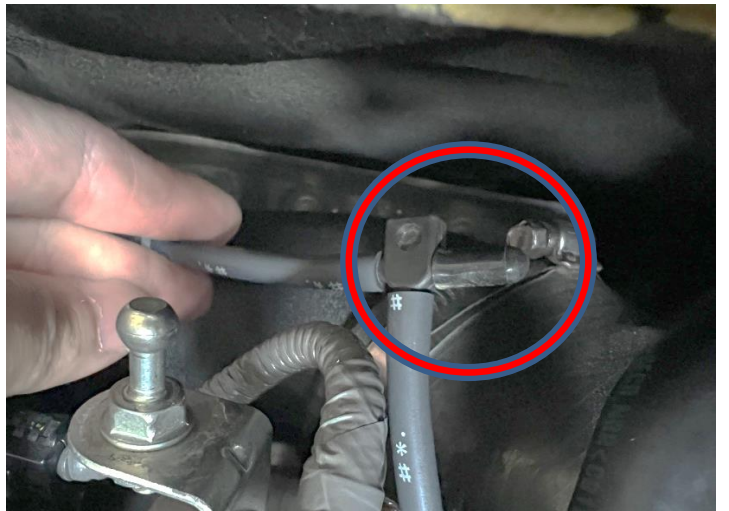

Notice: 4mm rubber cap to plug the T-Piece.

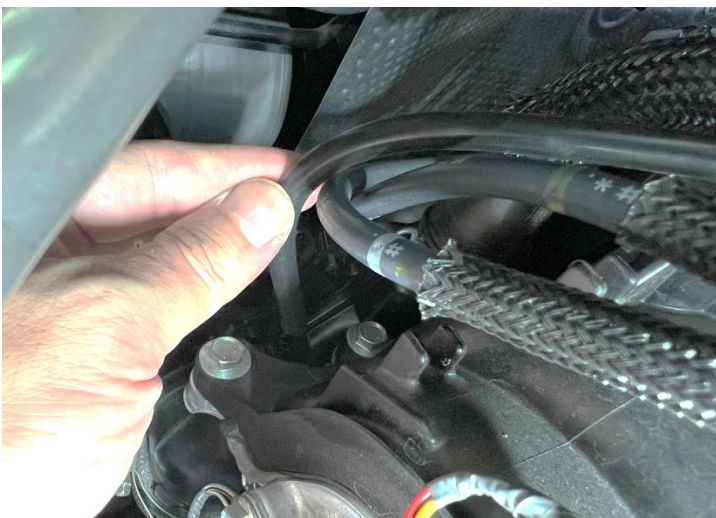


Figure 9: Connect the vacuum hose to the turbo air inlet.



Notice: If you got a V1 fix, please remove the vacuum hose and plug it with a rubber cap