



Installation Instructions For 2020+ TOYOTA GR YARIS 1.6T

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	MST Adapter	1
2	Silicone Hose	1
3	Clamp	2
4	M8 15L Bolt	2
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.



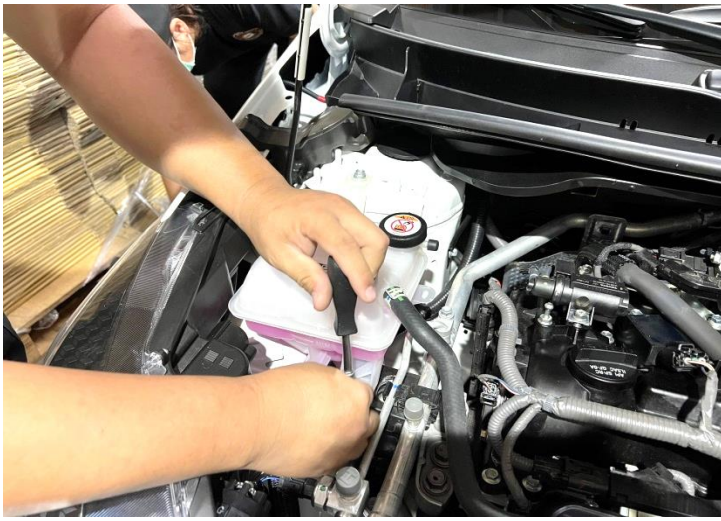


Figure 1: Remove the coolant reservoir bolts.



Figure 4: . Remove the 12mm nut X 2

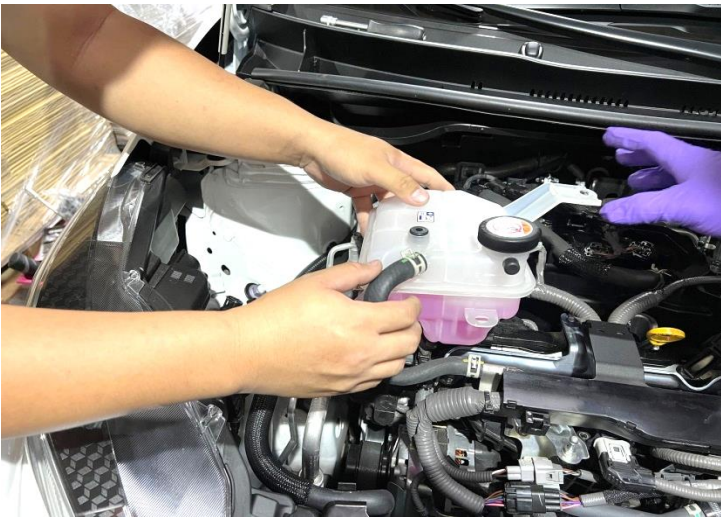


Figure 2: Move the Coolant Reservoir and don't loosen the hose.



Figure 5: Remove the stock inlet from the turbo.



Figure 3: Loosen the stock inlet hose clamp.



Figure 6: Remove the 10mm bolt from turbo.



Figure 7: Remove the stock o-ring from stock inlet.



Figure 10: Tighten the bolts.



Figure 8: Install the stock o-ring on MST inlet adapter.



Figure 11: Install the MST silicone hose and 2 clamps.



Figure 9: Install the MST inlet adapter on turbo.

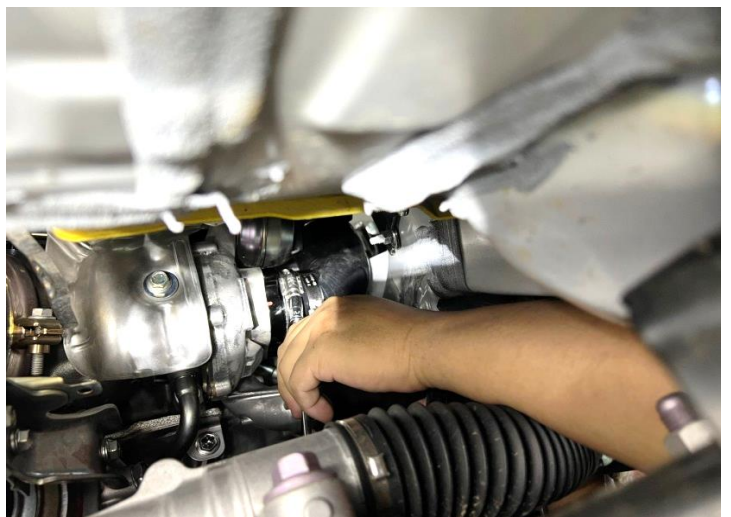


Figure 12: Tighten the clamp.

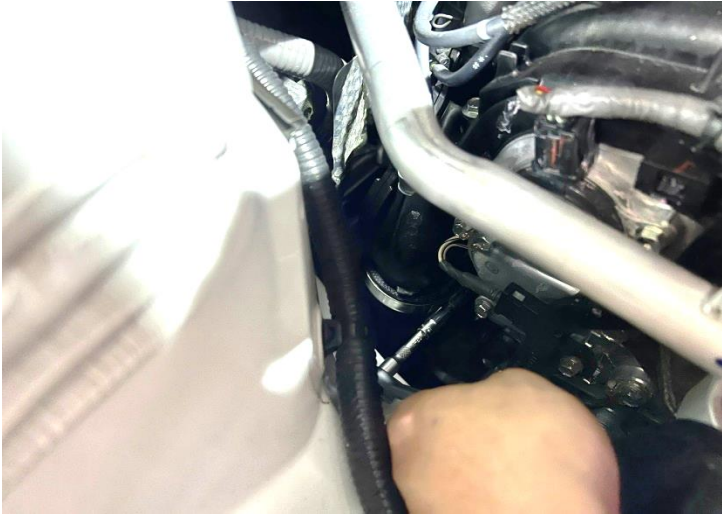


Figure 13: Tighten the clamp.

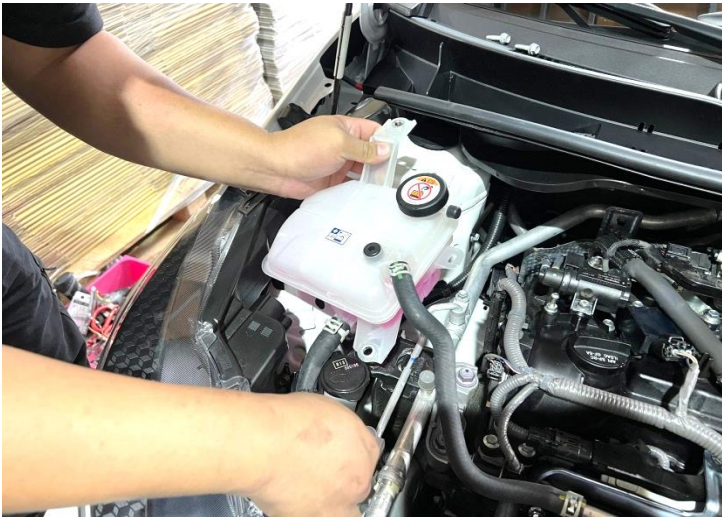


Figure 14: Re-install the Coolant Reservoir.