



Installation Instructions For 2019+ TOYOTA SUPRA / BMW Z4 3.0L

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	4" Intake Pipe	1
2	Heat Shield	1
3	Heat Shield Cover	1
4	M4 Bolt 8mm	7
5	M4 Spring Washer	5
6	M4 Washer	5
7	M8 Bolt	1
8	M8 Nut	1
9	M8 Washer	2
11	102-102 Silicone Hose	1
12	Clamps	2
13	Air Filter 100/155mm	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.



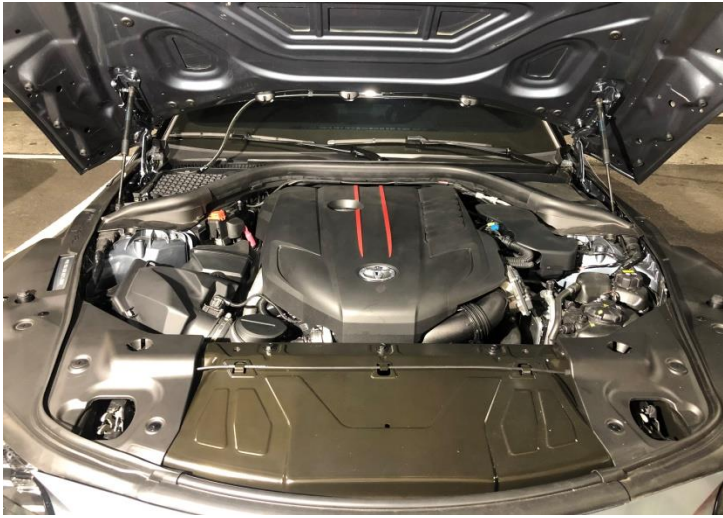


Figure 1: Stock air box.



Figure 4: Loosen stock air box cover spring.



Figure 2: Disconnect the mass air sensor.



Figure 5: Remove stock air box cover.



Figure 3: Loosen the hose clamp.



Figure 6: Remove the stock turbo inlet pipe spring.



Figure 7: Remove the PCV.



Figure 10: Remove the stock hose.



Figure 8: Remove the stock turbo inlet pipe.

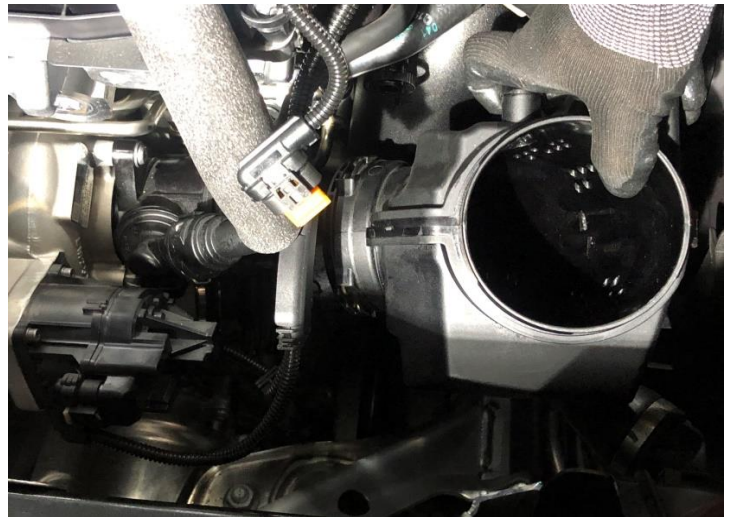


Figure 11: Install the stock turbo pipe.



Figure 9: Loosen the hose clamp.



Figure 12: Install the silicone hose.



Figure 13: Loosen the screw.



Figure 16: Install the heat shield bracket with bolt.



Figure 14: Install the heat shield.



Figure 17: Secure the heat shield bracket with bolt.



Figure 15: Secure the heat shield bracket with bolt.



Figure 18: Remove the mass air flow sensor from the stock air box.



Figure 19: Install mass air sensor into the intake pipe.

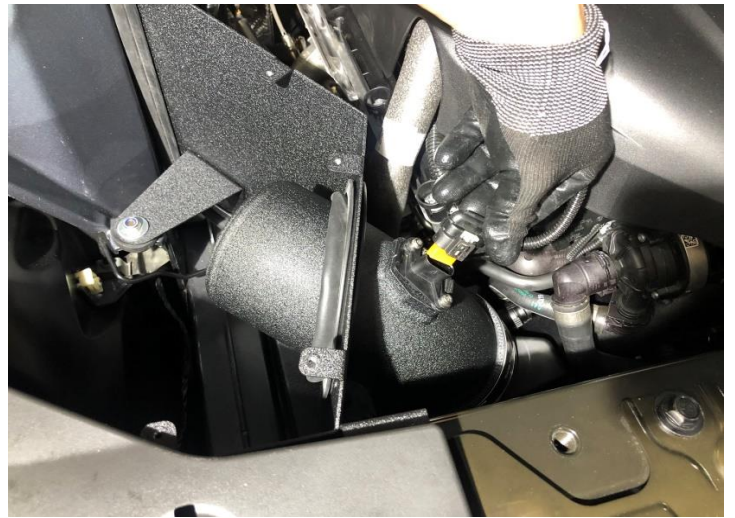


Figure 22: Plug in the mass air flow sensor connector.



Figure 20: Install the intake pipe.



Figure 23: Install the air filter.



Figure 21: Tighten the hose clamp.



Figure 24: Install the heat shield cover and secure with bolt



Figure 25: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.