



Installation Instructions For 2019+ TOYOTA SUPRA / BMW Z4 B48 2.0L

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	89mm Intake Pipe	1
2	Heat Shield	1
3	Heat Shield Cover	1
4	M4 Bolt kit	8
5	M8 Bolt	1
6	M8 Nut	1
7	M8 Washer	2
8	Silicone Turbo Inlet Pipe	1
9	Inlet Pipe Adapter	1
10	Clamps	2
11	Air Filter 89/115mm	1
12	PCV Cap (U.S Only)	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.



Figure 4: Remove the stock air box.

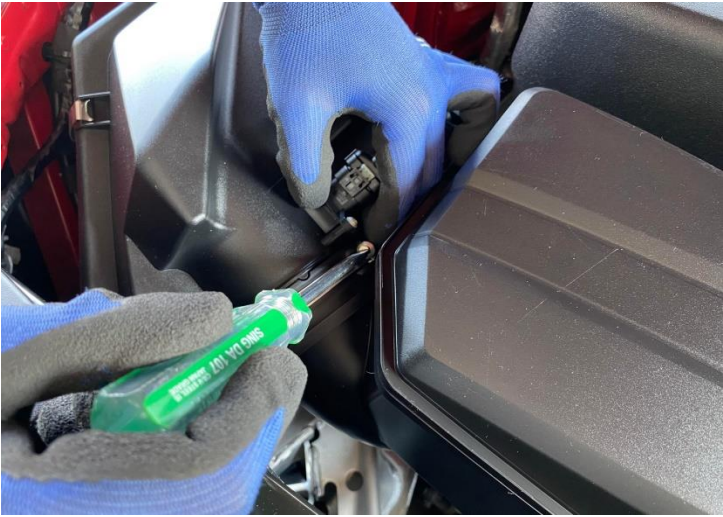


Figure 2: Loosen the hose clamp.

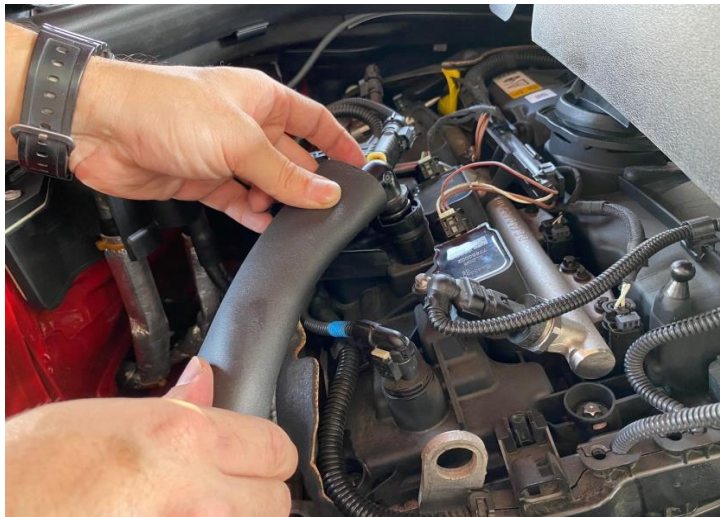


Figure 5: Remove the PCV.



Figure 3: Disconnect the mass air sensor.



Figure 6: Disconnect the PCV sensor.



Figure 7: Remove the PCV.



Figure 10: Remove the PCV.



Figure 8: Remove the stock spring on inlet pipe.



Figure 11: Install the inlet adapter.



Figure 9: Remove the stock turbo inlet pipe.



Figure 12: Remove the O-Ring from stock inlet pipe.



Figure 13: Install the O-Ring on MST adapter.



Figure 16: Secure the heat shield breaket with bolt.



Figure 14: Install the spring.



Figure 17: Secure the heat shield breaket with bolt.



Figure 15: Install the heat shield.



Figure 18: Install the silicone turbo inlet pipe.



Figure 19: Install the PCV.



Figure 22: Install mass air sensor on the intake pipe.

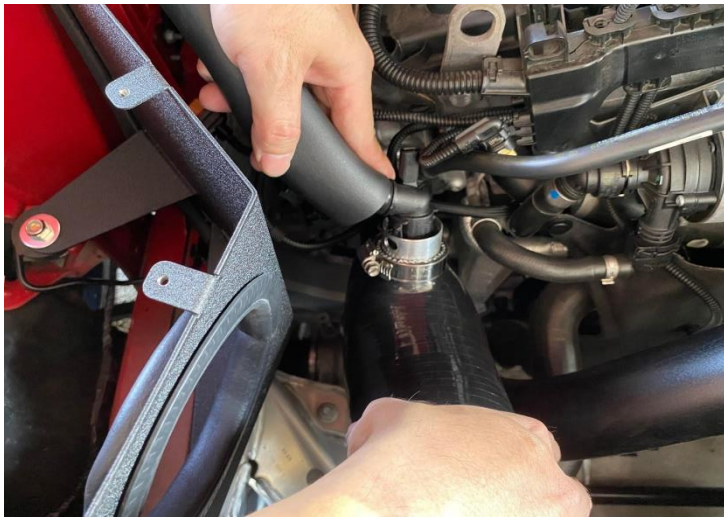


Figure 20: Install the PCV.

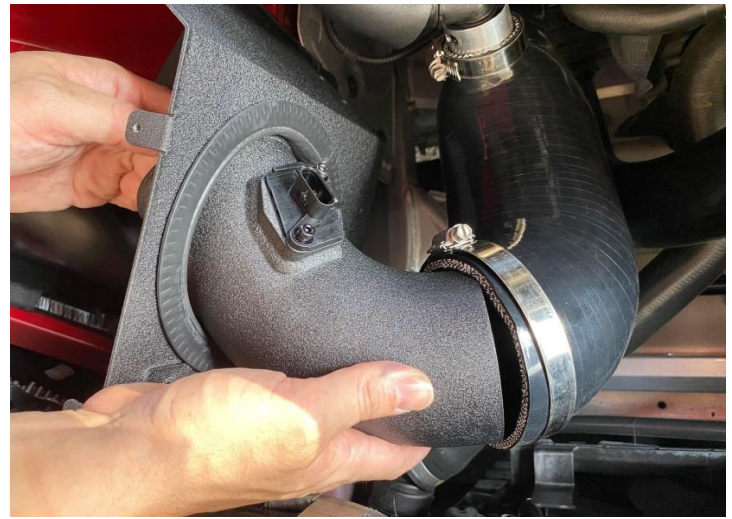


Figure 23: Install the intake pipe.



Figure 21: Remove the mass air flow sensor from the stock air box.



Figure 24: Install the air filter.



Figure 25: Plug in the mass air flow sensor connector.



Figure 27: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.



Figure 26: Install the heat shield cover and secure with bolt.