



Installation Instructions For 2014-2018 Volvo S60/V60 Drive-E

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Heat Shield	1
3	Heat Shield Cover	1
4	89mm Clamp	1
5	Air Filter 89/115mm	1
6	M4 Bolt 10mm Kit	6

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.

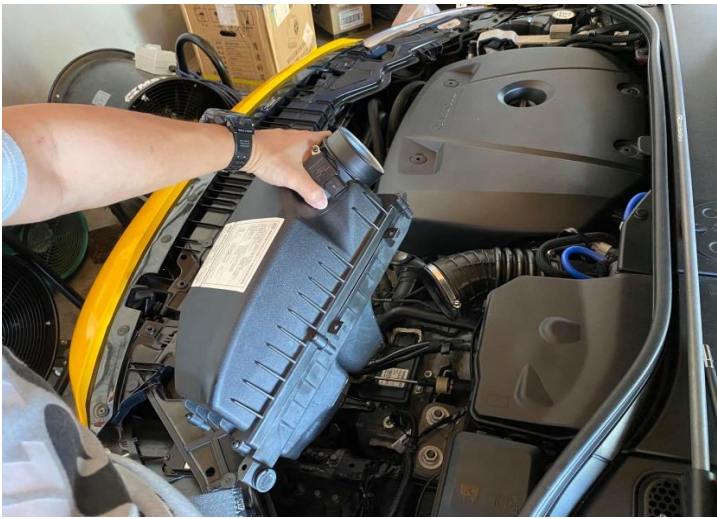


Figure 4: Remove stock air box.



Figure 2: Disconnect the MAF sensor.



Figure 5: Remove the bolts from the MAF sensor.



Figure 3: Loosen the hose clamp.



Figure 6: Remove the mass air flow sensor from the stock air box.

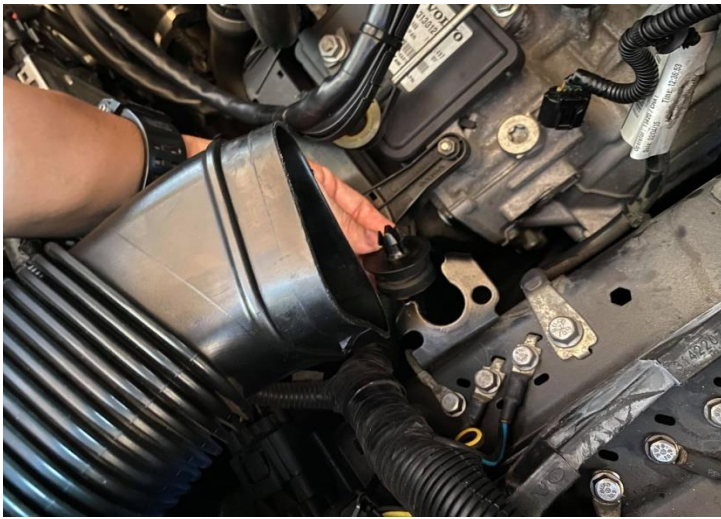


Figure 7: Remove the OEM fixing rubber.



Figure 10: Install the MST heat shield.

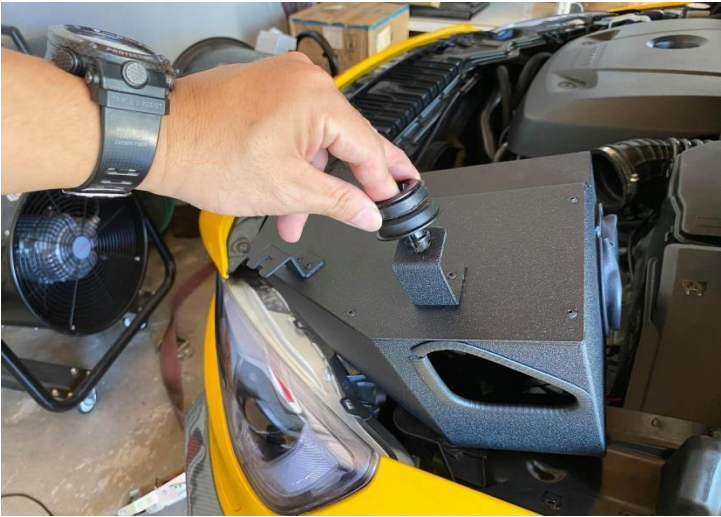


Figure 8: Install the fixing rubber on the heat shield bracket.



Figure 11: Place the MAF wire through the MST heat shield.

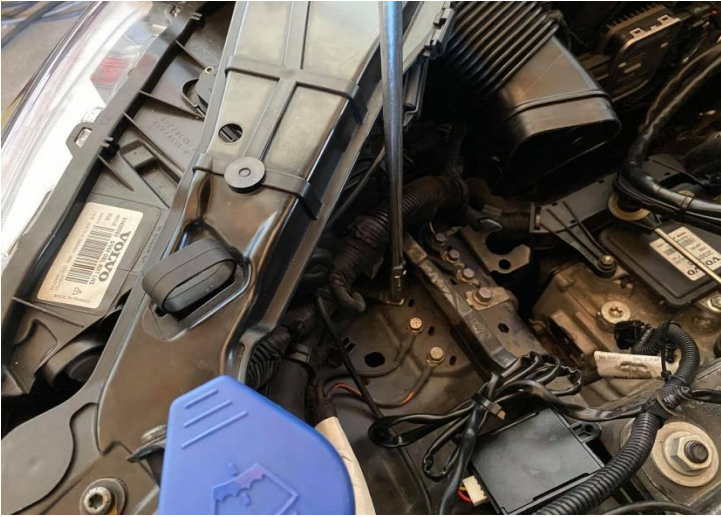


Figure 9: Remove the bolts.



Figure 12: Install the MAF sensor in the MST pipe.



Figure 13: Connect the MAF wire.



Figure 16: Install the heat shield cover.



Figure 14: Connect the inlet pipes and tighten the hose clamp.



Figure 17: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.



Figure 15: Install the MST filter.