



Installation Instructions For 2019-2025 Volvo S60 V60 XC60 V90 XC90 2.0L

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Air Box	1
3	Air Box Cover	1
4	89mm Clamp	1
5	Air Filter 89mm	1
6	M4 Bolt 10mm Kit	6
7	M6 Bolt	2
8	M6 Washer	2
9	Aluminum Mount	2
10	Rubber Plug	3
11	Stick Foam 100mm	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.



Figure 4: Remove stock air box.



Figure 2: Disconnect the MAF sensor.



Figure 5: Remove the bolts and MAF sensor from the air box.

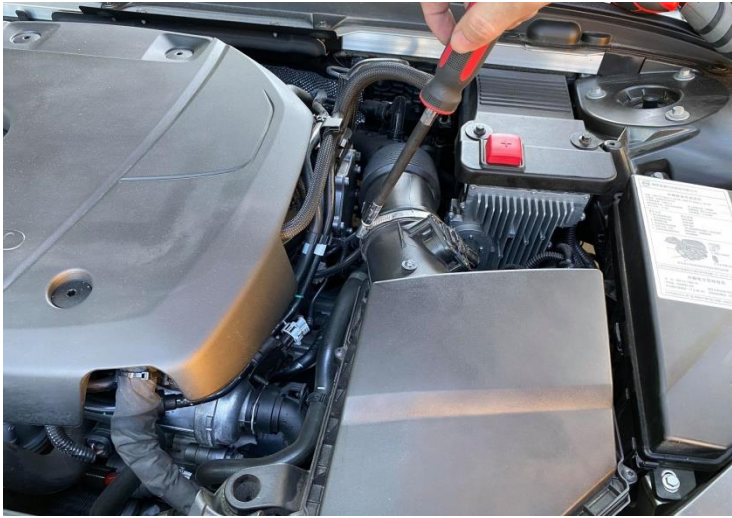


Figure 3: Loosen the hose clamp.



Figure 6: Install the MAF sensor on the MST pipe.



Figure 7: Install the alu-mount on MST heat shield.



Figure 10: Install the MST heat shield.



Figure 8: Install the MST heat shield.



Figure 11: Install the MST tube.



Figure 9: Stick foam on the air box.



Figure 12: Connect the MAF wire.



Figure 13: Install the MST filter.



Figure 14: Install the cover.



Figure 15: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.