



Installation Instructions For 2005-2009 VW Golf Mk5 2.0 Gti

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	2
2	70-63mm Silicone Hose	1
3	76-76mm Silicone Hose	1
4	Rubber Mount	1
5	Heatshield	1
6	Heatshield Cover	1
7	Heatshield Bracket	1
8	Clamp	5
9	M6 Bolt	2
10	M6 Nut	2
11	M6 Washer	3
12	M4 Bolt	7
13	M4 Washer	5
14	M4 Spring Washer	5
15	Air Filter	1

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1. Stock air intake.



Figure 2. Disconnect the mass air sensor.

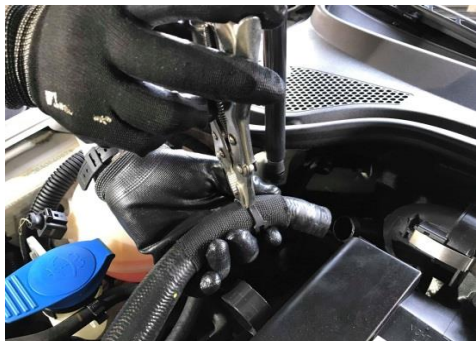


Figure 3. : Loosen the hose clamp.



Figure 4: Open the stock inlet hose spring.



Figure 5. Loosen the hose clamp.



Figure 6. Remove the engine cover.



Figure 7: Remove the stock inlet hose.



Figure 8: Remove stock scoop cover.



Figure 9: Remove stock scoop.



Figure 10: Install bracket on heat shield.



Figure 11: Install bracket on heat shield.



Figure 12: Loosen the screw.



Figure 13: Install the heat shield and secure the breaket with bolt.



Figure 14: Instell MAF sensor.



Figure 15: Install the silicone hose.



Figure 16: Install the intake pipe.



Figure 17: Tighten the hose clamp.



Figure 18: Secure the pipe breaket with bolt.



Figure 19: Install the air intake.



Figure 20: Install the MAF sensor.



Figure 21: Install the heat shield cover.