



Installation Instructions For 2008-2014 VW Golf Mk6 2.0 Gti /Scirocco 2.0/ Audi A3 8P 1.8 2.0Tsi

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Intake Pipe 89mm	1
3	80-80mm Silicone Hose	1
4	80-89mm Silicone Hose	1
5	Heatshield	1
6	Heatshield Cover	1
7	M4 Bolt Kit	4
8	63mm Clamp	2
9	76mm Clamp	3
10	89mm Clmp	1
11	Air Filter	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot
The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure1: Stock air intake



Figure 4: Unclamp the intake duct spring



Figure 2: Remove the stock air scoop tube



Figure 5: Remove the stock air box



Figure 3: Disconnect the MAF sensor



Figure 6 : Remove the air scoop and intake tube.



Figure 7: Remove the MAF from stock air box



Figure 10: Secure the bolt.

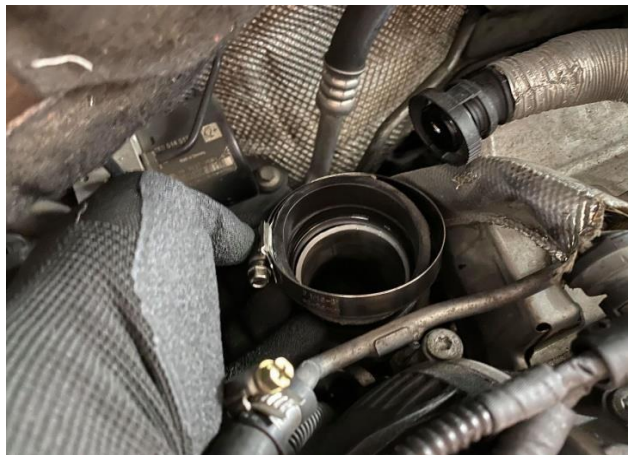


Figure 8: Install the clamp on turbo's hose.



Figure 11: Connect the PCV.



Figure 9: Install the intake pipe.



Figure 12: Install the silicone hose on MAF adapter

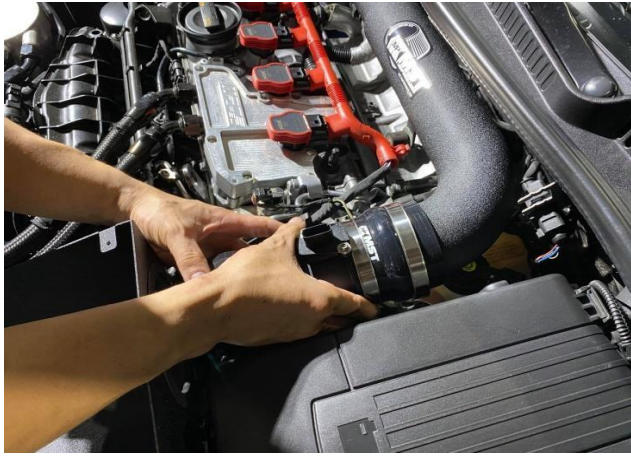


Figure 13: Install the MAF adapter on the MST tube



Figure 16: Secure the bolt.



Figure 14: Install the MST heat shield



Figure 17: Install the silicon hose and tube on the MAF adapter



Figure 15: Secure the bolt.

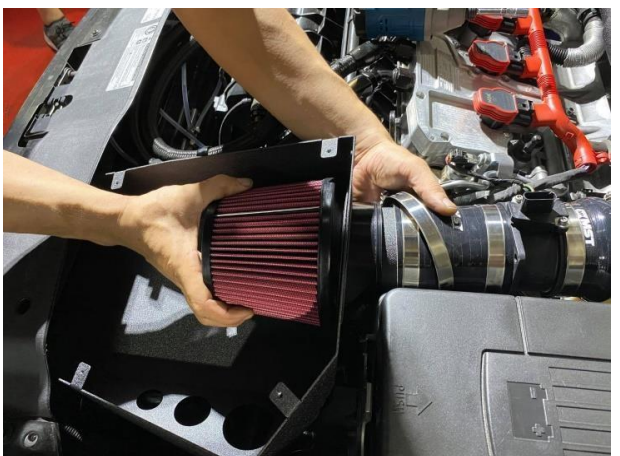


Figure 18: Install the MST air filter



Figure 19: Connect the MAF sensor



Figure 20: Install the heat shield cover