



Installation instructions for

2015+ VW GOLF GTD 2.0L

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Induction Pipe 89mm	1
2	Heat Shield Air Box	1
3	Heat Shield Cover	1
4	M4 Bolts 6mm	5
5	M4 Spring Washers	5
6	M4 Washers	5
7	Hose Clamps	2
8	76-89 Silicone Hose	1
9	Air Filter 89/115mm	1

Upon receiving your MST performance induction kit, please note the following before carrying out the installation:

- 1 Check if you have received the correct MST Performance induction kit for your intended vehicle by confirming the part numbers and descriptions on the outer box
- 2 Check if there are contents missing or defective, please get in touch with our authorized dealer where you have purchased this MST induction kit from or contact us directly
- 3 Before commencing on the installation of this MST induction kit please read the installation instructions provided thoroughly
- 4 The installation of the MST induction kit will require necessary tools as well as some technical skills, a qualified automotive technician is always recommended to carry out the installation properly, if there are any queries during the installation please contact our authorized dealer or local automotive performance tuning shop for support
- 5 MST Performance Auto Parts offers limited lifetime warranty against defects on our air induction components (excludes air filter which is a maintenance item) Warranty claims must be handled through our authorized dealers from where the kit was purchased from

Warning: DO NOT carry out the installation while the engine is hot, as during the installation process may require the removal of radiator coolant lines that contains heated/pressurized coolant that will cause severe burns or injuries, remember to check all fluids after installation

*A qualified automotive technician is always recommended to carry out the installation





Step 1. Open the hood/bonnet to make sure the engine is cool enough to work on



Step 4. Remove the MAF



Step 2. Disconnect the Positive Crankcase Ventilation (PCV) hose from the stock induction pipe



Step 5. Remove the stock air box



Step 3. Unscrew the MAF screw




Step 6. Install the heat shield air box



Step 7. Install the intake tube



Step 10: Secure the heat shield top cover with 5x retaining screws

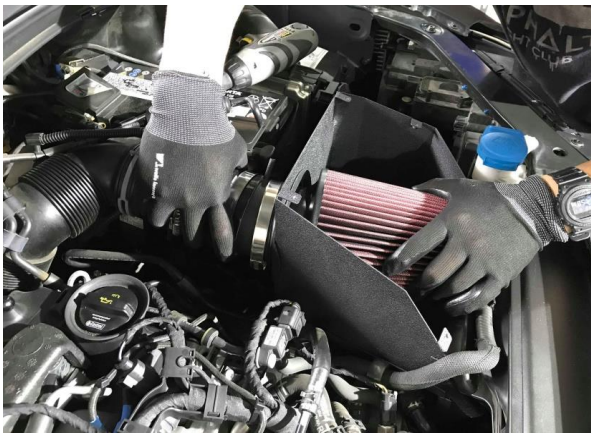

Step 8. Install the air filter



Step 9: Reconnect the PCV hose