



Installation Instructions For 2012-2020 VAG EA211 1.4L/1.2L ENGINE

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	MST Air Box	1
2	Intake Tube 70-76mm	1
3	Air Box Cover	1
4	M4 Bolt 6mm	4
5	M4 Spring Washer	4
6	M4 Washer	4
7	Silicone Hose	1
8	Plast Quick Connect	1
9	3 1/4" Clamps	2
10	3 1/2" Clamps	1
11	Air Filter 76/130mm(ALU)	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or

our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Step 1. Unclamp the stock air intake spring clamp as shown and move away the spring clamp from the original clamped position




Step 4. Insert the plastic hose adaptor into the main intake silicone pipe as shown



Step 2. Unclamp the intake duct spring clamp as shown and move away the spring clamp from the original clamped position



Step 5. Slide hose clamp onto the air filter, insert air filter adaptor pipe into the air filter as shown

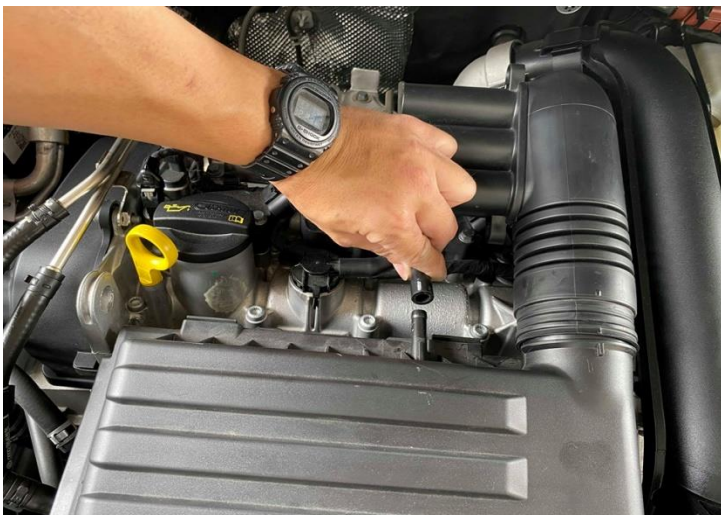

Step 3. Pull off the PCV hose from the stock air box as shown



Step 6. Tighten the air filter hose clamp



Step 7. Slide the adaptor pipe neck plate onto the air filter adaptor, please take note the position of the specially marked mounting tab of the neck plate



Step 10. Insert air filter into MST heat shield air box as shown



Step 8. Slide hose clamp onto the main intake silicone pipe and slide over the air filter adaptor pipe



Step 11. Secure air filter adaptor plate onto heat shield air box utilizing M4 bolts



Step 9. Tighten the hose clamp on the main intake silicone pipe as shown



Step 12. Carefully position the 3 rubber gromets (under the air box) to the vehicle mounting points and install into position



Step 13. Reconnect the PCV hose onto the plastic connector of the MST main intake silicone pipe



Step 14. Make sure the main intake silicone pipe is inserted onto the turbocharger intake and tighten the hose clamp



Step 15. Connect the stock air intake duct to the MST air box and clamp back with stock spring clamps



Step 16. Congratulations! You have just completed the MST Performance Induction system installation, be sure to periodically check all of the induction system mounting screws including hose/piping connections if they come loose at all