



Installation Instructions For 2021+ VW 2.0TSI EA888 EVO4 300PS - 320PS

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Turbo Adapter	1
2	Silicone Hose	1
3	M6 Bolts	2
4	Clamps	3

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product from.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Remove stock inlet tube.

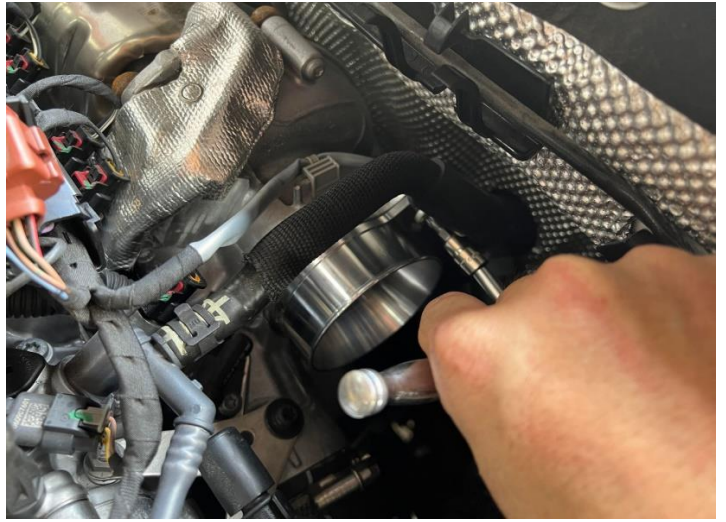


Figure 4: Install MST turbo adapter.



Figure 2: Remove the stock turbo elbow.



Figure 5: Install the MST silicone hose.



Figure 3: Remove the O2 connector securing clip.



Figure 6: Connect turbo recirculation hose.



Figure 6: Tight the clamps.



Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.