



Installation Instructions For

2012-2025 VAG GOLF GTI MK7/8 EA888

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Tube	1
2	Air Box	1
3	Air Box Cover	1
4	Front Air Scoop	1
4	M5 Bolt	2
5	M5 Spring Washer	2
6	M5 Washer	2
7	3 3/4 Clamp	2
8	4mm Silicone Hose L40mm(For Golf Mk8)	1
9	Turbo Inlet Elbow(With O-Ring)	1
10	M4 Bolt	4
11	89mm 115L Open Top Filter	1

Please Check the Contents of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.

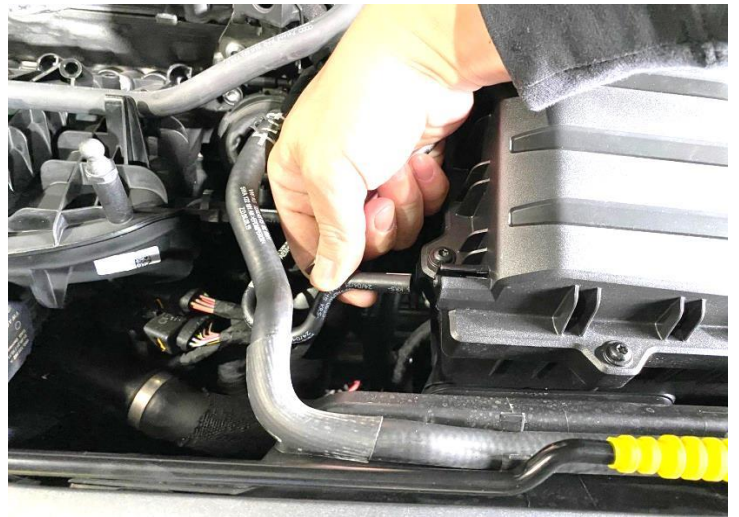


Figure 4: Remove the stock PCV hose.



Figure 2: Remove the engine cover.

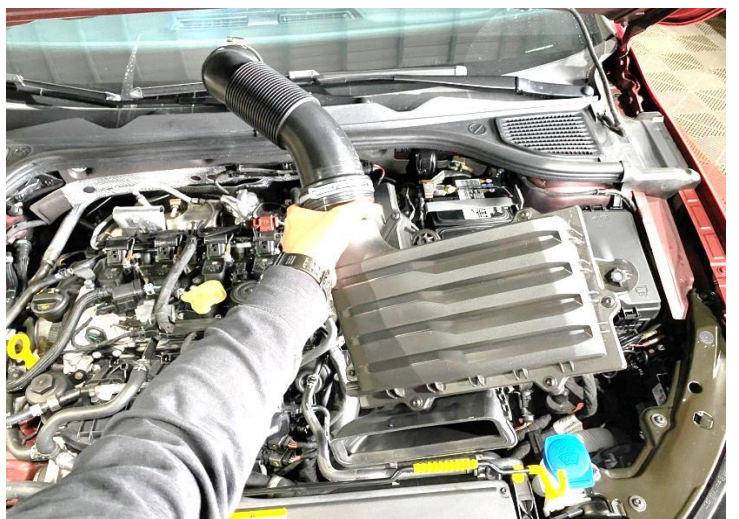


Figure 5: Remove the stock inlet hose, air box and air scoop.

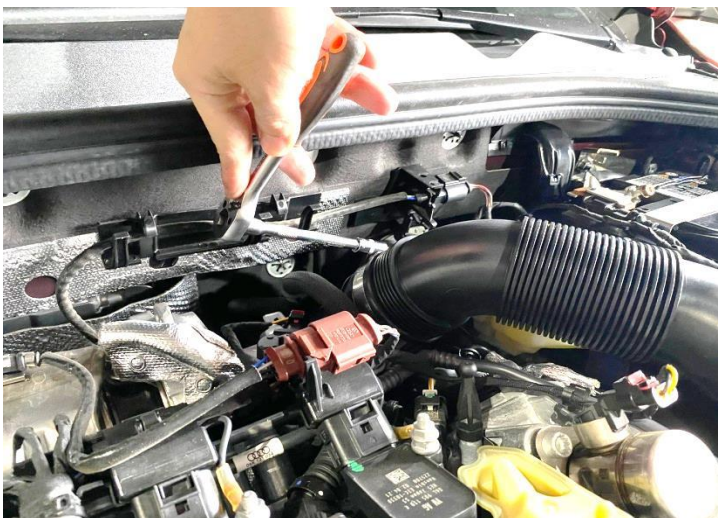


Figure 3: Loosen the clamp.

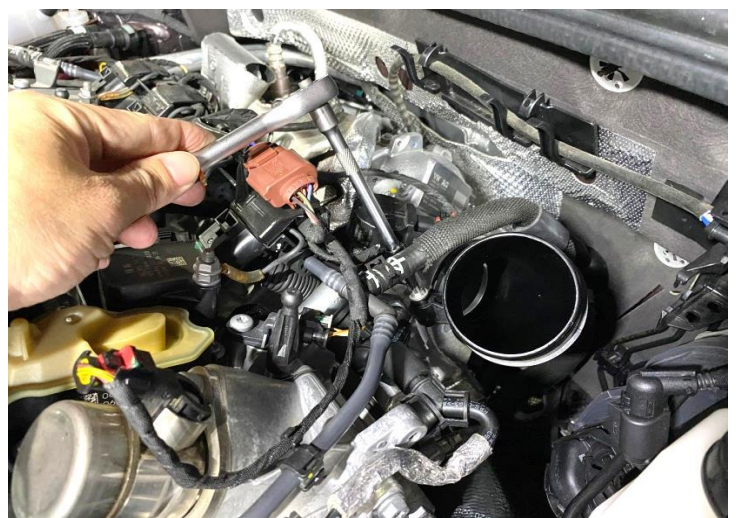


Figure 6: Loosen the bolt on stock inlet elbow.

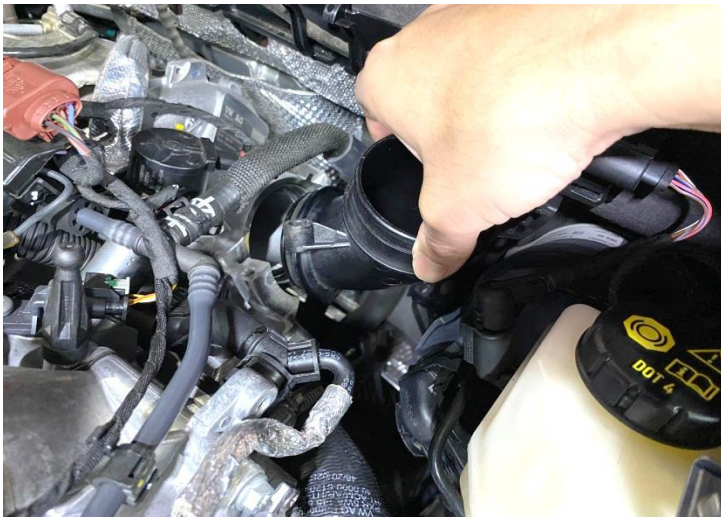


Figure 7: Remove the stock inlet elbow.



Figure 10: Install the MST air box.



Figure 8: Install the MST inlet elbow and tight the bolt.



Figure 11: Install the MST silicone hose.

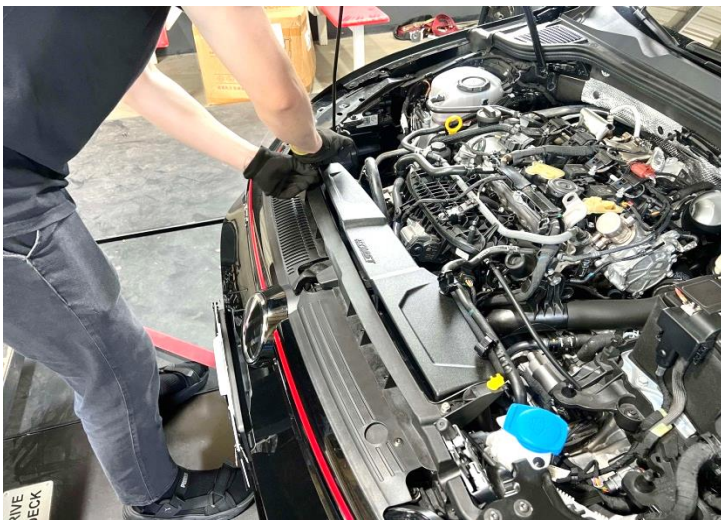


Figure 9: Install the MST front air scoop and tight the M5 bolt *2

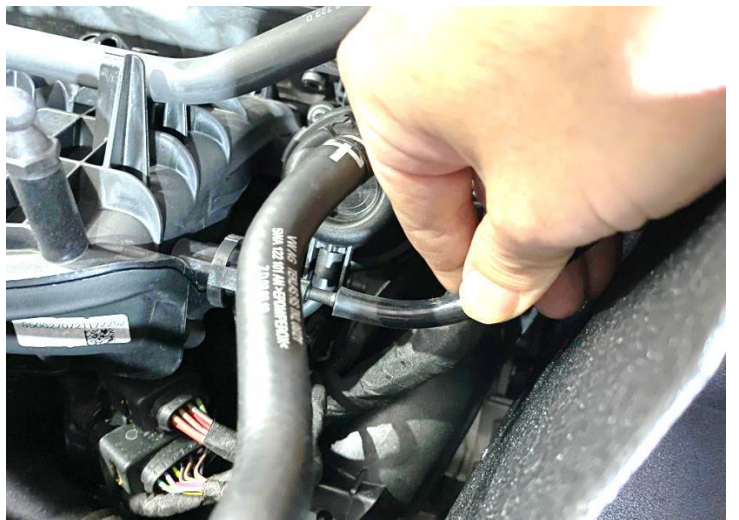


Figure 12: Install the MST 4mm hose on stock intake manifold. (For golf mk8)



Figure 13: Install the MST tube and connect the 4mm hose.



Figure 16: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

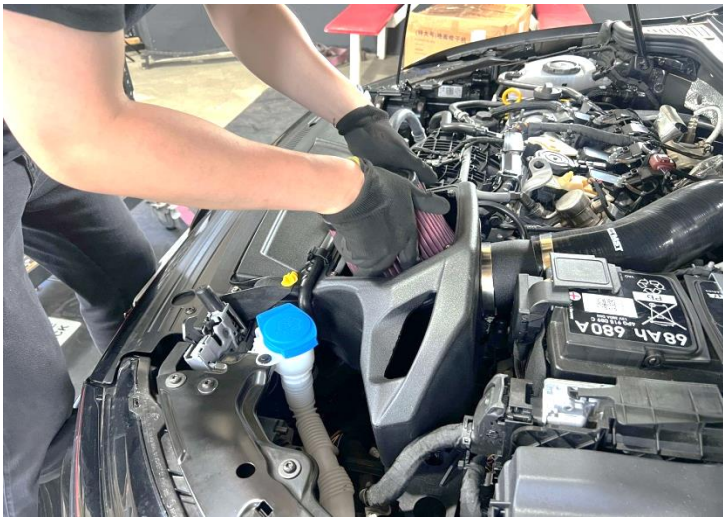


Figure 14: Install the MST air filter.

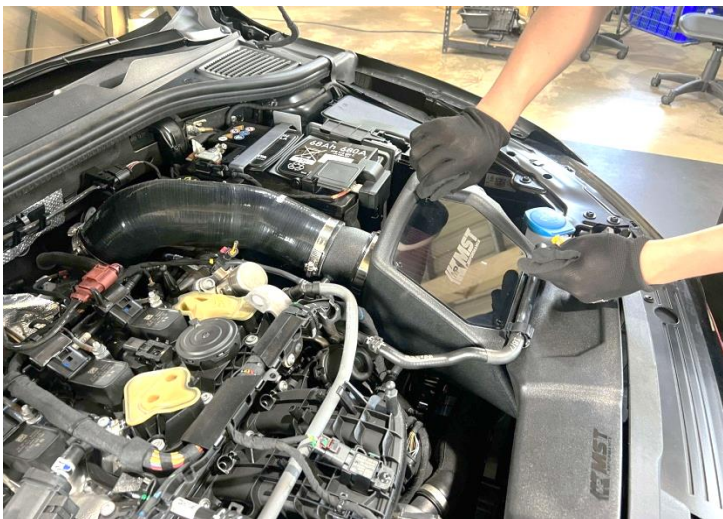


Figure 15: Install the heat shield cover and tight the M4 bolts.