



Installation Instructions For

2018+ VW POLO GTI 2.0 MQB

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Tube	1
2	Heat Shield	1
3	Heat Shield cover	1
4	M4 Bolt 8mm	5
5	M4 Spring Washer	5
6	M4 Washer	5
7	Silicone Inlet Hose	1
8	70-89mm Silicone	1
9	4 1/4 Clamp	1
10	3 1/4 Clamps	3
11	Air Filter 145/89mm	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot. The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Stock air box.



Figure 4: Remove the stock air box.



Figure 2: Disconnect the mass air sensor.



Figure 5: Remove the MAF.



Figure 3: Loosen the clamp.

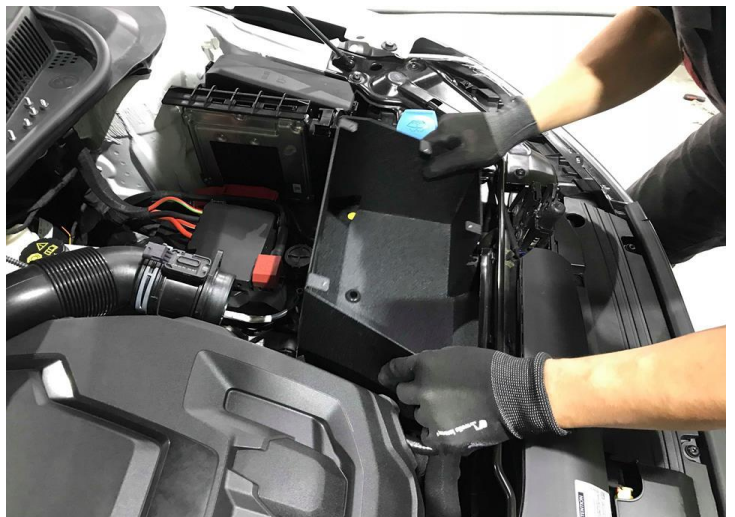


Figure 6: Set the heat shield.



Figure 7: Install the silicone hose.



Figure 9: Tighten the hose clamp.



Figure 8: Install the intake tube.



Figure 11: Install the heat shield cover.



Figure 9: Install the air filter.



Figure 12: Secure with bolt.



Figure 13: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.