



Installation Instructions For 2019+ BMW 320i 330i (G20)

KIT CONTENTS

NO.	DESCRIPTION	QTY
1	Intake Pipe	1
2	Heat Shield	1
3	Heat Shield Cover	1
4	M4 Bolt 8mm	6
5	M4 Spring Washer	4
6	M4 Washer	4
7	M6 Bolt	1
8	M6 Nut	1
9	M6 Washer	2
10	M8 Bolt	1
11	M8 Nut	1
12	M8 Washer	2
13	Silicone turbo inlet pipe	1
14	Clamps	2
15	Air Filter 89/115mm	1

Please Check the Contacts of this box immediately.

Report any defective or missing parts to us or our dealer that you purchased this product form.

Before installing any parts of this system, please read the instructions thoroughly. If you have any questions regarding installation please contact the our dealer or local modified car factory.

Installing does require some mechanical skills. A qualified mechanic is always recommended.

※Do not attempt to install the intake system while the engine is hot.

The installation may require removal of radiator fluid line that may be hot.

MST Performance Auto Parts offers a limited lifetime warranty to the original purchaser against defects in materials and workmanship. Warranty claims must be handled through the dealer from which the item was purchased.

*All installation of parts must be performed by a trained professional.





Figure 1: Loosen the hose clamp.
鬆開管束



Figure 4: Remove the PCV.
移開PCV管



Figure 2: Disconnect the mass air sensor.
斷開空氣流量感知連接器

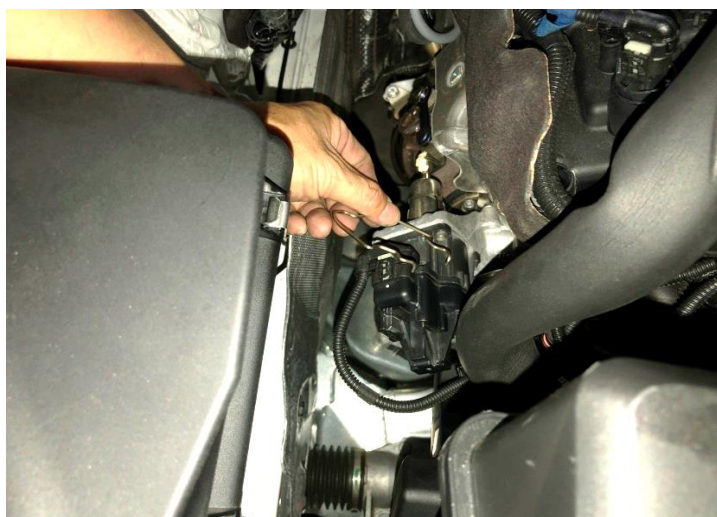


Figure 5: Remove the stock turbo inlet pipe spring.
拆下原廠渦輪進氣管彈簧



Figure 3: Remove the stock air box.
移除原廠集氣箱

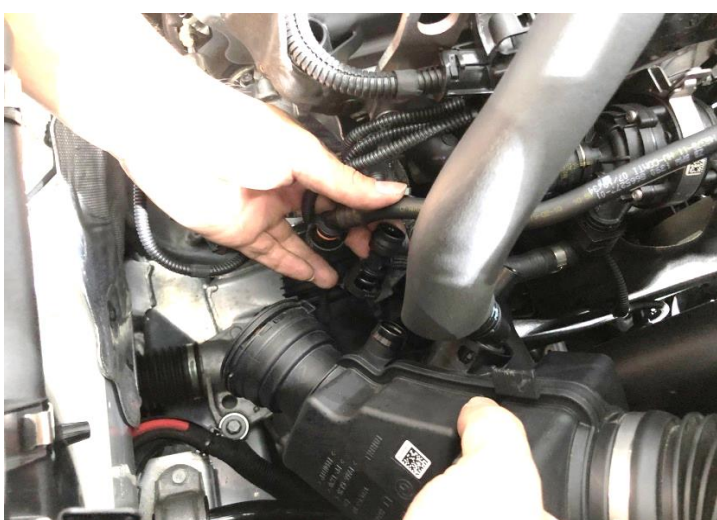


Figure 6: Remove the PCV.
移開PCV管



Figure 7: Remove the stock turbo inlet pipe.
移除原廠渦輪進氣管



Figure 10: Install the O-Ring.
把原廠氣密環裝進MST渦輪進氣管



Figure 8: Remove the PCV.
移開PCV管



Figure 11: Install the spring.
把原廠渦輪進氣管彈簧裝上MST渦輪進氣管



Figure 9: Remove the O-Ring.
拆下原廠氣密環

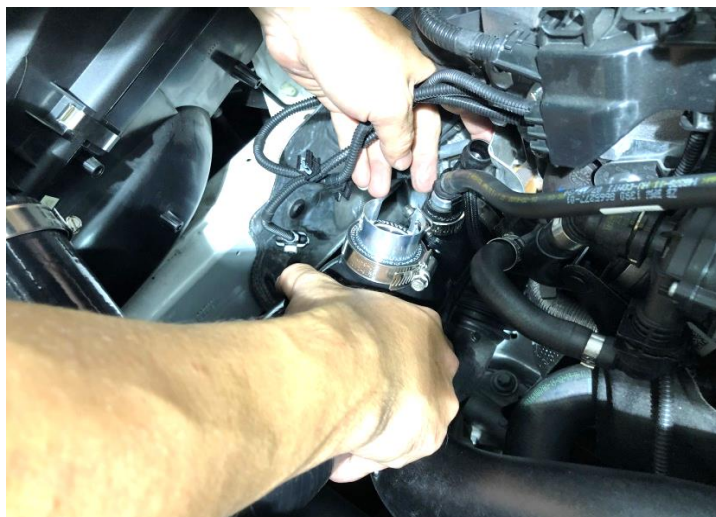


Figure 12: Install the silicone turbo inlet pipe.
裝上矽膠渦輪進氣管



Figure 13: Install the PCV.
插上PCV管

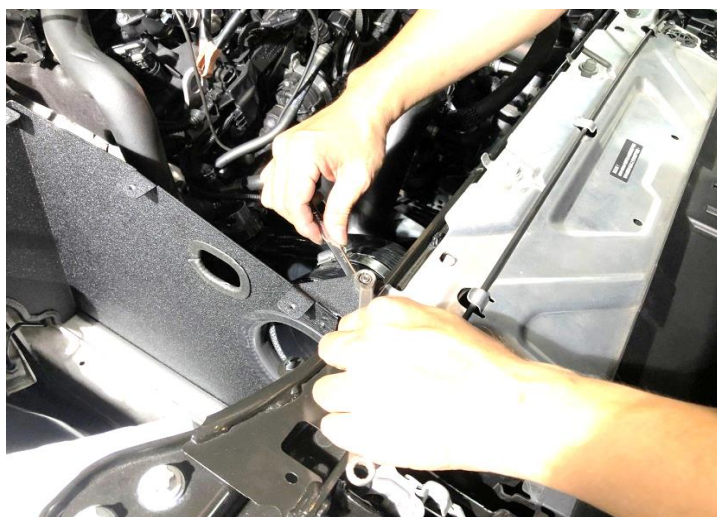


Figure 16: Secure the heat shield breaket with bolt.
用對鎖螺絲固定隔熱罩支架

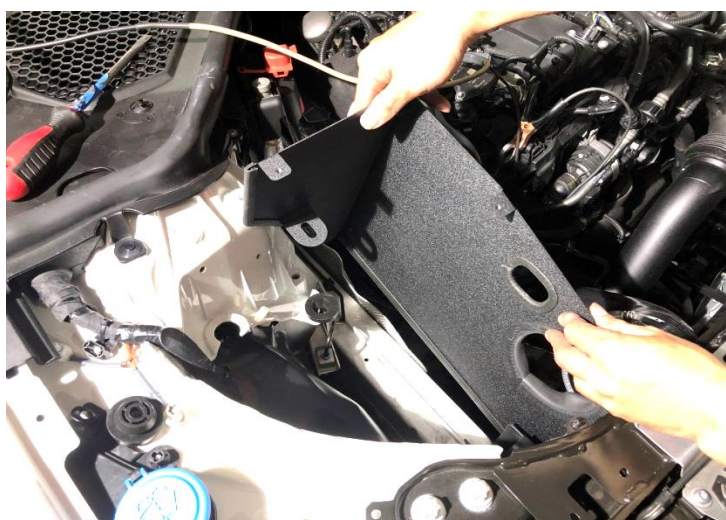


Figure 14: Install the heat shield.
裝上隔熱罩



Figure 17: Remove the mass air flow sensor from the
stock air box.
從原廠集氣箱移除空氣流量感知器



Figure 15: Secure the heat shield breaket with bolt.
用對鎖螺絲固定隔熱罩支架



Figure 18: Install mass air sensor into the intake pipe.
將空氣流量感知器安裝在MST進氣管上

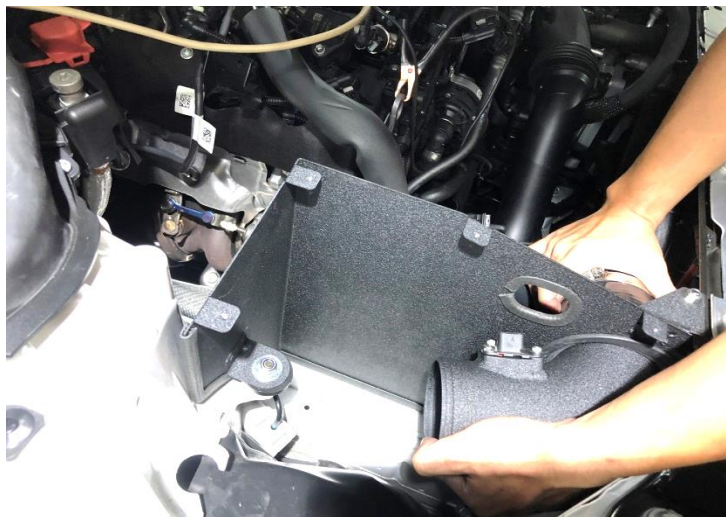


Figure 19: Install the intake pipe.
安裝進氣管放進隔熱罩



Figure 22: Install the heat shield cover and secure with bolt
蓋上隔熱上蓋並鎖上螺絲

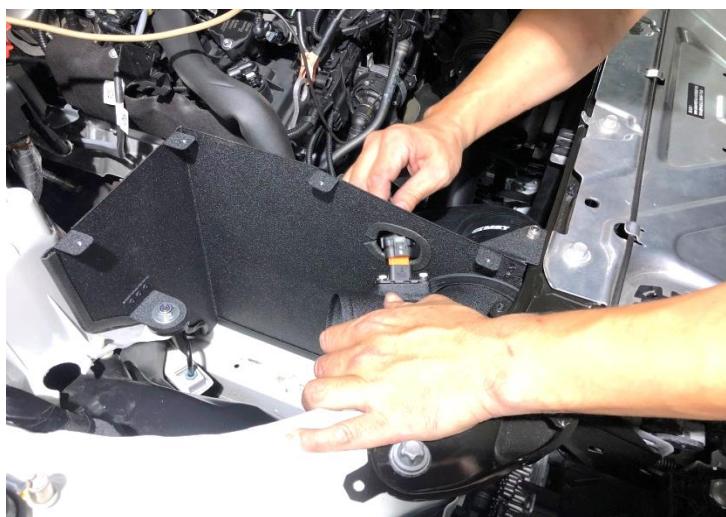


Figure 20: Plug in the mass air flow sensor connector.
連接空氣流量感知器



Figure 23: Congratulations! You have just completed the installation of this intake system. Periodically, check the alignment of the intake, normal wear and tear can cause nuts and bolts to come loose.

恭喜！您已完成進氣系統的安裝。
請定期檢查進氣系統的使用情況，正常的磨損會導致螺帽和螺絲鬆動。



Figure 21: Install the air filter.
安裝空氣濾芯