

SuperCircuit





Thank you for the purchase. Please refer to the below pictures as a guide to install the SUPERCIRCUIT Front Under Brace to the Proton X70.

Step 1: Remove the original under carriage cover carefully and keep all the bolts and clips safely for reinstallation purpose in Step 3.



Step 2: Install the SUPERCIRCUIT Front Under Brace with the original bolts as shown in the pictures below.

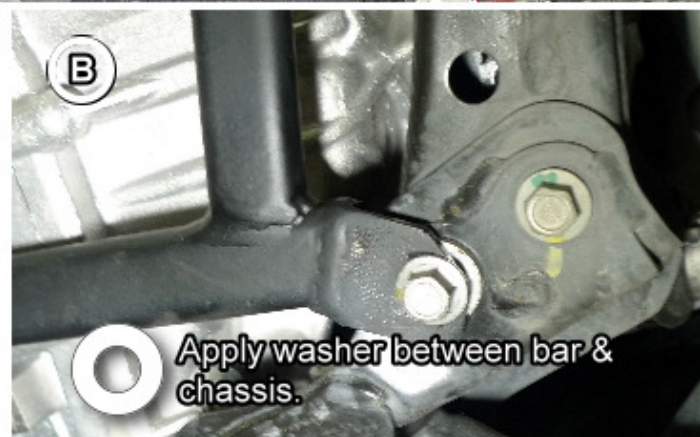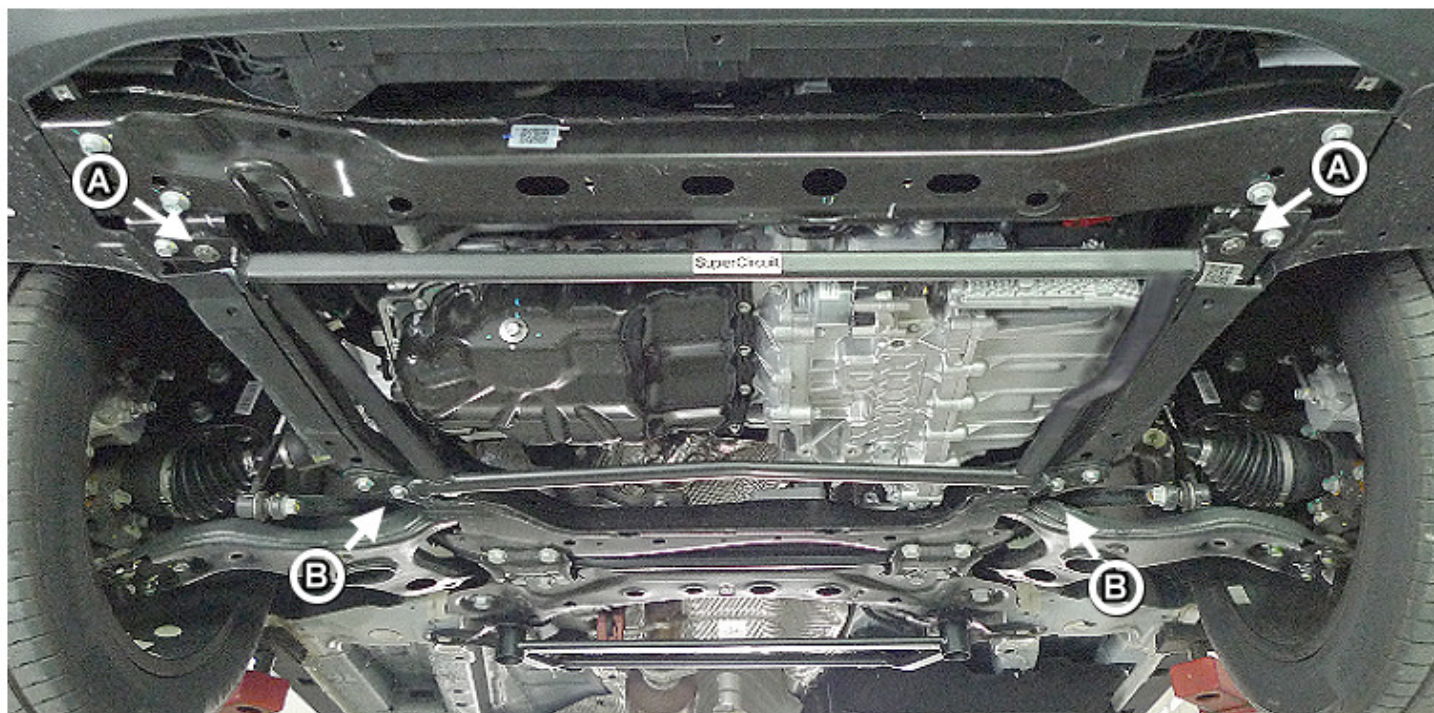

Step 3: Reinstall the original under carriage cover with the same bolts and clips in Step 1.



Should you need any further assistance during the installation, please contact SUPERCIRCUIT BARS, Tel: +6 03 5632 2855 or send us a message on Facebook:

<https://www.facebook.com/SuperCircuitBars>