

SuperCircuit



Thank you for the purchase. Please utilize the special bolts and nuts provided during the installation of the SUPERCIRCUIT Rear Lower Brace to the Suzuki Swift 1.2/ 1.4 (ZC72S/ ZC82S) as shown in the pictures below.




Practise garage safety and to be installed by trained technician/ professional only.

STEP 1: Mark the locations of installation as shown in the picture below.



STEP 2: Insert the provided M6 bolts + washers to locations **A**. Tighten untill snug.

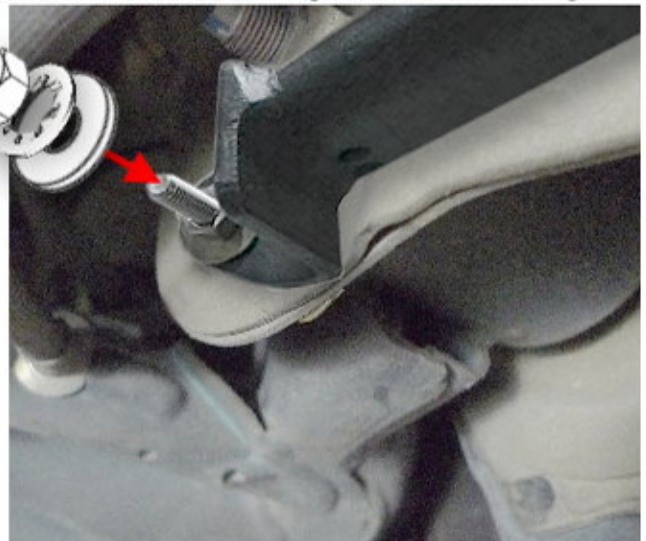

SuperCircuit

STEP 2: Insert the 'special bolts' provided to locations **B** as illustrated in the pictures below.



Tighten with the washers and nuts provided.



Should you need any further assistance during the installation, please contact SUPERCIRCUIT BARS, Tel: +6 03 5632 2855 or send us a message on Facebook:

<https://www.facebook.com/SuperCircuitBars>