

SuperCircuit

Thank you for the purchase. Below are the installation guides for each of the SUPERCIRCUIT Chassis Strengthening Bars & Braces developed for the Proton X50.




<FRONT STRUT BAR>

Remove the wipers and the plastic covers below the front windscreen first, then utilize the original bolts to install the *Front Strut Bar*.




<FRONT UNDER BAR>

Please utilize the original bolts to install the *Front Under Bar* as shown in the picture below.

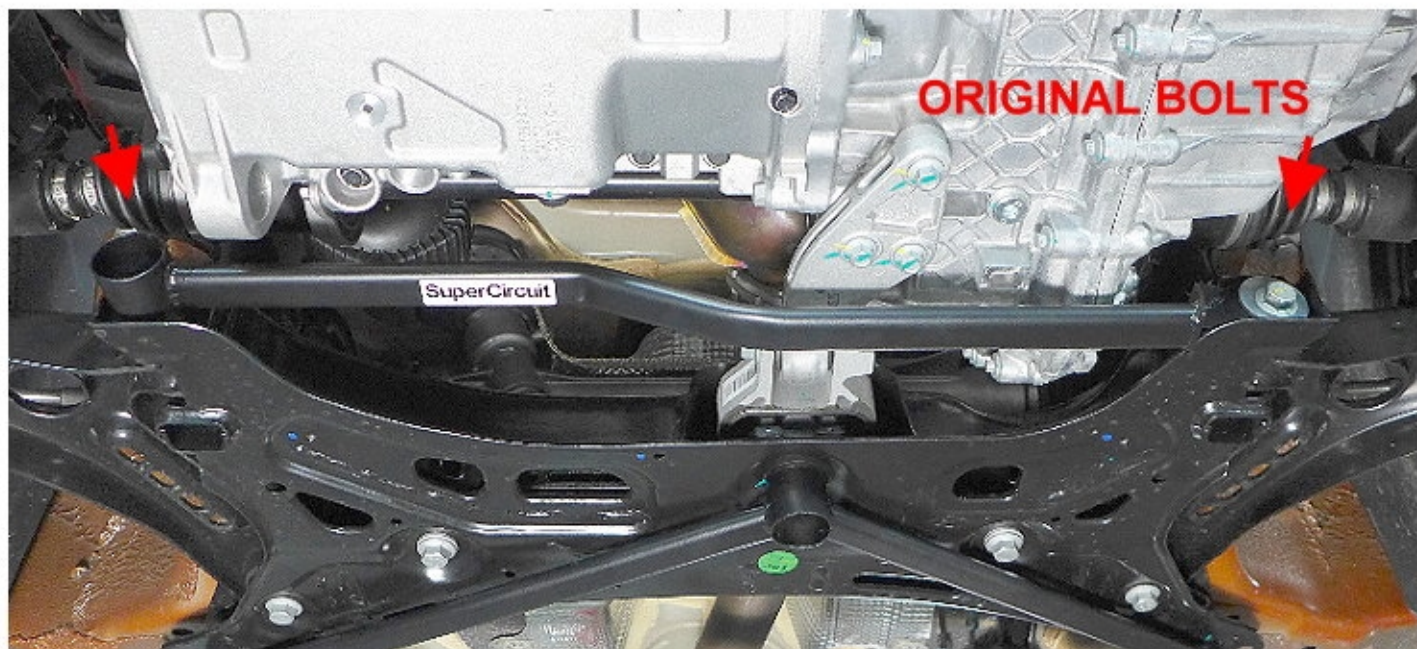


<FRONT LOWER BRACE>

Please utilize the original bolts to install the *Front Lower Brace* as shown in the picture below.

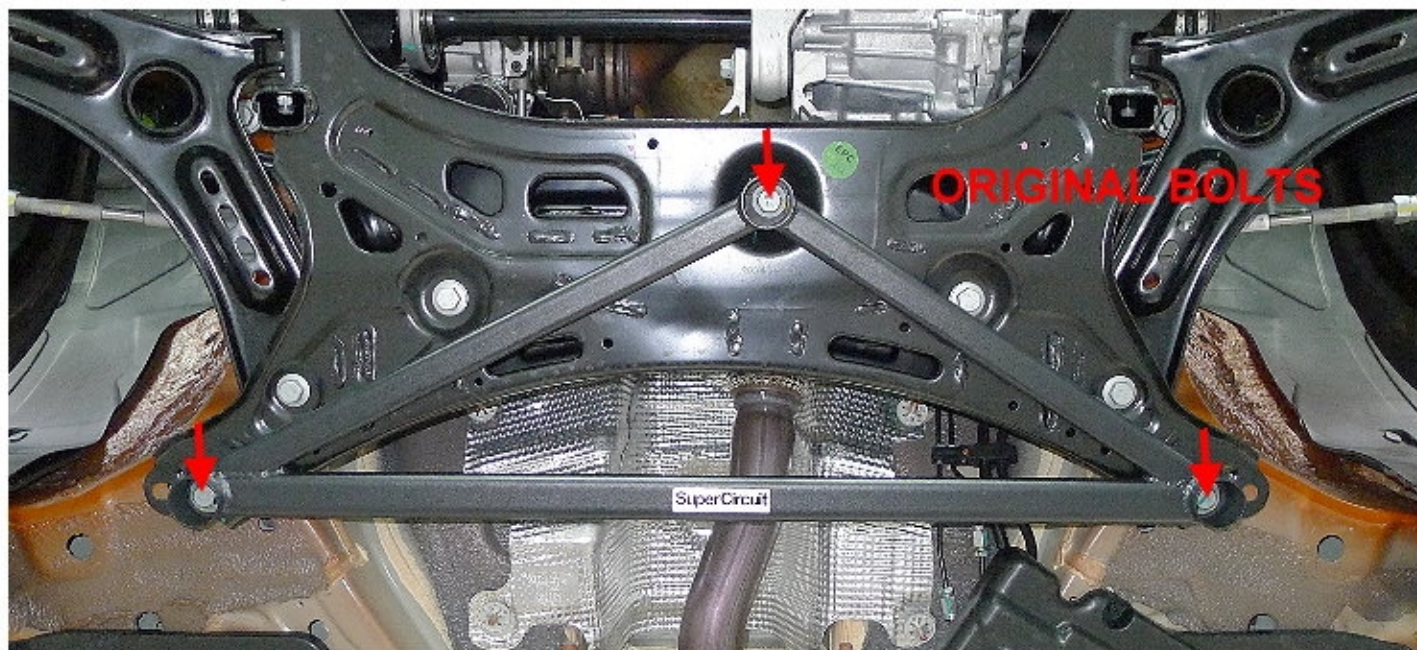

<MID CHASSIS BRACE>

The SUPERCIRCUIT *Mid Chassis Brace* is designed to replace the two original mid chassis bars. Please remove the original mid chassis bars first and utilize the original bolts to reinstall the *Mid Chassis Brace* as shown in the picture below.

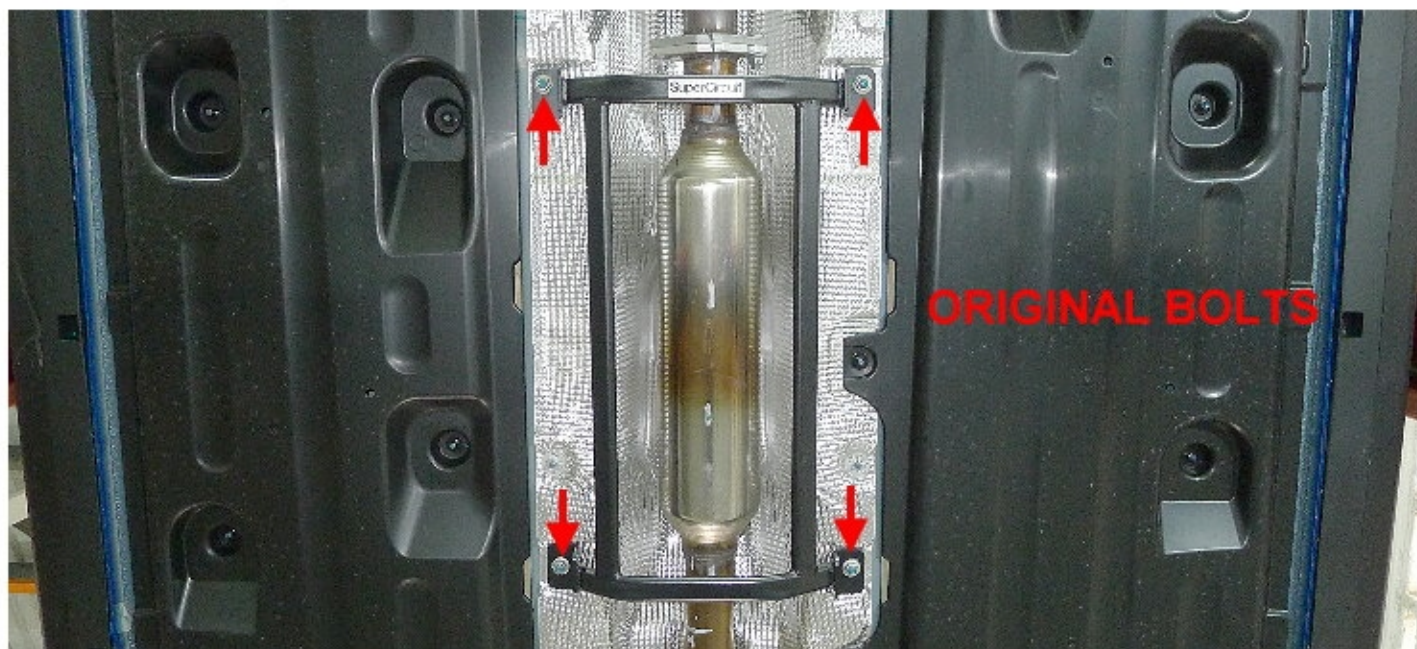

<REAR LOWER BAR>


First, fully lift up the car on the hoist, *loosen* the original bolts as shown in the picture below. Insert the *Rear Lower Bar* brackets under the bolts then tighten with torque wrench.

! The Rear Lower Bar and rear torsion beam should leave a gap and not touching each other when the car is on the floor.



<REAR ANTI-ROLL BAR>

Please utilize the provided bolts and nuts to install the Rear Anti-roll Bar as shown in the picture below.

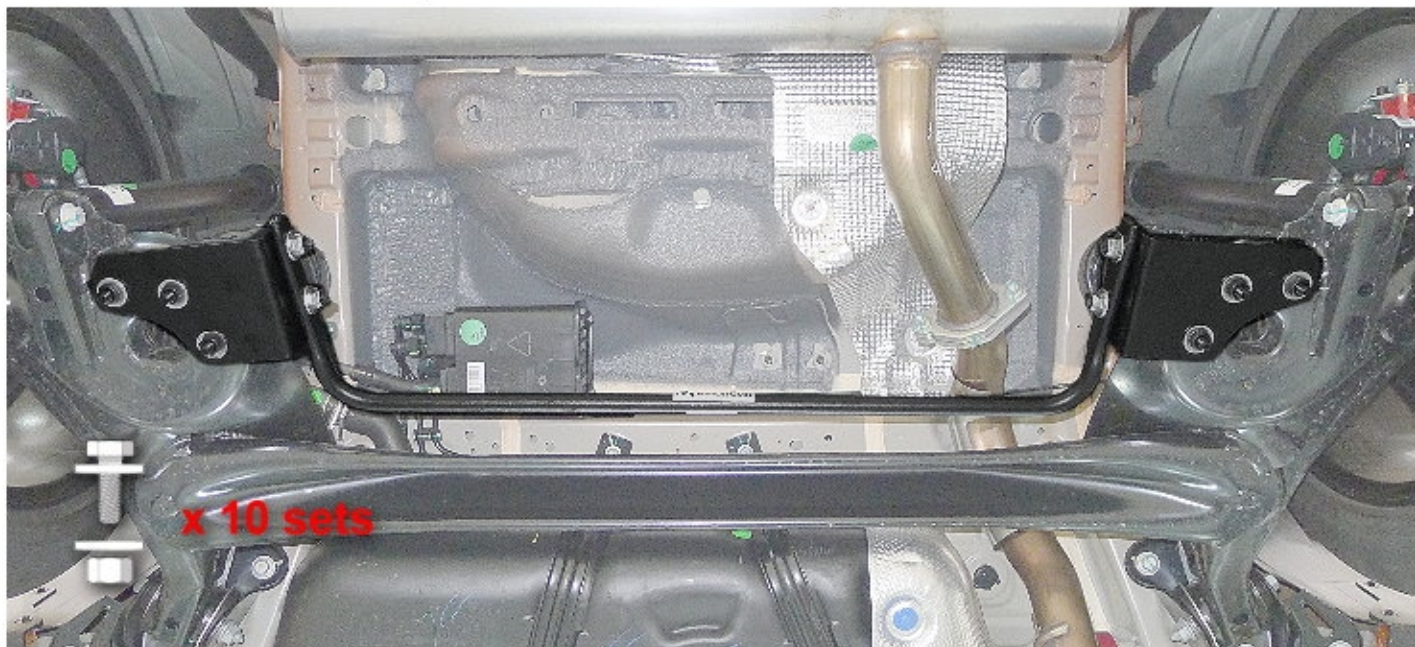

Should you need any further assistance during the installation, please contact SUPERCIRCUIT BARS, Tel: +6 03 5632 2855 or send us a message on Facebook:

<https://www.facebook.com/SuperCircuitBars>