



SuperCircuit

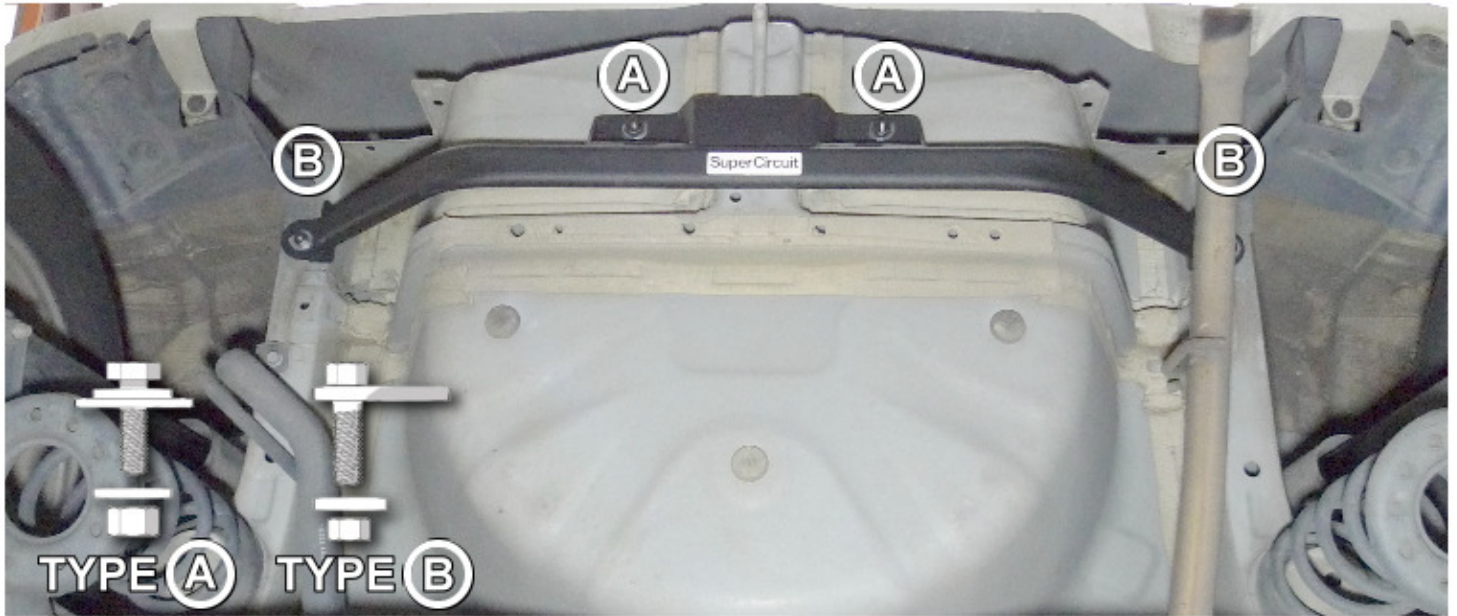


Thank you for the purchase. Please utilize the provided bolts & nuts to install the SUPERCIRCUIT Rear Under Brace to the Perodua Axia as shown in the picture above.

For TYPE (A)


STEP I: Remove the rubber plugs from the spare wheel compartment.

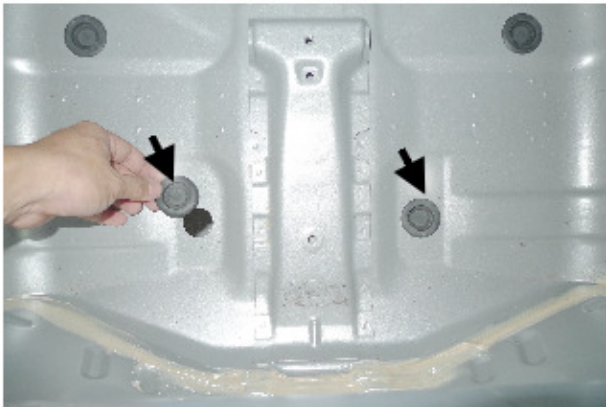

STEP II: Insert the bolts & larger washer from inside the spare wheel compartment through the holes after removing the rubber plugs in STEP I.

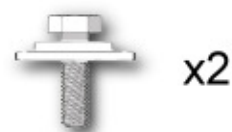


STEP III: Tighten the SUPERCIRCUIT Rear Under Brace with the nuts and smaller washers provided, from the undercarriage direction.

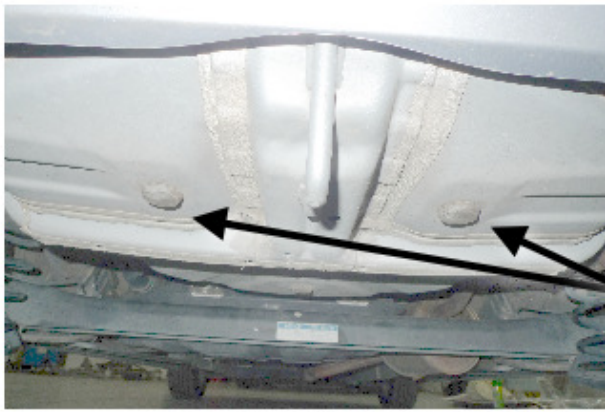


For TYPE (B)

STEP I: Insert the special shape TYPE B bolts into the chassis of the Perodua Axia as indicated (B) in the picture above with the threat pointed downward.

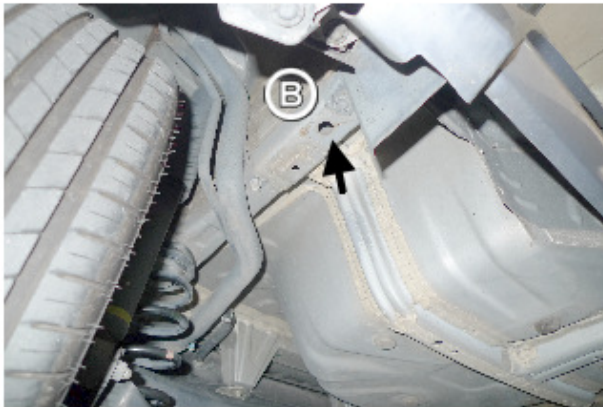

STEP II: Tighten the SUPERCIRCUIT Rear Under Brace with bolts & washer provided from the undercarriage direction.

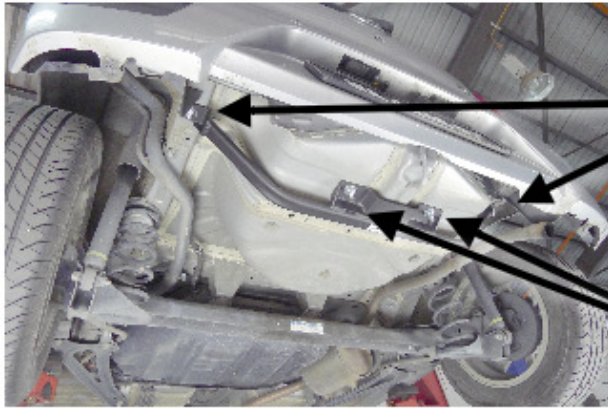

 x2

 x2

Should you need any further assistance during the installation, please contact SUPERCIRCUIT BARS, Tel: +6 03 5632 2855 or send us a message on Facebook:

<https://www.facebook.com/SuperCircuitBars>