


Keystone Jack Punch Installing Instruction

TLPD02

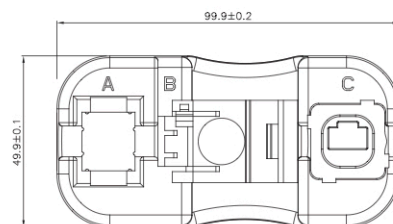

Position for keystone jack

- A: For 180° keystone jack
- B: For 90° keystone jack
- C: For Australia type keystone jack



Put the jack into the termination holder following the correct position.
Use the impact tool to punch down the wires into the connector.

