



ASSEMBLY INSTRUCTION


AURORA Nordic Wood Accent Cabinet Side Table



JCB BOLT SET 6



ALLEN KEY 1

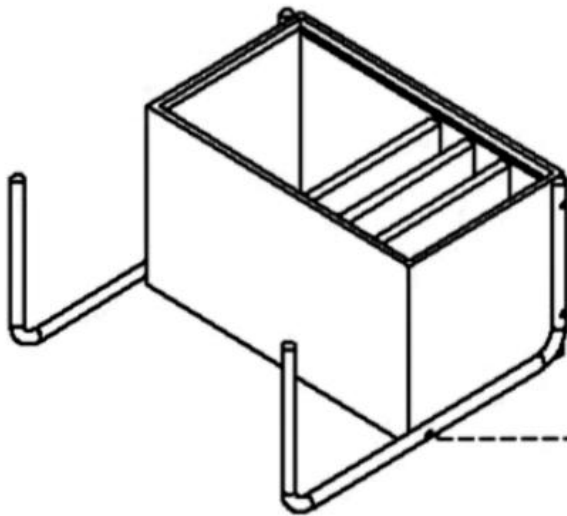

**Part One : To install the screws here.
Do not lock them yet.**

**Part Two : To install the screws here.
Do not lock them yet.**

**Part Three : To install the screws here.
Make sure the frame is aligned to the holes right
before proceed to tighten all the screws with the
provided allen key**

(KINDLY DO NOT USE POWER TOOLS TO PROTECT THE CABINET)