



Assembly Manual

REEDA Corner Shelf Rattan

17 units

16 Bolts + 1 Extra Bolt
(for 25 pre-drilled hole frames)



LAG BOLT 17

17 Units

16 Bolts + 1 Extra Bolt



DOWEL JOINT 17




1. Start by assembling the frame by connecting it together using the screws / nut less bolts into the pre-drilled holes. (16 holes)

2. Once the frame is assembled, attach the 4 panels or shelves to the frame. By using the woods dowel joints and screws and inserting them into pre-drilled slots.


3. Ensure all screws or bolts are tightened securely.

4. Finally, double-check that everything is assembled correctly and securely before placing any items on the shelf.

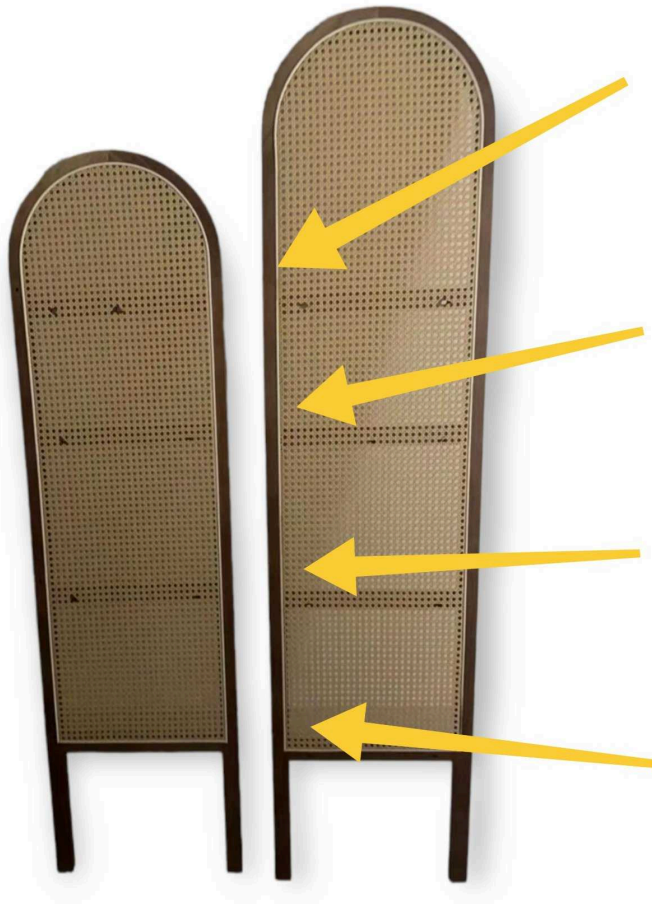

Attached the wood frames with the lag bolts / screw inserted into a pre-drilled hole



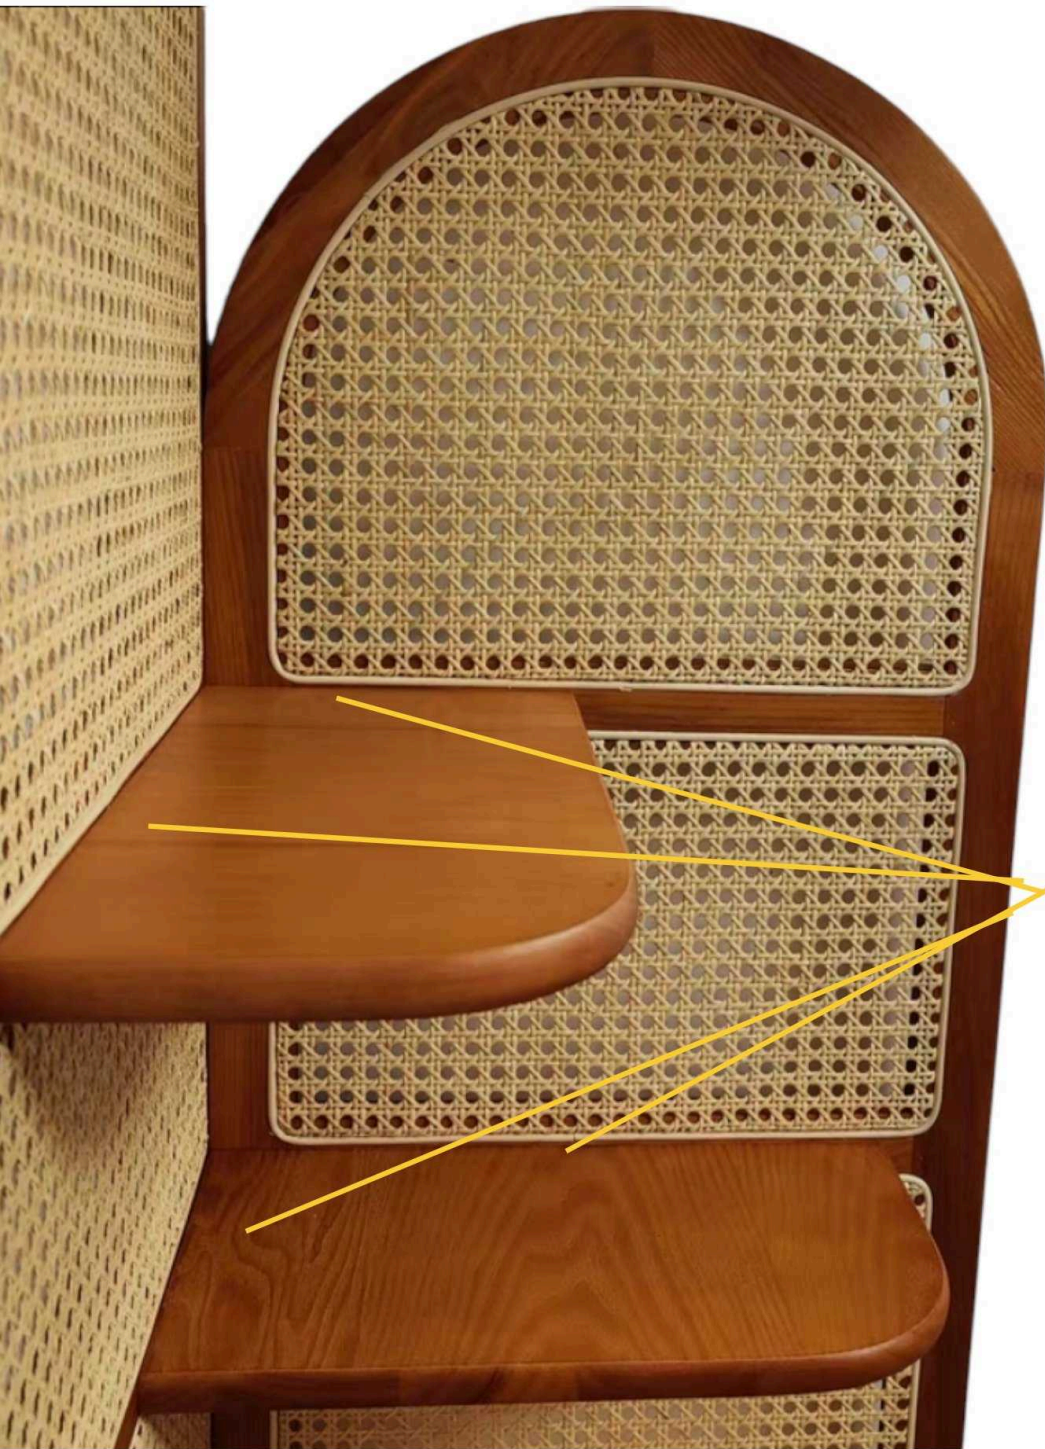

Once the frame is assembled, attach the 4 panels or shelves to the frame. By using the woods dowel joints and screws and inserting them into pre-drilled slots.

